

正面

①智能变色刷毛
(Intelligent color bristles)

②刷头
(Brush head)

③开关
(Switch)

④电池盖
(Battery cover)

⑤换刷头
(Replace brush head)

⑥换电池
(Replace battery)

顺时针
刷头安装
Clockwise install

逆时针
刷头取下
Counterclockwise
take down

按住电池盖一侧向外推
Press the side of the battery cover to push out

欢迎您使用托马斯儿童智能牙刷！
这是一款声波震动的牙刷，通过蓝牙连接一个有趣的刷牙移动设备应用程序配合使用，有助于吸引儿童的注意力,同时养成按时刷牙的好习惯。
在使用本牙刷之前，请仔细阅读本用户手册，并妥善保管以供日后查阅。

重要注意事项

1.定期检查电池盖是否扣紧。已损坏或发生故障的设备不能继续使用。不要擅自改动和维修本产品，这些行为可能会导致火灾、触电或造成其他伤害。
2.如果较长时间不使用本产品，请将电池拆卸保存。
3.清洗和维修工作请不要交给儿童。
4.本产品只能用于本手册说明用途。不要使用厂商没有推荐使用的零配件。
5.每三个月更换一次牙刷刷头，如果因为损坏，牙刷刷头出现松动，请及时更换。

警告

1.不要把牙刷长期浸泡在水里或其他液体中。
2.更换电池时请注意防水，以免损坏牙刷。
3.本牙刷是儿童护理设备，不要给多名儿童使用。

更换刷头

1.本牙刷采用智能分层变色刷毛，超过使用时长，刷毛顶部颜色会有明显变化，请及时更换。
2.每3个月更换一次Thomas声波震动刷头以获得最佳效果。

牙刷使用说明

扫描下方二维码或者从App Store或Google Play下载“i刷牙”应用程序。

温馨提示

1.牙刷在出厂前已经清洁，但为了确保安全，请在使用前再清洁一遍。
2.本产品包含电池和/或可回收电子垃圾。为了保护环境，请不要将本产品与生活垃圾一起处理，请送到国内提供的电子垃圾回收点进行回收利用。
3.您的设备必须支持蓝牙4.0，否则无法连接App；建议系统版本：Android 4.0及以上，IOS 7.0及以上。
4.软件功能可能由于软件升级而有所改动，最新功能请到官网www.titakid.com查阅。

反面

保修说明（Warranty Description）：
1、本产品保修期为一年，在保修期内，凡属于正常使用情况下由于产品本身质量问题引起的故障，本公司将负责给予免费维修。
This product is guaranteed to keep in good repair for one year. During this period, any belongs to under normal usage circumstance cause because of the product quality' s problem of breakdown, our company will be responsible for giving free maintain.
2、非本公司产品质量原因引起的维修，如使用不当、保管不妥、擅自拆机等原因造成的损失，公司维修需要另外收取费用。
The damaged caused by other reasons such as don' t follow the request of the Manual or persevere inappropriate, the maintain needs extra charge
3、保修卡及购机发票一经涂改，保修即时失效
Once the Warranty Card or purchasing invoice has been changed, the warranty immediately expired
4、保存保修卡及购机发票作为产品的保修凭证，请用户妥善保管，遗失不补
This card and the purchasing invoice are both considered as Protection to fix warrantees, so please reserve them carefully. Lose don' t repair.
5、服务热线（Customer service hotline）：400-689-9282
6、本服务承诺最终解释权归深圳嘀嗒互动所有
The service commitment to the final interpretation of Shenzhen Tita Interactive Technology Co., Ltd. all

Welcome to Thomas!
This is a sonic toothbrush that connects to an interesting brushing mobile device application via Bluetooth,which can draw the attention of the child while developing a good habit of brushing your teeth on time.
Before operating this toothbrush, please read these instructions and save this manual for future reference.

Important

1.Periodically check the battery cover is securely fastened. A damaged or non-functioning unit should no longer be used. Do not modify or repair the product. This may cause fire, electric shock or injury.
2.If you don' t do not intend to use this product for a long period, the battery should be removed.
3.Cleaning and maintenance should not be performed by children.
4.Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
5.Replace brush head every 3 months or sooner if brush head becomes loose due to damage.

Warning

1.Do not submerge the unit in water or liquid.
2.When replacing batteries pay attention that water does not come in contact with the surrounding area.
3.This toothbrush is a child' s care device and is not intended for use on more than one children.

Replacement

1.The toothbrush adopts intelligent hierarchical color bristles,more than the usetime,brush the top color will have significant change,please change in time.
2.Replace Thomas brush heads every 3 months to achieve optimal results.

Using your toothbrush

1.Scan the QR code below or download the “i brush” application from the App Store or Google Play

2.Place the brush head firmly onto the toothbrush shaft.
3.Install new battery paying close attention to the battery orientation.

Sweet tips

1.The toothbrush has been cleaned before leaving the factory but it is recommended you clean again before use.
2.Product contains batteries and/or recyclable electric waste. For environment protection do not dispose with household waste, rather take it to the electric waste recycling collection points provided in your country.
3.Your device must support Bluetooth 4.0, otherwise you cannot connect to the App. Proposed system version: Later than Android 4.0 or IOS 7.0
4.App functions maybe changed due to software upgrades. Please go to www.titakid.com for latest information.

Cleaning recommendations

Turn off the main unit and remove the brush head before cleaning them with water
Brush head:
1.Carefully wash the inside and the bottom areas of the brush head.
2.Shake well to remove water after washing.
3.Do not pull the bristles of the brush.
4.Do not wash with water hotter than 80°C.
Main unit:
1.Keep the cover of battery away from water when washing.
2.Do not immerse the main unit under water.
3.Do not wash with water hotter than 40°C.

THOMAS & FRIENDS

托马斯和朋友
儿童智能牙刷

说明书

清洁建议

在用清水冲洗前，请先关闭本机电源，将刷头拆下。
刷头：
1.小心地清洗刷头内部和底部区域。
2.清洗后抖掉水。
3.请勿拔刷头上的刷毛。
4.请勿用高于80℃的水清洗。
本机：
5.清洗时请保持底盖密闭。
6.请勿将本机浸泡在水中。
7.请勿用高于40℃的水清洗。

产品保修卡

产品名称 (Product Name)	产品型号(Product Model Number)
购买日期 (Purchase Date)	订单编号 (Order Number)
用户姓名 (Customer Name)	用户地址 (Customer Address)
联系电话 (Customer Phone)	
维修记录 (Maintenance Record)	日期 (Date)
	故障原因及处理情况 (Fault causes and treatment result)

有害物质或元素

全部名称	铅 (Pb)	汞 (Hg)	六价铬 (Cr(VI))	多环联苯 (PBB)	多环二苯醚 (PBDE)
壳体	○	○	○	○	○
主板/电路模块	○	○	○	○	○
振动马达	○	○	○	○	○
按键	○	○	○	○	○
非金属件	○	○	○	○	○
小五金件	○	○	○	○	○
刷毛	○	○	○	○	○
其他部件	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量在SJ/T 11363-2006(电子信息产品中有毒有害物质的限量要求)规定的限量要求以下。
×：表示该有毒有害物质至少在该部件的某一均质材料中含量超出SJ/T 11363-2006规定的限量要求
说明：
主板/电路模块器件铜合金或高温焊料中含铅；电阻、电容等器件的陶瓷或玻璃中含铅；集成电路倒装芯片中半导体芯片及载体之间形成可能性联接所用焊料中含铅。

如需了解更多信息
请登陆我们的网站：www.titakid.com

10

CE

清洁建议

在用清水冲洗前，请先关闭本机电源，将刷头拆下。
刷头：
1.小心地清洗刷头内部和底部区域。
2.清洗后抖掉水。
3.请勿拔刷头上的刷毛。
4.请勿用高于80℃的水清洗。
本机：
5.清洗时请保持底盖密闭。
6.请勿将本机浸泡在水中。
7.请勿用高于40℃的水清洗。

产品保修卡

产品名称 (Product Name)	产品型号(Product Model Number)
购买日期 (Purchase Date)	订单编号 (Order Number)
用户姓名 (Customer Name)	用户地址 (Customer Address)
联系电话 (Customer Phone)	
维修记录 (Maintenance Record)	日期 (Date)
	故障原因及处理情况 (Fault causes and treatment result)

Sweet tips

1.The toothbrush has been cleaned before leaving the factory but it is recommended you clean again before use.
2.Product contains batteries and/or recyclable electric waste. For environment protection do not dispose with household waste, rather take it to the electric waste recycling collection points provided in your country.
3.Your device must support Bluetooth 4.0, otherwise you cannot connect to the App. Proposed system version: Later than Android 4.0 or IOS 7.0
4.App functions maybe changed due to software upgrades. Please go to www.titakid.com for latest information.

Cleaning recommendations

Turn off the main unit and remove the brush head before cleaning them with water
Brush head:
1.Carefully wash the inside and the bottom areas of the brush head.
2.Shake well to remove water after washing.
3.Do not pull the bristles of the brush.
4.Do not wash with water hotter than 80°C.
Main unit:
1.Keep the cover of battery away from water when washing.
2.Do not immerse the main unit under water.
3.Do not wash with water hotter than 40°C.

THOMAS & FRIENDS

托马斯和朋友
儿童智能牙刷

说明书

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Note 2: 1.Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.