

Read carefully before use

FEATURE :

For outdoor living, using under umbrella.

Use alkaline battery

ASSEMBLY INSTRUCTIONS

Step 1: Loose screw on lid of battery compartment and take lid apart

Step 2: Install 3 AA batteries, then cover back lid and drive screw tightly to secure on compartment.

Step 3: Lift lid up to release hooking (#1), to apart the umbrella light (#2)

Step 4: Place central portion of device onto the umbrella pole (#3) and then close it to complete installation (#4)



#1



#2



#3



#4

Cleaning and Maintenance

To prolong the life, remove the batteries and store it indoors during long periods of non-usage or in any inclement weather.

Specification of Products

Speaker Size: Dia 9 x H 2 inch

Conforms to Bluetooth V3.0 Specified Transmission Distance: ≤9m or 28.8FT (the transmission distance varies due to different environments and Bluetooth equipment of cell phones)

Power Supply: dry battery AA * 3

Solutions to Common Speaker

Problems	Solutions
Several unsuccessful connection attempts	Ensure the speaker being standby mode and cut off the connection with any other Bluetooth device.
Volume too low or sound distorted	Check the volume setting and adjust the volume appropriately
Discontinuous sound for music playing	Move the speaker closer or remove obstacles between speaker and music device
Indicator will not turn on	Check batteries

Warning:

Do not discard of any of the packaging until you have checked that you have all of the parts and fitting required.
Keep children away during assembly. This item contains small parts that can be swallowed by children.
Children should always be under direct adult supervision while using this product.
Retain these assembly instructions for future reference.

Important Notes

Read all of the instructions carefully.

Comply with all of the instructions.

Clean the product with a dry cloth.

Do not place the product under humid environment.

Do not place the product in any liquid.

Do not pour any liquid on this device

Do not install the product near a heat source, such as radiator, heater, furnace, or other heating equipment.

Remove batteries when not in use for extended periods of time.

Do not attempt to modify the product in any way.

Do not mix retired and fresh batteries in the battery compartment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.