

User Manual

Digital Photo Frame

Cautions

Precautions and maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Photo Frame.
- Keep the Digital Photo Frame out of direct sunlight.
- Always use the eject buttons on the memory storage card slots to remove the storage cards.
- Do not dismantle the Digital Photo Frame. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Photo Frame will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Photo Frame is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a card or USB device.

Failure to do so may cause damage to the card/USB and the unit.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Introduction:

- Thank you for your purchase of the Digital Photo Frame. It is designed to allow quick and easy view of photos taken from your digital camera, mobile phone, or from a memory storage card.
- Please read this User Manual carefully to learn the correct way to use the Digital Photo Frame.

Features:

1. 11.6 inch IPS screen and touch panel.
2. Built-in clock, calendar, weather, alarm,music,video,video call,WIFI.
3. Support viewing pictures in thumbnail mode.
4. Adjustable slide show speed and above 11 kinds of transition slide show.
5. Copy files to Memory and delete files in the USB driver & Memory &Card.
6. OSD Language: English, French, German, Italian,Spanish,Russian,Japanese,Chinese.
7. Sharing photos, videos from Facebook, Twitter, Cloud Photo APP.
8. Support picture slideshow with background music.
9. With Cabinet Lock Hole & the photo frame can hung on the Wall.
10. Built-in stereo speaker and earphone jack.

Packaging Check List:


1. digital photo frame	1 piece
2. AC/DC adapter	1 piece
3. Bracket	1 piece
4. User manual	1 piece

Contents

1. Product Diagram	4
1.1 Back side of the frame	4
1.2 Side Panel	4
2. Getting Started	4
3. Facebook, Twitter, Cloud Photo APP Operating Instruction	5
3.1 Connect Wi-Fi	5
3.2 Link to Face Book, Twitter, Cloud Frame APP.....	6
4.General Operating Instruction	10
4.1 Pictures.	10
4.2 Music	11
4.3 Videos	12
4.4 Clock	12
4.5 Calendar	13
4.6 Alarm	13
4.7 Weather	14
4.8 Video call	14
5.Settings.	14
5.1 Device info.	14
5.2User Management	15
5.3 PC control	15
5.4 Wi-Fi Setting	15
5.5 Album Setting	15
5.6 System Settings	16
5.7 About.....	16
6.Suspended Ball	18
7. Technical Specifications.....	18
8.Trouble shooting Guide	19
9.Contact Us	20


1. Product Diagram

1.1 Bottom of the frame

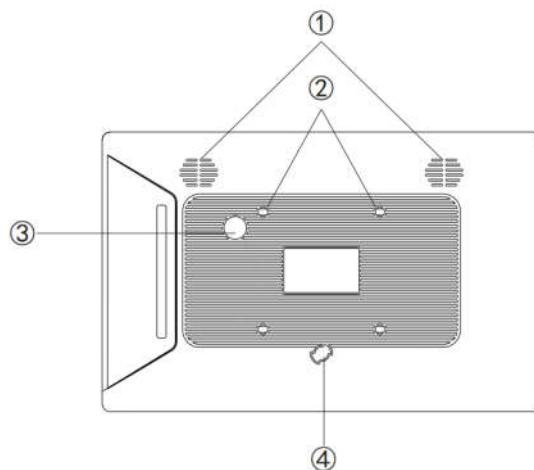

1. Loudspeaker
2. Wall mounted hole
3. On/Off button
4. Bracket hole

1.2 Side Panel

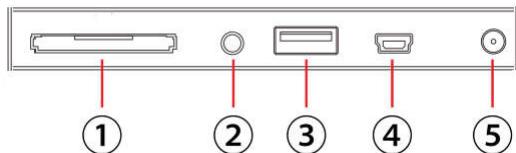

1. SD/SDHC card slot
2. Audio output (3.5mm jack)
3. USB (Type A)
4. Mini USB
5. DC IN

2. Getting Started


2.1 Put the digital photo frame with installing bracket on a flat position steadily, then plug one end of the AC adapter into a standard 110-240V AC electrical outlet and the other end into the DC IN slot on the left side of the frame.

2.2 Slowly remove the protective film covering on the Screen.


3. Facebook & Twitter &Cloud Photo APP Operating Instruction

3.1 Connect Wi-Fi

Cloud frame will scans for available Wi-Fi networks and displays the names of those it finds. If it finds a network that you connected previously, it will connect to it automatically.

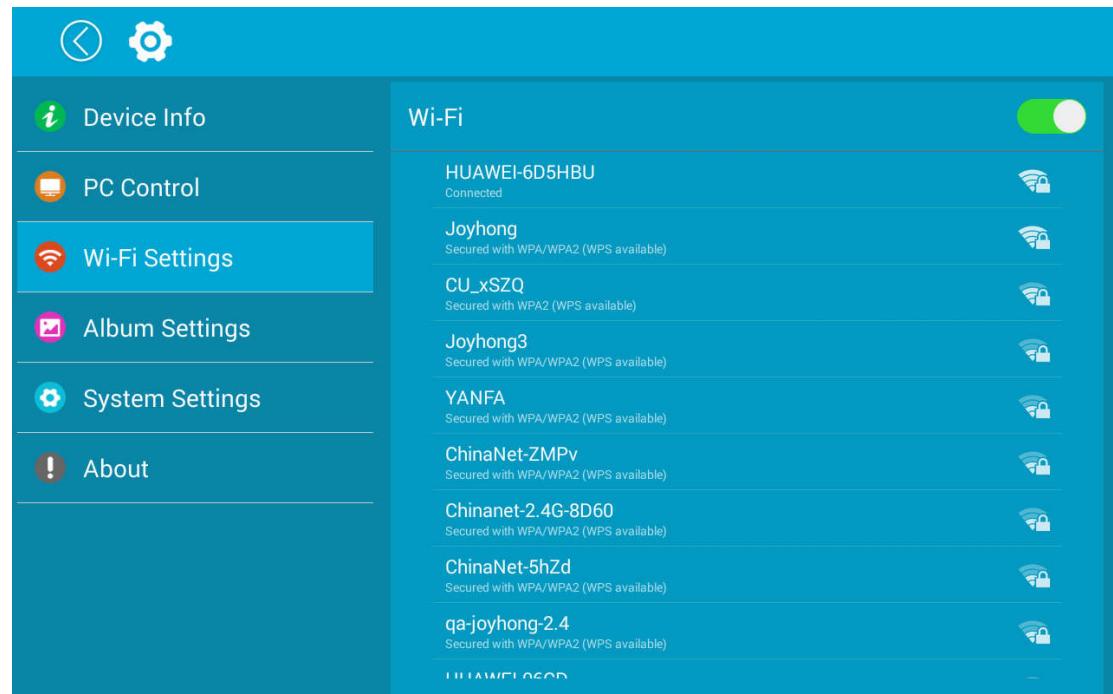


If not: Tap the Network you want to connect to. Use the keyboard to enter the Password. And check **[Show password]** to show password you entered. Tap **[Connect]** to connect Wi-Fi.

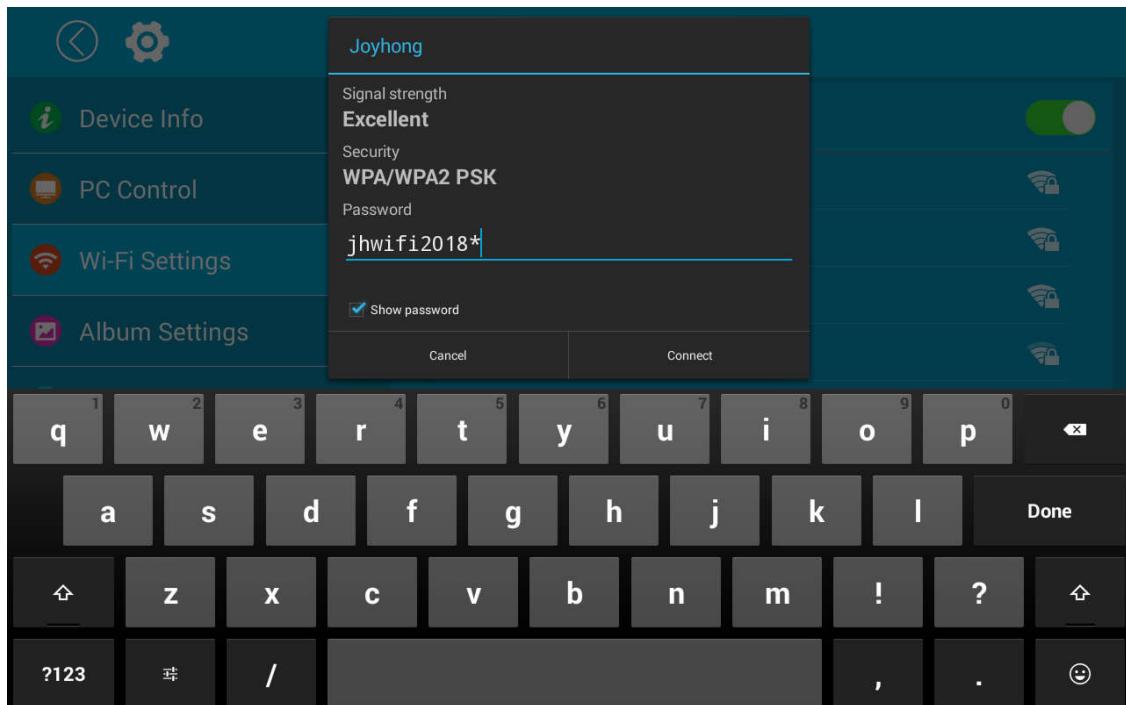

3.2 Link to Facebook, Twitter, Cloud Frame APP


3.2.1 Facebook

Search [**Photo Partner**] in Facebook. Send a private message [**bd+frame ID**] to blind the cloud frame. For example [**bdKESEU8D**]. You can find frame ID in [**Setting>Device info**] of cloud frame. Once blinding successfully. You will receive a message [**Successful Binding**]. Then you can send picture or video to it, after files have been sent, you will receive message [**We have received your message**]. And you can see video or picture you shared on cloud frame.

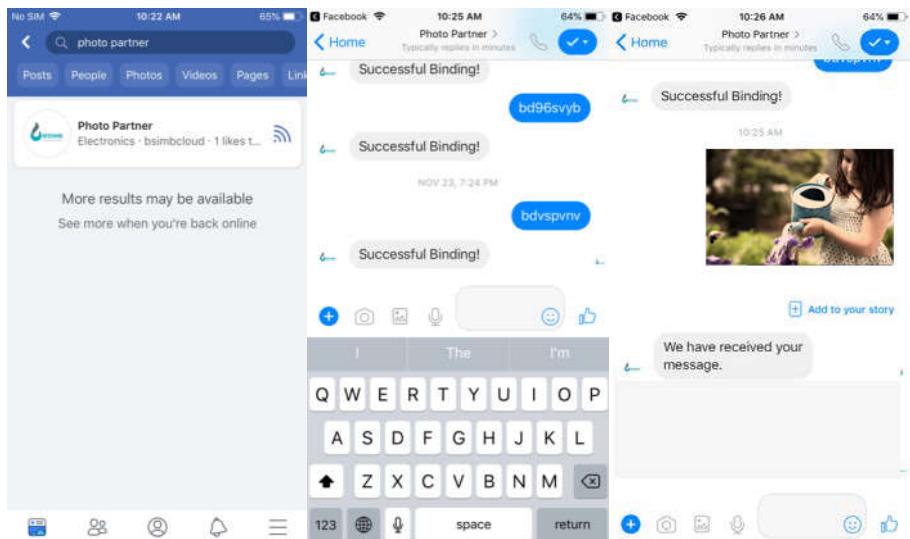

3.2.2 Twitter

Search **[BSIMB]** in Twitter and follow it. Then tap **[Message]** and send a private message **[bd+frame ID]** to **[BSIMB]** to blind the cloud frame. For example, **[bdKESEU8D]**. You can find frame ID in **[Setting>Device info]** of cloud frame. Once blinding successfully. You will receive a message **[Successful Binding]**. Then you can send picture or video to it, after files have been sent, you will receive message **[We have received your message]**. And you can see video or picture you shared on cloud frame.

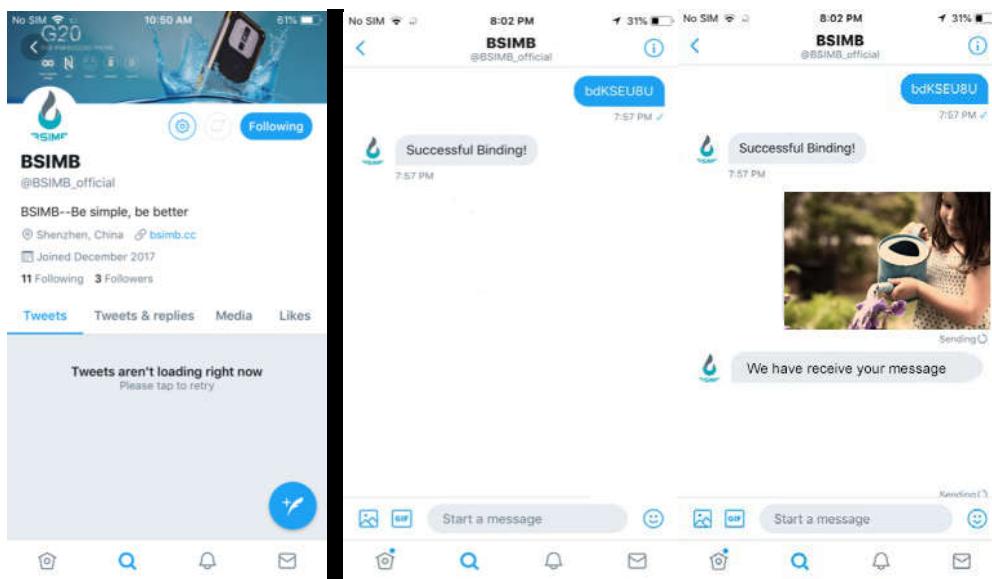

3.2.3 Cloud Photo APP


How to download APP

For Android: Search [**Cloud Photo**] in [Google Play](#) and download the APP

For IOS: Search [**Cloud Photo**] in [iTunes](#) Store and download the APP


How to bind cloud frame

Tap [**Device manager**] in user interface of Cloud Photo APP. Enter frame's nickname and frame ID. You can find frame ID in [**Setting>Device info**] of cloud frame. You can also scan the QR code to get frame ID. Then tap [**Bind**]. Once blinding process is completed. You will see a pop up message [**Successful Binding**].

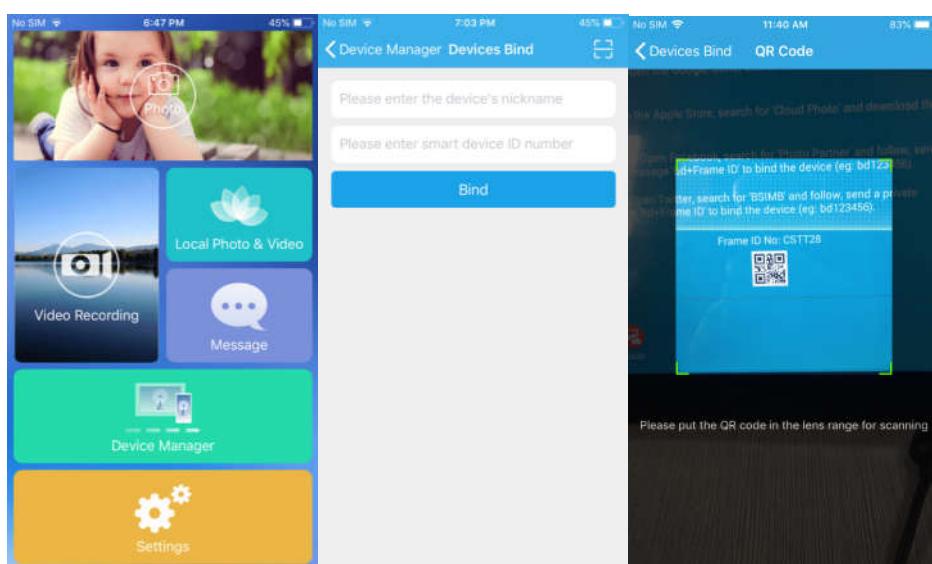


How to post picture, video to cloud frame.

Tap [**Local Photo & Video**] in user interface. Choose picture or video. Choose the picture or video you want to post. Tap [**Done**]. Choose [**Push Device**]. Then tap [**▶**] to send. After process of sending is completed. A pop up message [**Send success**] will show on smart device

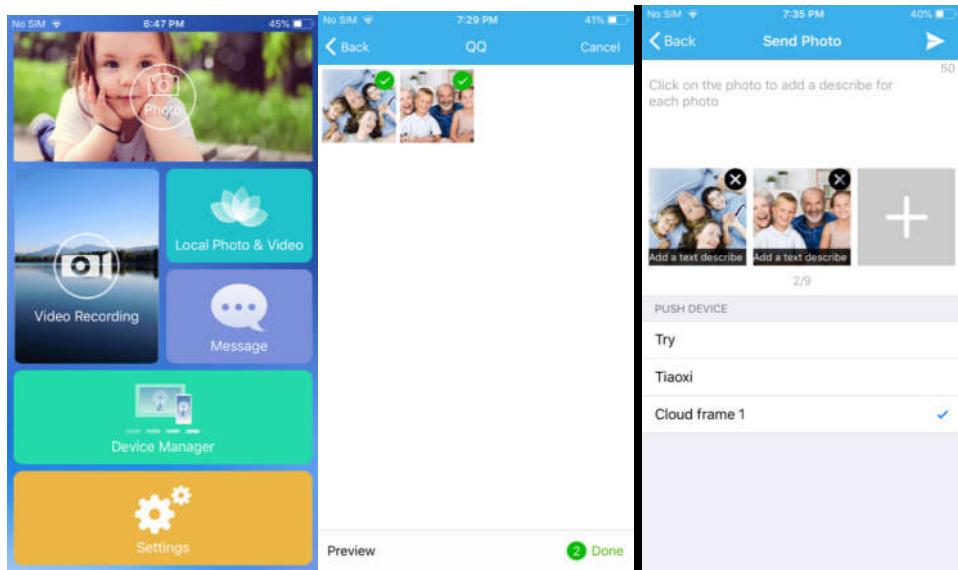

4.General Operating Instruction

After turn on cloud frame, it will show the start-up animation. Then enter main menu interface.

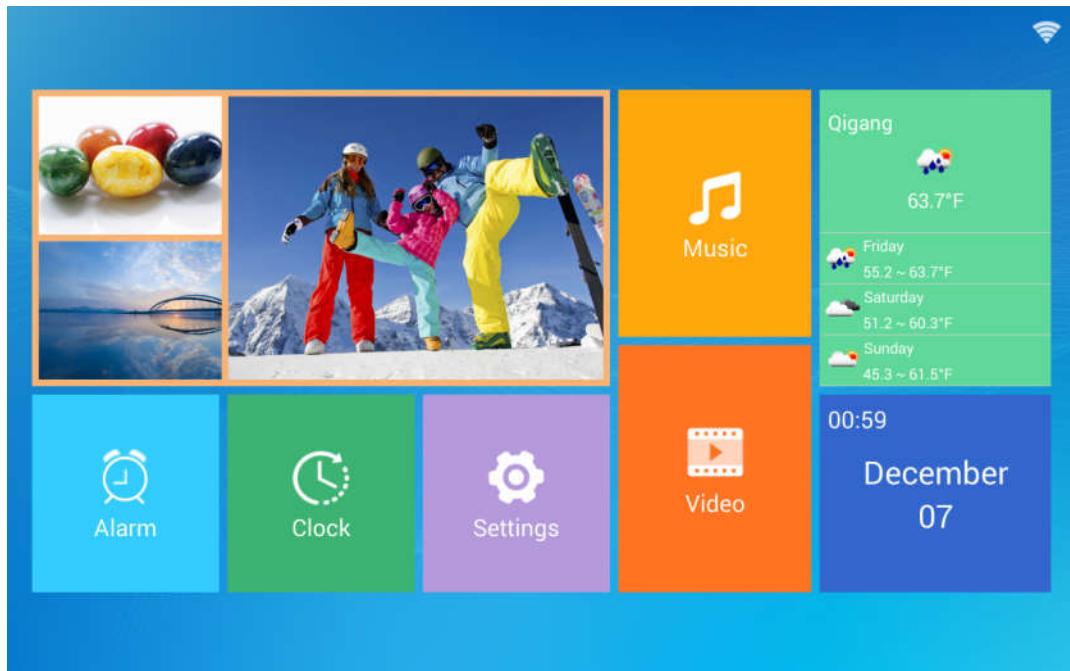


4.1 Pictures

Tap [Picture] on main menu to access to picture interface. Choose picture from

internal memory, memory card, USB driver, cloud server and favorite. Then tap the picture to start slideshow picture.

Note: If you want to slideshow with background music.


You need to choose the music you want to play in [Music] ,and tap [] to pause. Then back to [Picture] to slideshow picture, it will play the background music.

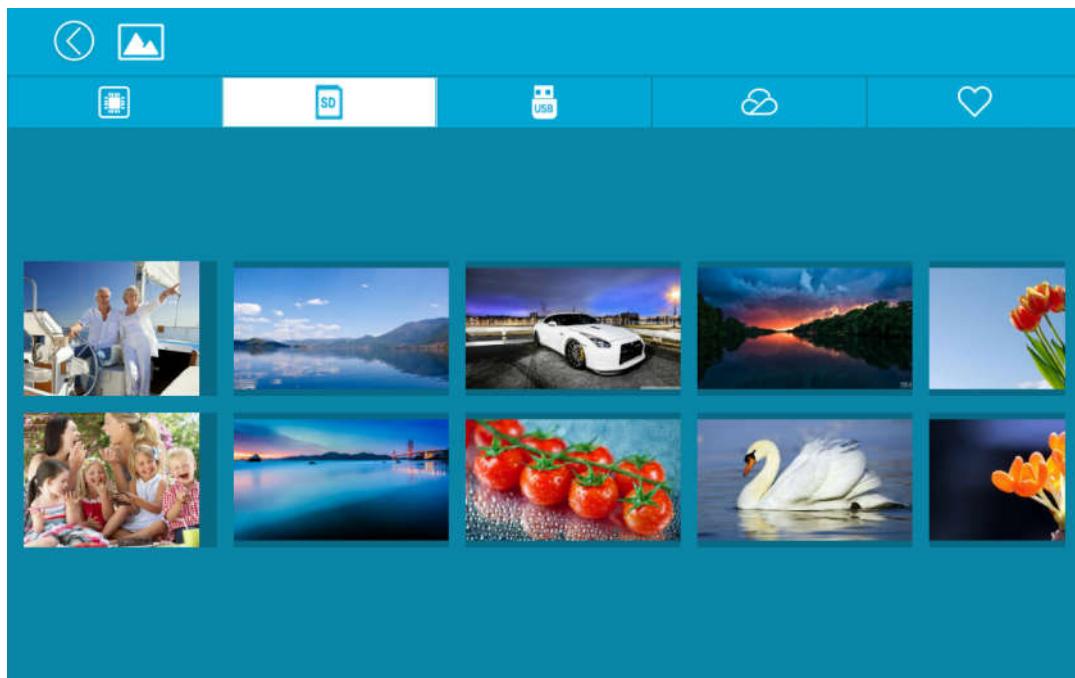

Copy and delete picture


Tap picture about 2 seconds. Then check the picture you want to copy or delete.

Tap [Import] to copy the picture from memory card or USB driver to internal memory. Tap [Export] to copy the picture from internal memory to memory card or USB driver . Tap [Delete] to delete the picture. Then tap [OK] to confirm.

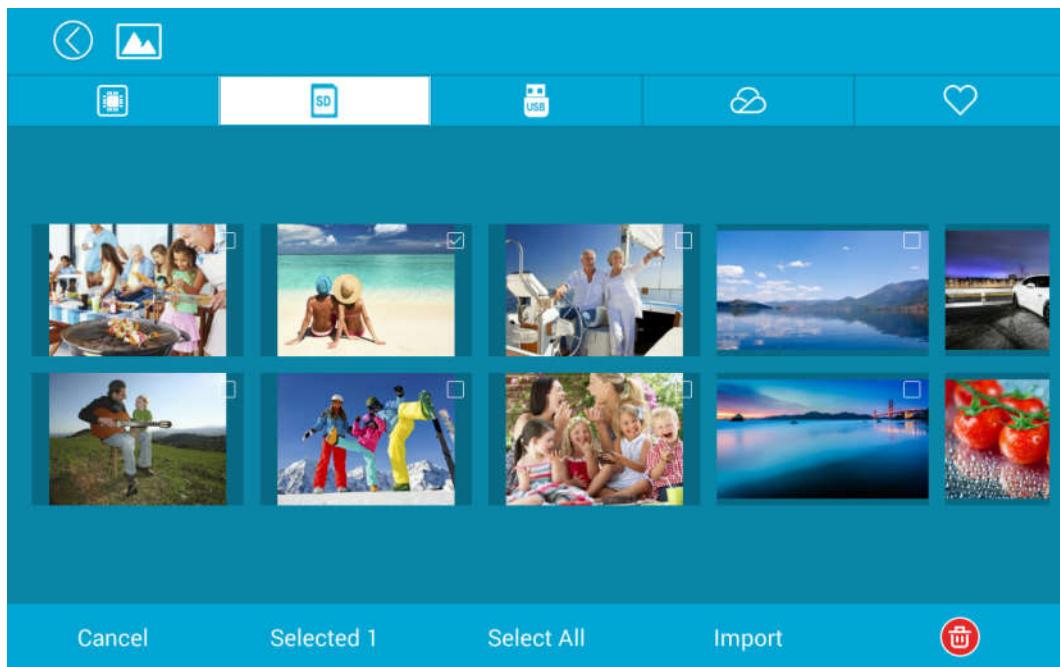

While playing pictures from internal memory, tap [❤] to add this picture to favorite, tap [↻] to rotate this picture at 90 degree, tap [◀] to back to previous interface.


Note: Cloud frame doesn't support adding picture to favorite from memory card and USB driver.

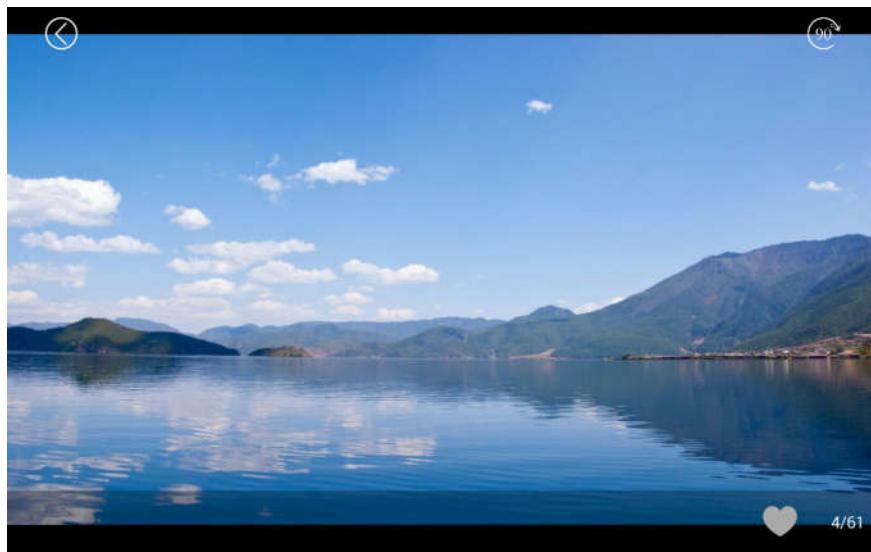

4.2 Music


Tap [Music] on main menu to access to music interface. Choose music from internal memory, memory card, USB driver. Then tap the music to start playing

music.

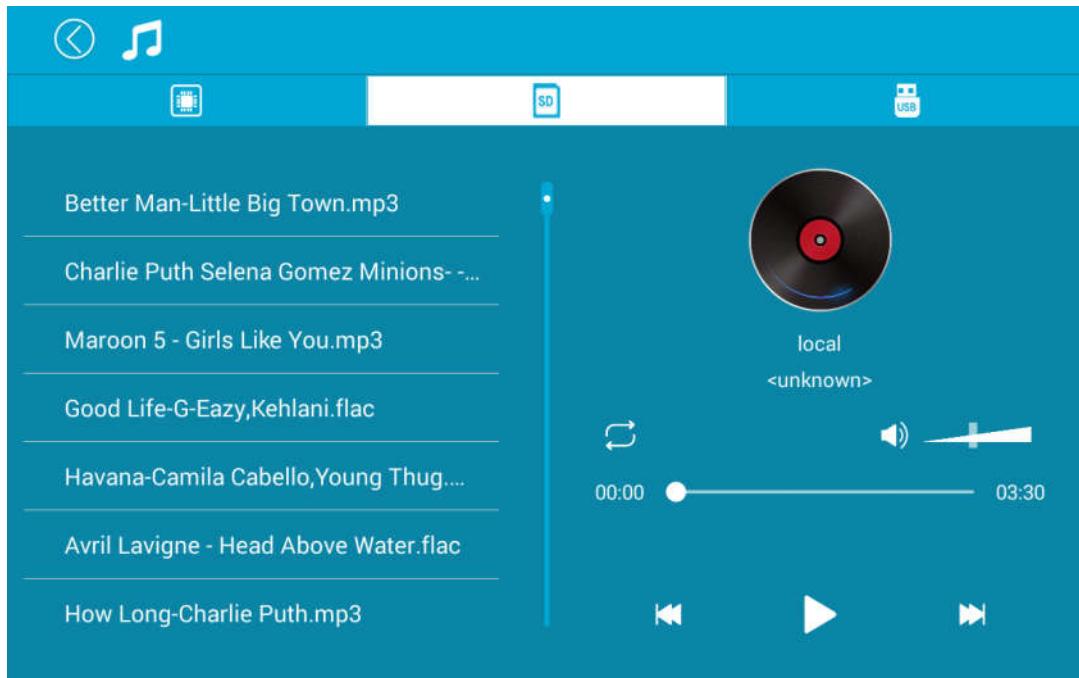


Tap the Music about 2 seconds. Then check the music you want to copy or delete.

Tap [Import] to copy the music from memory card or USB driver to internal memory. And tap [Export] to copy music from internal memory to memory card or USB driver. Tap [Delete] to delete the music. Then tap [OK] to confirm.

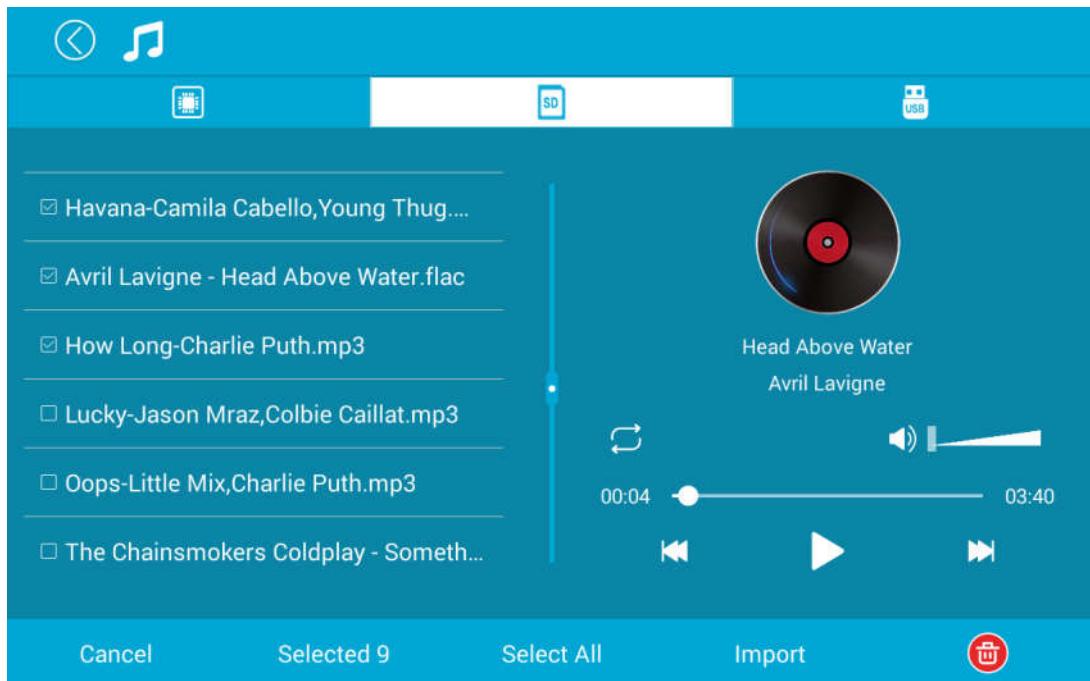


4.3 Videos

Tap [Video] on main menu to access to video interface. Choose video from internal memory, memory card, USB driver, cloud server. Then tap the music to start display video.

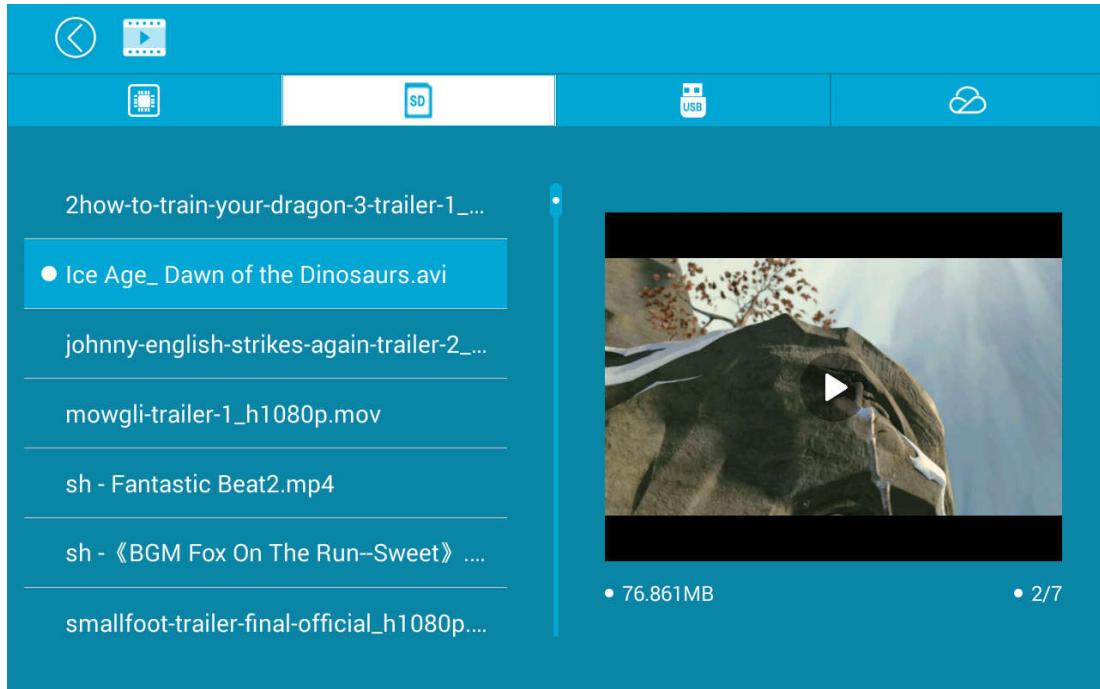


Tap the video about 2 seconds. Then check the video you want to copy or delete. Tap [Export] to copy the video from internal memory to memory card or USB driver. Tap [Import] to copy the video from memory card or USB driver to internal memory. Tap [Delete] to delete the video. Then tap [OK] to confirm.

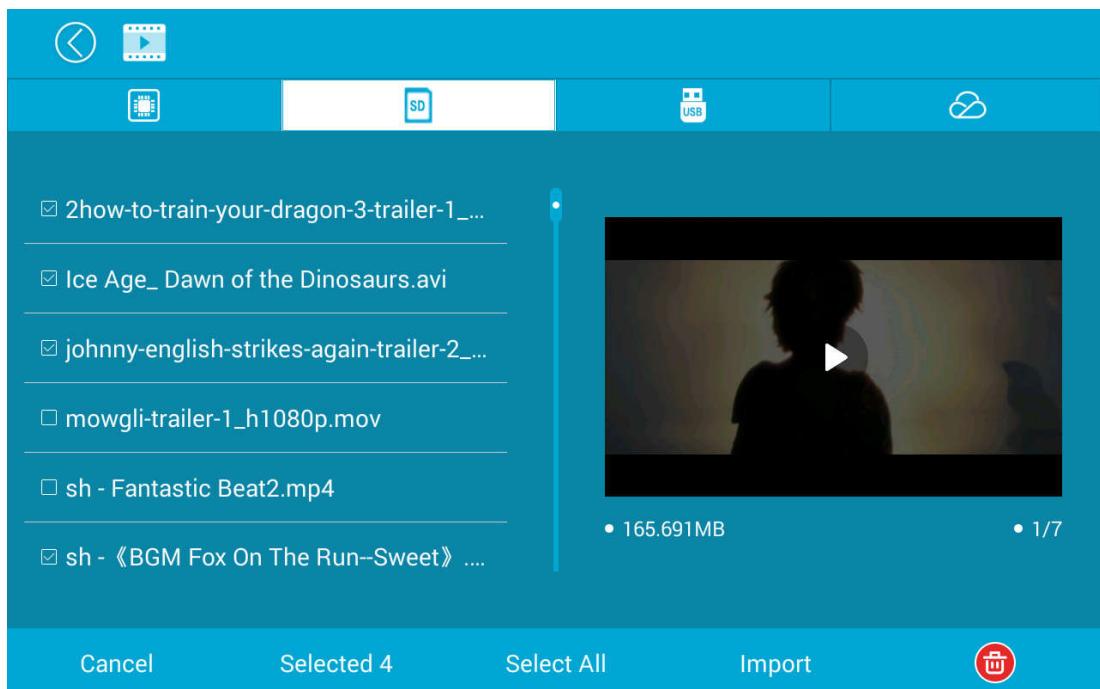


4.4 Clock

Tap [Clock] on main menu to access to clock interface.

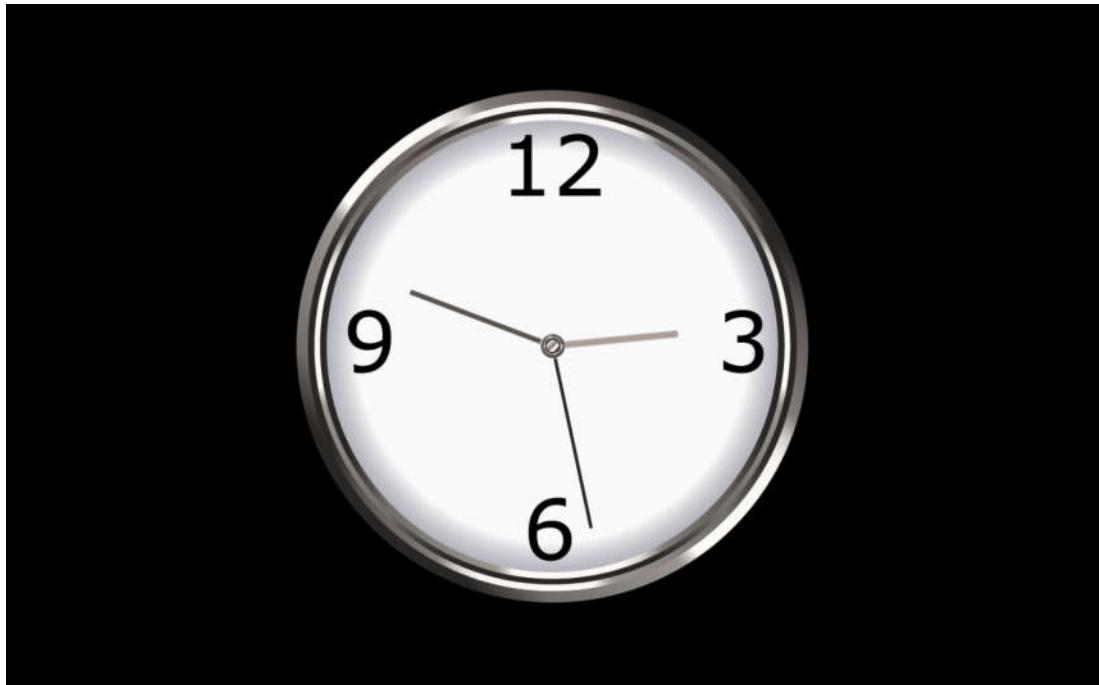


Double tap the clock and you can choose different clock skins.

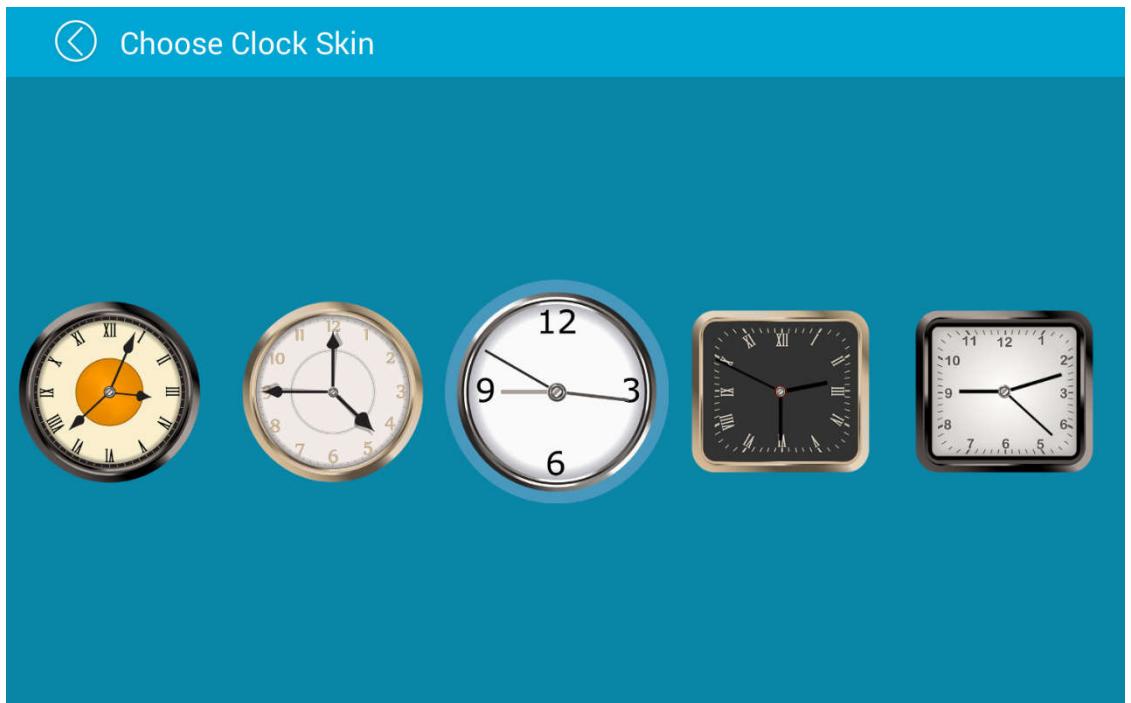


4.5 Calendar

Tap [Calendar] on main menu to access to calendar with a slideshow window at the right.

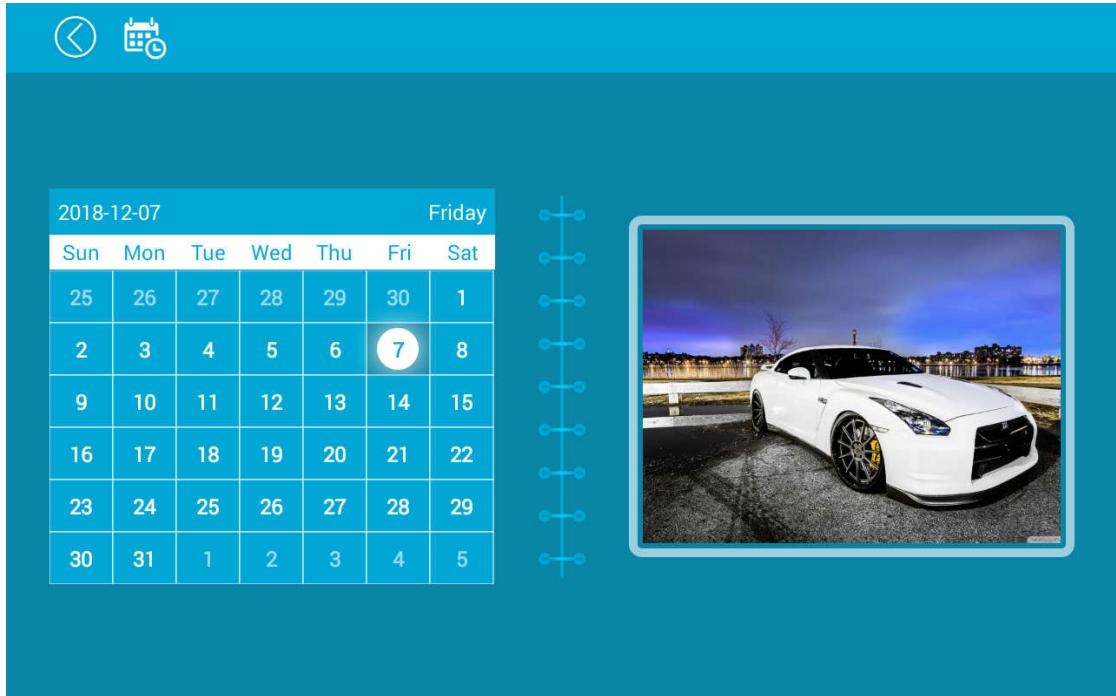


4.6 Alarm

Tap [Clock] on main menu to access to clock interface. Tap the alarm clock icon on the right corner. Tap [Add] to add new alarm and tap [Edit] to edit or delete alarm.

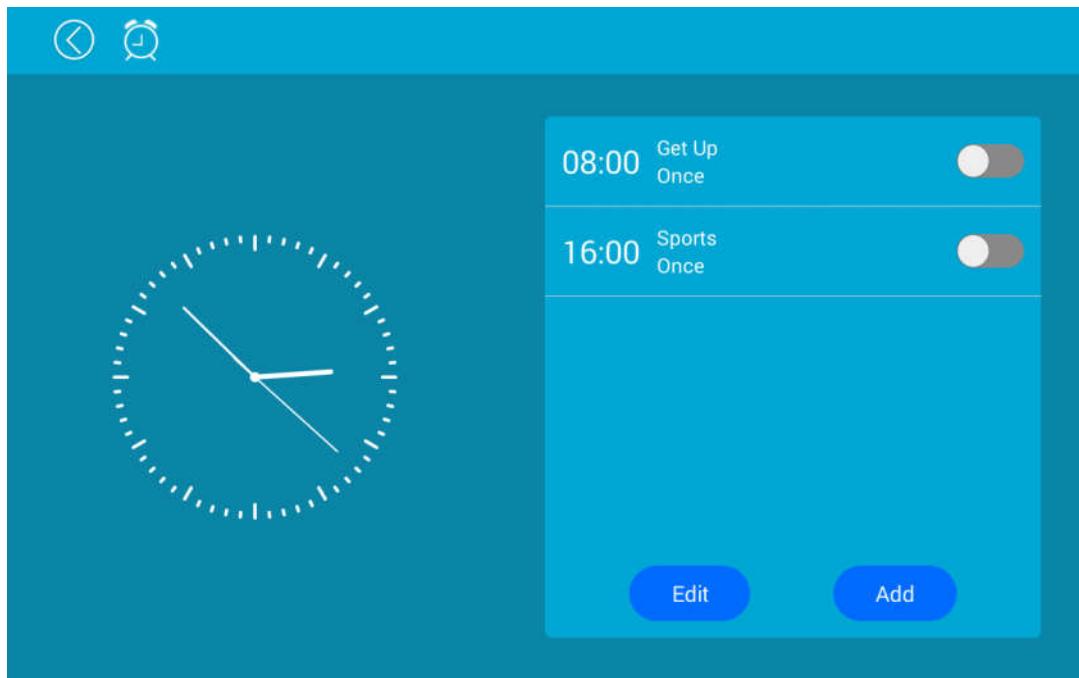


4.7 Weather

Tap [Weather] on main menu to access to weather interface with slide show window and weather of three days. Tap [$^{\circ}\text{C}$] or [$^{\circ}\text{F}$] to switch temperature format.

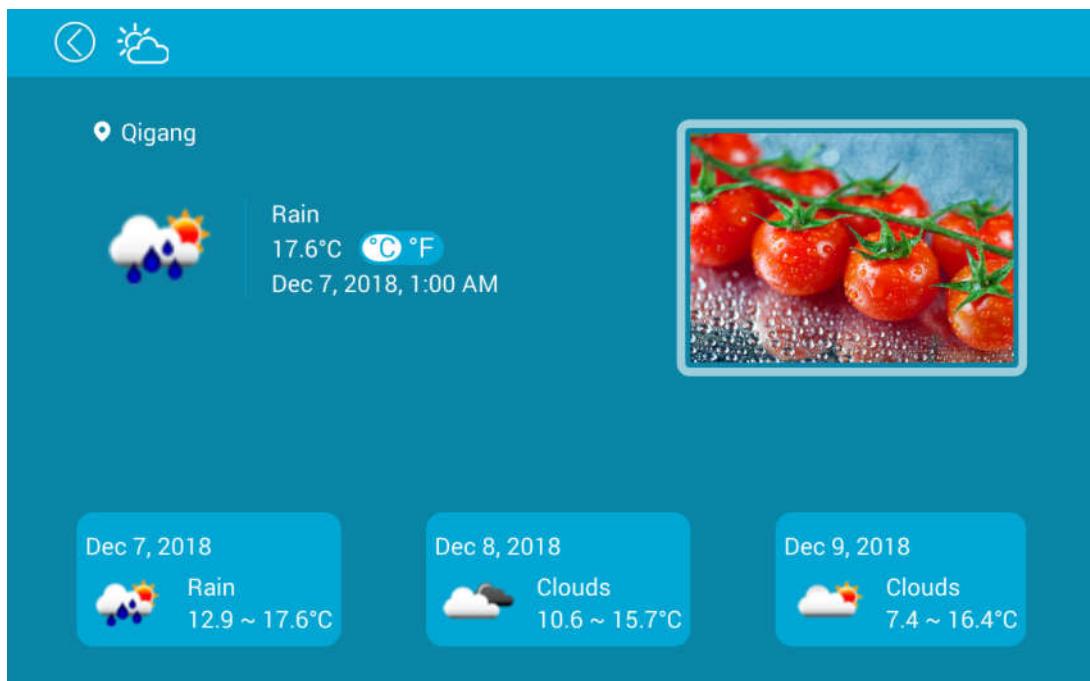

Tap [📍] you can switch the city. Enter city name then tap [🔍] to search city.

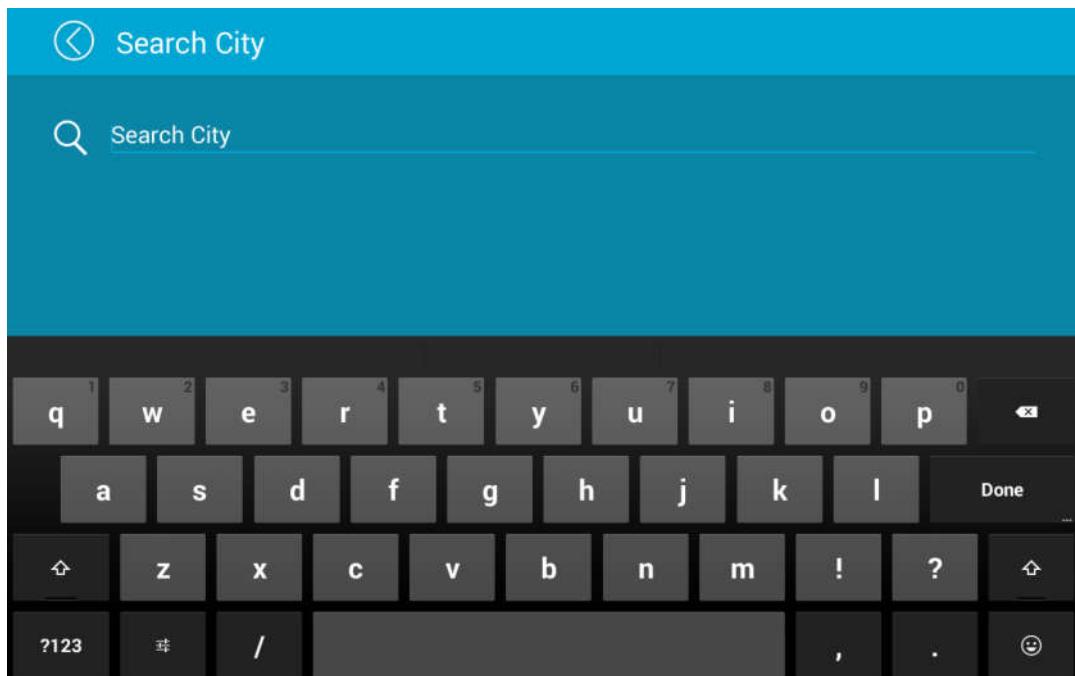

4.8 Video call

Tap [Video call] on main menu to access to video call interface. Tap “+” to add friends' frame ID, then you can start audio call or video call. Add more friends, then you can choose group chat.

You can check your recently call records when you tap Recently calls.

5. Settings

5.1 Device info

You can check cloud frame ID number in [Device Info] and the users information that bound to this cloud frame.

Device Info

PC Control

Wi-Fi Settings

Album Settings

System Settings

About

Android: Open the Google Store, search for 'Cloud Photo' and download the app.

iOS: Open the Apple Store, search for 'Cloud Photo' and download the app.

Facebook: Open Facebook, search for 'Photo Partner' and follow, send a private message 'bd+Frame ID' to bind the device (eg: bd123456).

Twitter: Open Twitter, search for 'BSIMB' and follow, send a private message 'bd+Frame ID' to bind the device (eg: bd123456).

Frame ID No: ZS5FLV



5.2 PC control

Cloud frame can use as a FTP server if the frame and other devices, such as laptop and smart phone are connecting to the same WLAN.

Use ftp link that shown on frame **[Setting>PC control]** to access to FTP server.

Then you can put picture, music, video on this folder. We can see these files in internal memory of cloud frame as long as files completely uploaded.

PC Control

WLAN Name: "HUAWEI-6D5HBU"




Enter the following address into your FTP client:

ftp://192.168.3.204:2221

Stop


5.3 Wi-Fi Setting

Turn on or turn off Wi-Fi connection and check available Wi-Fi network.

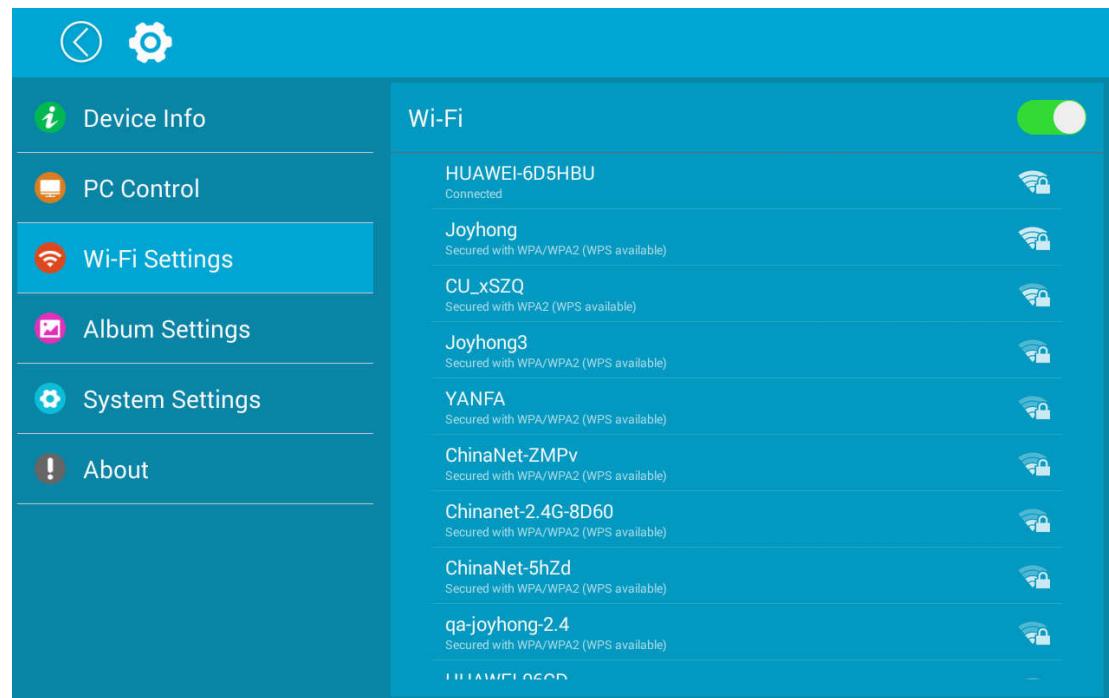


5.4 Album Setting

In [Album Settings], you can set different slideshow setting include [Slideshow], [background music], [Slideshow mode], [Slideshow animation], [Slideshow interval], [Delete all photos] and [Reset all settings].

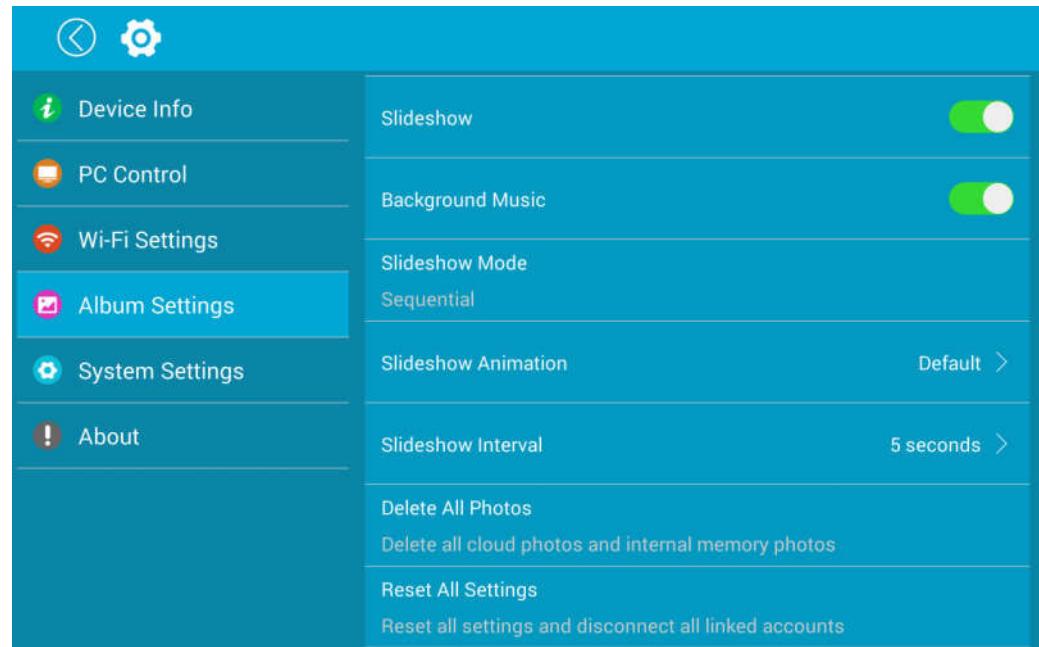


5.5 System Settings

In [System Settings], You can set [Sound], [Display], [Data and time], [Language], [Auto on& auto off], [Factory data reset].

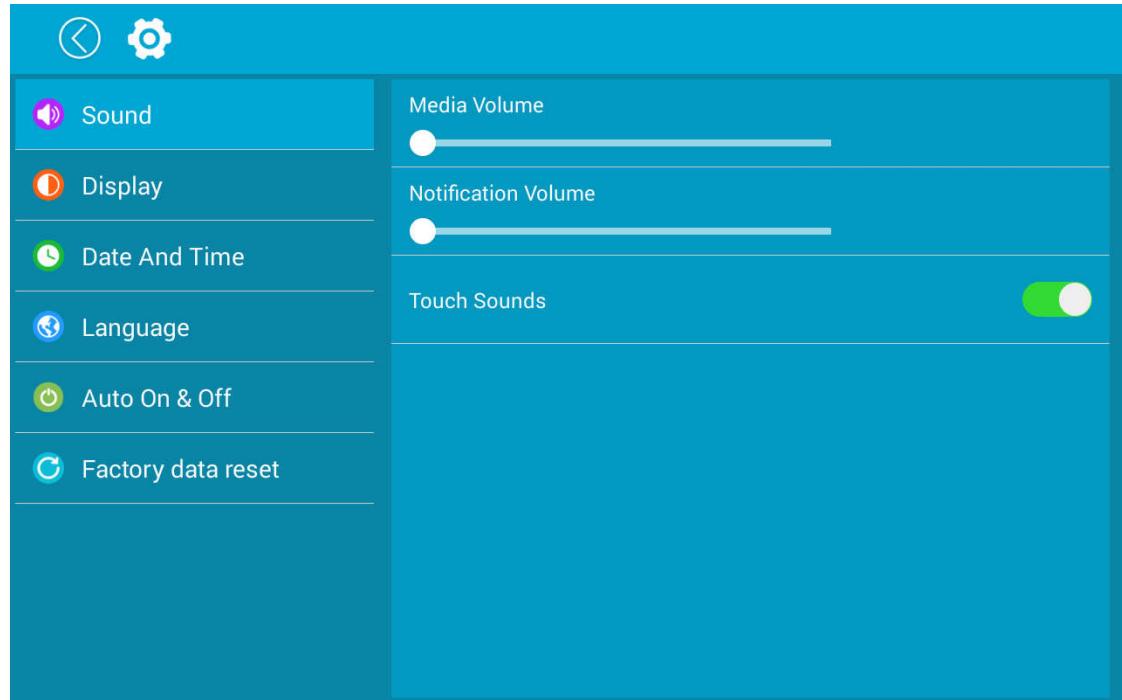


Note: Turn on [Auto on] or [Auto off] in [System setting]. And set [Auto on time], [Auto off time] and [Repeat]. Then cloud frame will auto power on or power off.

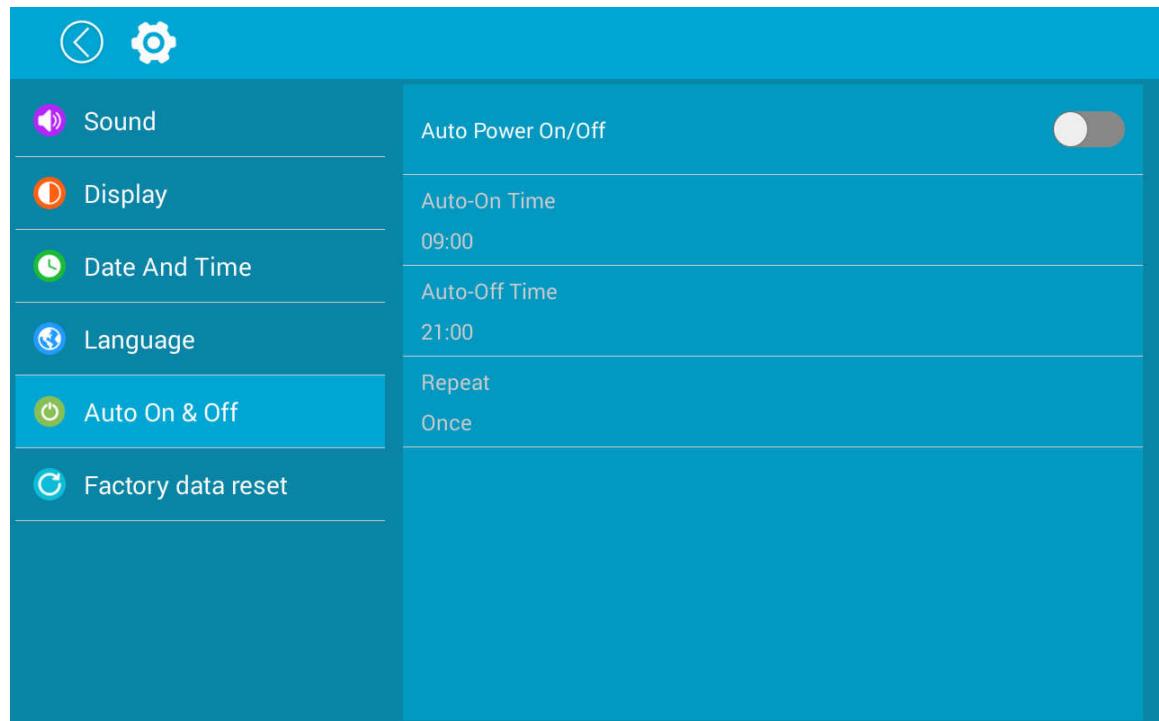

5.6 About



In [**About**] you can check firmware version, frame ID, memory space and other information.

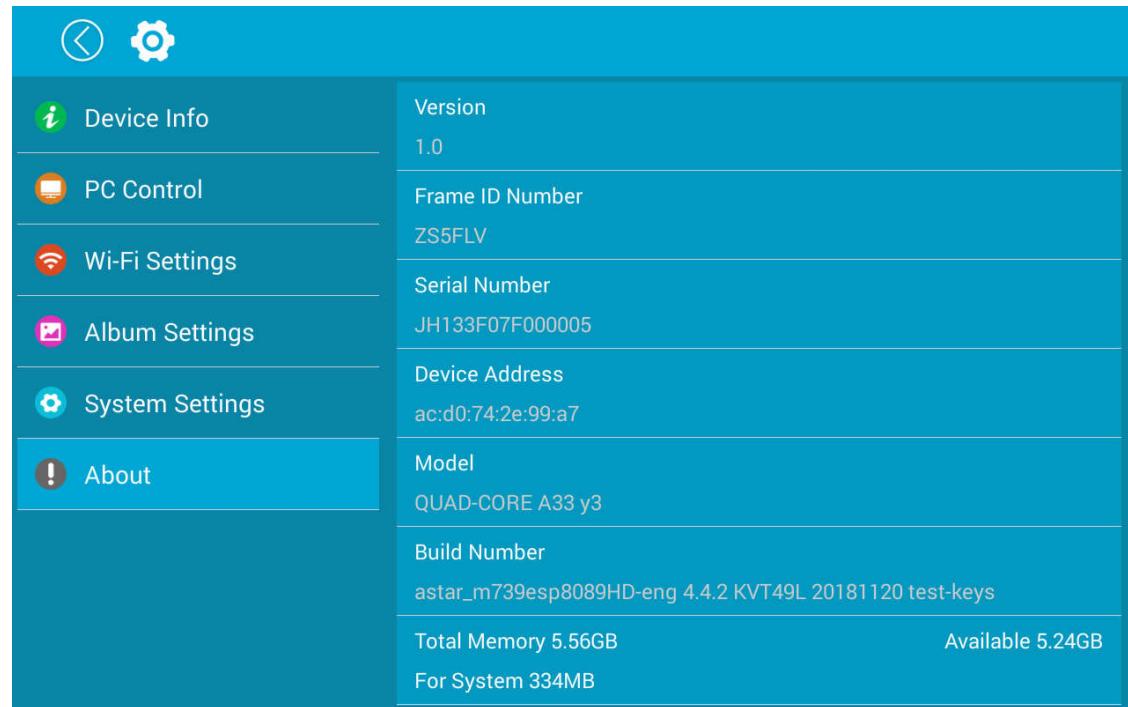

Version Upgrade


If new version was launched, tap [**Version**] and you will see a pop up message [**Find new version**]. Then tap [**Download**] to download new version of cloud photo frame APP.

After download process is completed, tap [**Install**] to install new version of cloud photo frame APP and tap [**Cancel**] to cancel this process. After new version of cloud photo frame APP was installed. Tap [**Done**] or [**Open**], then photo will return to main menu interface.

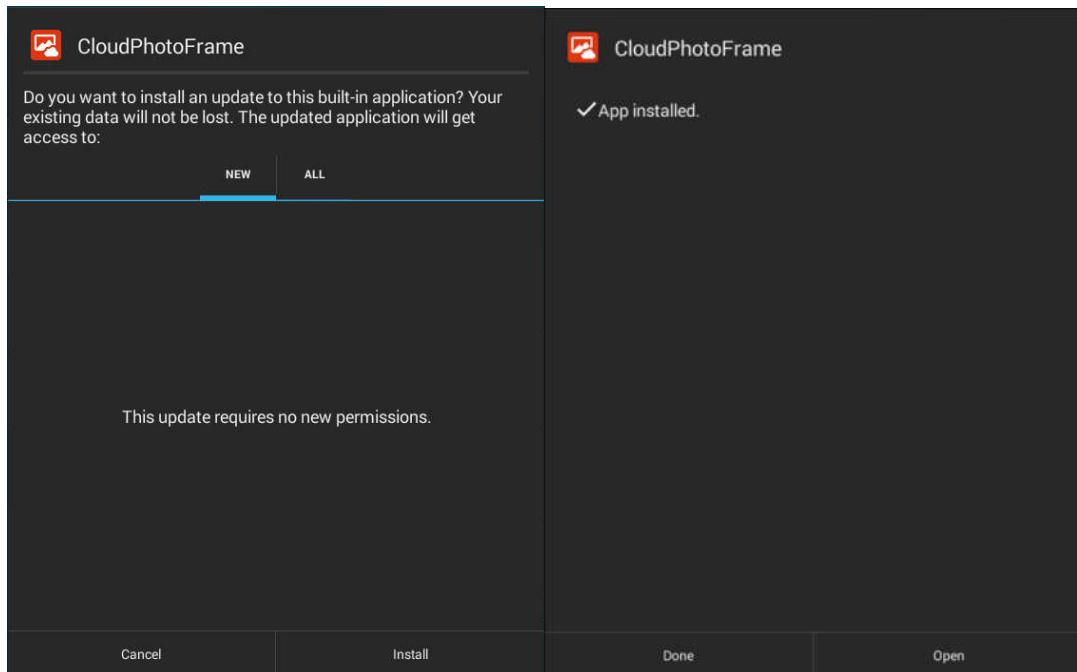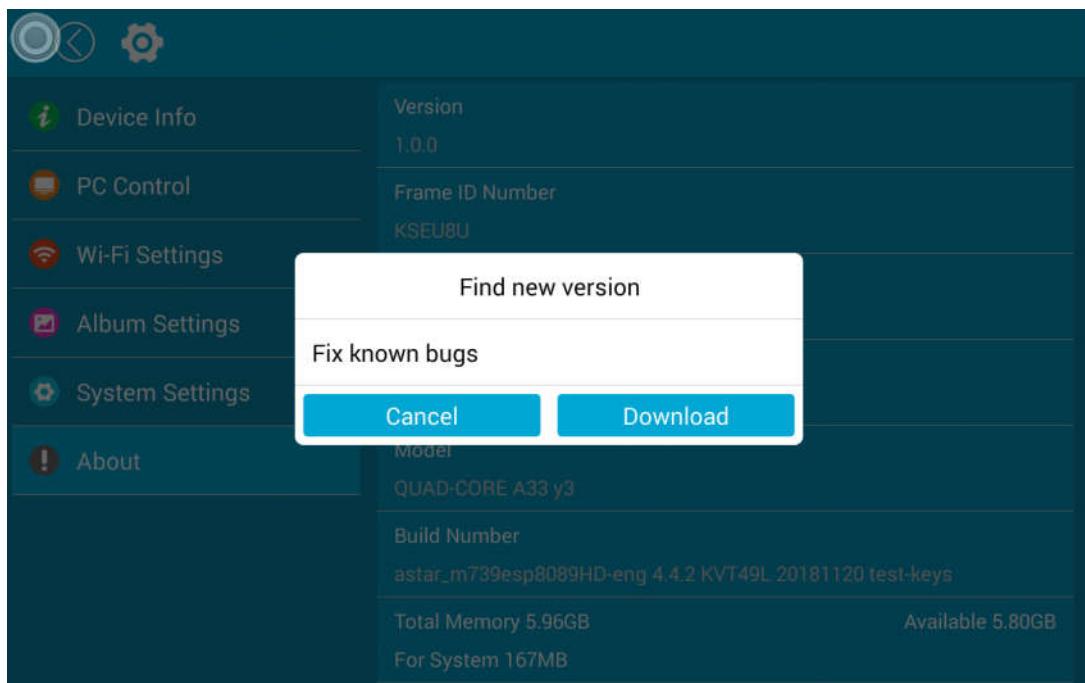

6.Suspended Ball

Turn on suspended ball in [**System settings>Display**].Then suspended ball will appear on screen. Tap [**↳**] access to previous page. Tap [**↑**] access to main menu. Tap on [**🔊+**] to increase volume. Tap on [**🔊-**] to decrease volume.

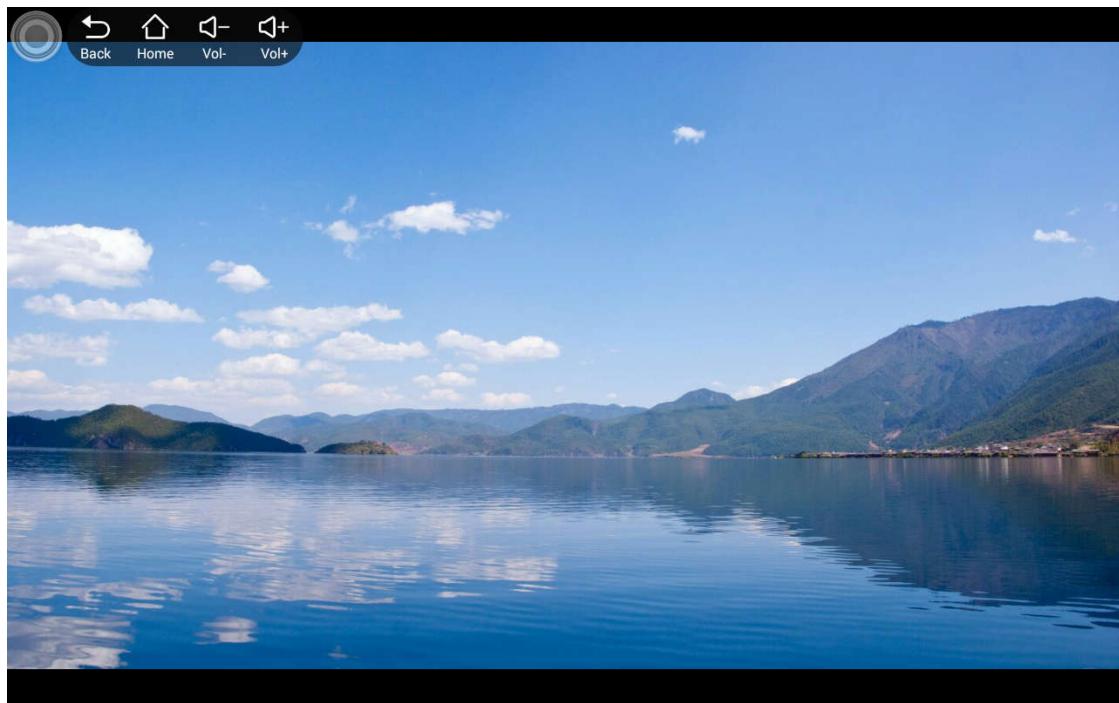

7. Technical Specifications

7. Technical Specifications

Adapter: Input AC 100-240V 50/60HZ Output DC 5V/2.5A

Picture Format: JPEG/BMP /GIF/TIF/PNG.

Audio Format: Mp3 / WMA / OGG /AAC/ APE / FLAC / WAV.

Video formats: Movie file format: MPEG1,MPEG2, MPEG4(Divx4.0,Divx5.0,Xvid) AVI and M-JPEG,MKV,WMV,ASF,MOV,MP4,RMVB,H.264,3GP.

Memory Cards: SD/SDHC Up to 64GB.

Built-in Memory: 2GB+16G

USB: USB 2.0, Mini USB

Screen Parameter:

Screen Size: 11.6 inch IPS

Resolution :1366*768 pixels

Aspect Ratio: 16:9

Brightness: 200-300 cd/m²

Contrast: 500:1

Response Time: 20ms

Viewing Angle: 175° (left/right/vertical/horizontal)

Working Temperature: 0°C~40°C, Humidity: 10-85%

8. Troubleshooting Guide

If you come across when using the photo frame on problems, consult the suggested solutions below, and the corresponding sections of this manual. If you need additional assistance, please contact technical support.

- **No power:**
Please check whether the AC-Adaptor is inserted correctly.
- **Cannot read the Memory Card or USB-Device:**
Please confirm there are supported files on your memory card or USB device.
Empty devices cannot be read.
- **Cannot play the file:**
Please confirm if the file format is compatible with the player.
- **Display too bright or too dark:**
Please adjust the brightness in the setup menu.
- **No sound**
Please check whether the volume is correct and the player is not in Mute mode.
- **No files after share video or picture to cloud server**
Please check whether the upload process is completed or not.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.