



SILVERCREST®

BLUETOOTH®-PC-HEADSET / BLUETOOTH® PC HEADSET SPC K23 A1

 **PC HEADSET**
Operation and safety notes

Distributed by / Distribuido por:

LIDL US, LLC, Arlington, VA 22202
Model No. / Modelo Núm.: HG09472-US
Version / Versión: 09 / 2022
FCC ID : 2AJ9O-HG9472
Made in / Hecho en: China

IAN 423226_2201

9 

IAN 423226_2201

 US

Description of signal words	Page	4
Customer service	Page	4
Warnings and symbols used	Page	5
Introduction	Page	6
Intended use	Page	6
Trademark notices	Page	6
Scope of delivery	Page	7
Description of parts	Page	7
Technical data	Page	8
Important safety instructions	Page	10
Safety instructions for built-in rechargeable batteries.	Page	17
Charging the battery	Page	19
Using the headphones	Page	20
Voice control function with Siri / Google Assistant	Page	21
Connecting the headphones to a second Bluetooth® device ...	Page	21
Clearing paired devices.	Page	22
Putting on the headphones.	Page	22
Headphones button functions for music playback.....	Page	22
Headphones button functions as a headset.....	Page	24
Cleaning and maintenance	Page	26
Troubleshooting	Page	26
Disposal	Page	27
Three year limited warranty	Page	28

DESCRIPTION OF SIGNAL WORDS

⚠ WARNING

WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates information considered important, but not hazard related (e.g. messages related to property damage).

CUSTOMER SERVICE



Call customer service at **1 (844) 543-5872**



Visit the Website Customer Service Platform at
www.lidl.com/contact-us

Visit a LIDL store for further assistance.

IAN 423226_2201

Please have your IAN number ready

Warnings and symbols used

The symbols shown are used in the operating instructions, on the packaging and on the unit.

	Direct current / voltage
	This action sign indicates to wear suitable protective gloves! Follow the instructions to avoid hands striking or being struck by objects or being in contact with thermal or chemical materials!
	This symbol means that the operating instructions must be observed before using the product.
	A warning with this symbol notifies the user of possible hearing damage. Avoid listening at excessive volumes for prolonged periods.
	WARNING! EXPLOSION HAZARD! A warning with this symbol and word "WARNING! EXPLOSION HAZARD" indicates the potential threat of explosion. Failure to observe this warning may result in serious or fatal injuries and potential property damage. Follow the instructions in this warning to prevent serious injuries, a danger to life or property damage!

PC HEADSET

● Introduction

Congratulations on your purchase. You have selected a quality product. The instructions for use are a part of the product. They contain important information about the safety, use and disposal of the product. Before using the product, please learn about all the safety information and usage instructions. Only use the product as described and for the specified applications. If you lend the product to someone else, please also give all the instructions.

● Intended use

This Bluetooth® PC HEADSET (hereinafter referred to as "product") is an information technology device. The product is used for the playback of audio signals from external audio sources (e.g. CD / DVD / MP3 players, HiFi systems, desktop computers and notebooks, etc.). Telephone calls can also be made in connection with a smartphone.

It must not be used for commercial purposes. Any other use is considered improper. Any claims resulting from improper use or due to unauthorised modification of the product will be considered unwarranted. Any such use is at your own risk.

● Trademark notices

- USB® is a registered trademark of USB Implementers Forum, Inc.
- Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Lidl US, LLC. is under license.

- The SilverCrest trademark and trade name is the property of their respective owners.
- Any other names and products are trademarks or registered trademarks of their respective owners.

● **Scope of delivery**

NOTICE


Take the product and the instruction for use out of the box and remove all packing materials.

- 1 x Bluetooth® PC headset
- 1 x Charging cable
- 1 x Instruction manual
- 1 x Quick start guide

● **Description of parts**

Please refer to the fold out page.

- 1 Band
- 2 Speakers and ear pads
- 3 Microphone
- 4  Power on/off, Multifunction Key
- 5 LED indicator
- 6 USB Type A plug
- 7 USB Type C plug
- 8 USB type C charging socket
- 9 Adjustable microphone arm
- 10  Microphone Mute/unmute, Bluetooth Pairing button
- 11  button
- 12  button
- 13 Control panel

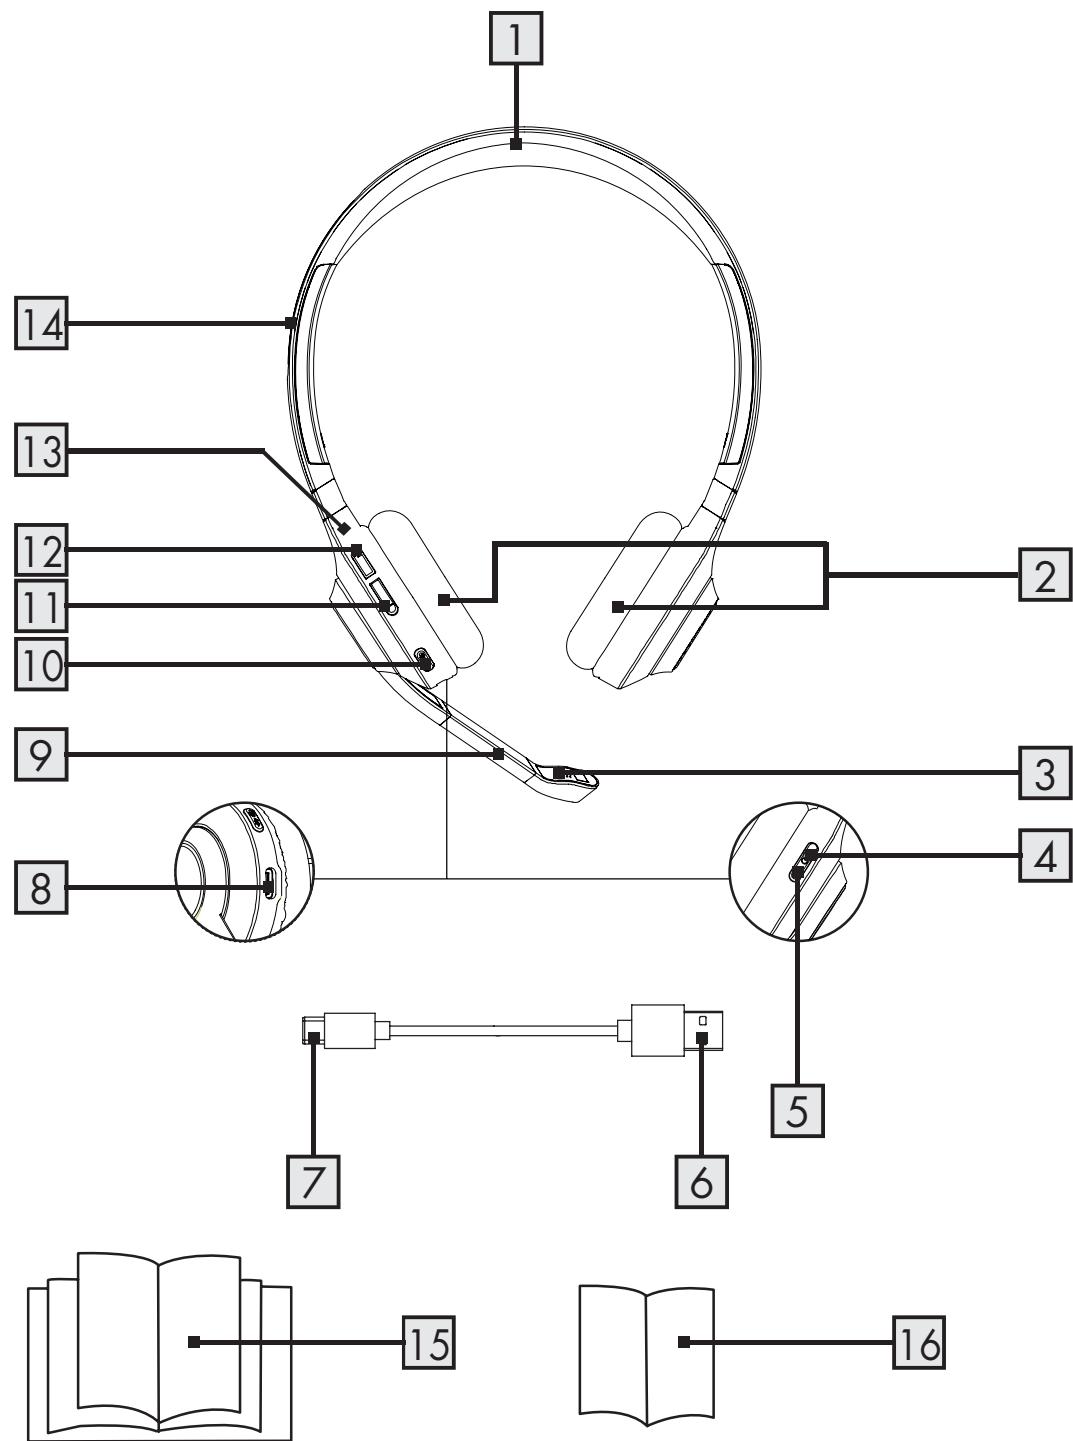

- 14** Magnetic attachment for microphone bracket on headband
- 15** Instruction manual
- 16** Quick start guide

● Technical data

Operating voltage:	5 V ===== , Direct current via USB charging socket
Built-in rechargeable battery:	3.7 V rechargeable lithium-ion battery, 250 mAh, 0.925 Wh
Charging time:	approx. 2 hours
Playing time (Music):	approx. 15hrs. (at 50% volume)
Playing time (Talk):	approx. 15 hrs. (at 50% volume)
Wireless standard:	Bluetooth® 5.2
Supported profile:	A2DP, AVRCP, HFP
Range:	approx. 33 ft (10 m)
Dimensions:	approx. 5.87 x 6.65 x 2.11 in (149 x 169 x 53.5 mm) (w x h x d)
Weight:	approx. 2.75 oz (78 g)
Operating temperature:	+41 °F to +95 °F (+5 °C to +35 °C)
Humidity (no condensation):	10 % to 70 % relative humidity
Storage temperature:	+32 °F to +104 °F (0 °C to +40 °C)
Frequency band:	2402 MHz - 2480 MHz
Max. transmitting power:	< 20 mW

Speaker

Driver size:	23 mm
Impedance:	30 Ohm
Sensitivity:	100 dB @ 1kHz
Frequency response:	20 Hz - 20 kHz

Microphone

Impedance:

2.2 k Ohm±0.5 Ohm

Sensitivity:

-45 dBV/pa +/- 3 dB @ 1kHz

Frequency range:

100Hz - 8KHz



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS. KEEP FOR FUTURE REFERENCE. INCLUDE ALL DOCUMENTATION WHEN PASSING THIS PRODUCT ON TO OTHERS.

⚠ WARNING

Failure to observe the following warnings may result in death or serious injuries.



DANGER TO LIFE AND RISK OF ACCIDENT FOR INFANTS AND CHILDREN!



Suffocation hazard! Never leave children unsupervised with the packaging materials. The packaging materials pose a suffocation hazard. Children frequently underestimate the dangers. The packaging materials are not a toy.

- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTICE

This product has been tested and complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this product causes harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the equipment to an outlet on a different circuit than the one the receiver is connected to.
- Consult the dealer or an experienced radio/TV technician for help.

- This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This product may not cause harmful interference, and
 - (2) this product must accept any interference received, including interference that may cause undesired operation.

Wireless interference

Turn the device off on airplanes, in hospitals, service rooms or near medical electronic systems. The wireless signals transmitted could impact the functionality of sensitive electronics. Keep the device at least 7.874 in (20 cm) from pacemakers or implantable cardioverter defibrillators, as the electromagnetic radiation may impair the functionality of pacemakers. The radio waves transmitted could cause interference in hearing aids. Do not place the device near flammable gases or potentially explosive areas (e.g. paint shops) with the wireless components on, as the radio

waves emitted can cause explosions and fire. The range of the radio waves varies by environmental conditions.

In the event of wireless data transmission, unauthorized third parties receiving the data cannot be excluded. Lidl US, LLC. is not responsible for interference with radios or televisions due to unauthorized modification of the device. Lidl US, LLC. further assumes no liability for using or replacing cables and devices not distributed by Lidl US, LLC. The user of the device is fully responsible for correcting interference caused by such unauthorized modification of the device as well as replacement of such devices. The RF exposure compliance distance is 5 mm.

NOTICE

This product does not contain any parts which can be serviced by the user. The rechargeable battery cannot be replaced.

⚠ WARNING

Failure to observe the following warnings may result in death or serious injuries.

- Do not place burning candles or other open fire on or next to the product.
- If you notice smoke or an unusual noise or odor, switch the product off immediately and remove the USB cable.
- Do not throw the product into fire or expose it to high temperatures.
- Do not cover the product during use or charging.
- Only charge the battery in dry environments.

NOTICE

- Check the product before every use! Discontinue use if any damage to the product or the charging cable is detected!
- Sudden temperature changes may cause condensation inside the product. In this case, allow the product to acclimate for some time before using it again to prevent short circuits!
- Do not operate the product near heat sources, e.g. radiators or other devices emitting heat!
- Do not try to open the product! It has no internal parts requiring maintenance.



Safety instructions for built-in rechargeable batteries

⚠ WARNING

**Failure to observe the following warnings
may result in fatal or serious injuries.**

- **DANGER TO LIFE!** Keep batteries / rechargeable batteries out of reach of children. If accidentally swallowed, seek immediate medical attention.
- **DANGER OF EXPLOSION!** Never recharge disposable batteries. Do not short-circuit batteries / rechargeable batteries and/or open them. They may overheat, ignite, or explode.
- Never throw batteries / rechargeable batteries into fire or water.
- Do not exert mechanical loads on batteries / rechargeable batteries.

- Batteries should not be disassembled, crushed, punctured, opened, or otherwise mutilated.

Risk of battery leakage

⚠ CAUTION

**Failure to observe the following warnings
may result in injuries or property damage.**

- Avoid extreme environmental conditions and temperatures, which could affect batteries / rechargeable batteries, e.g. radiators / direct sunlight.
- Avoid contact with the skin, eyes and mucous membranes. In the event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek immediate medical attention.
-  **WEAR PROTECTIVE GLOVES!** Leaked or damaged batteries / rechargeable batteries can cause burns on contact with the skin. Wear suitable protective gloves at all times if such an event occurs.

- This product contains an integrated battery which cannot be replaced by the user. The battery may only be removed or replaced by the manufacturer or its customer service or by a similarly qualified person in order to avoid hazards.

SAVE THESE INSTRUCTIONS

● Charging the battery

- The battery must be charged prior to first use.
- The LED **5** will flash red and headphones sound acoustic signal when the battery is drained. The battery should then be charged as soon as possible.
- Plug the USB Type C plug **7** on the charging cable into the USB type C socket **8** on the headphones! Plug the USB type A plug **6** on the charging cable into the USB port on a PC or a USB adapter (not included).

NOTICE : The LED will remain red whilst charging. Once the battery is fully charged, the LED will be off.

- Once charging has completed, remove the USB Type C plug **7** from the headphones.

● Using the headphones

- Connect the headphones with a communication device.
- Place the headphones near a switched on communication device (e.g. mobile or computer).

- To switch on the headphones, press the  button **4** for approx. 3 seconds, until the LED **5** flashes red/blue in turn and a signal tone sounds. The headphones are now in connecting mode (pairing mode). If the headphones do not pair with a suitable playback device within the next 5 minutes, the headphones will switch themselves off automatically.
- Now connect your communication device (mobile phone or computer) via Bluetooth® with the headphones. Please refer to the notes in the instructions for your communication device. Select the entry "SPC K23 A1" from the list of devices detected by your computer or mobile.
- Once the connection has been established, the LED will briefly flash twice blue every 3 seconds.
- Please note, your communication device must support Bluetooth® Standard **5.2** or above to use all options.
- If you come into range of the paired device with the headphones switched on, a Bluetooth® connection will automatically be established.
- You may need to approve the connection on the communication device. Please refer to the instructions for use of the communication device on this topic!
- If you leave the range of your communication device with your headphones, the LED will flash blue twice every 2 seconds. If the connection is not restored within 5 minutes, the headphones will switch off.
- The headphones may be manually switched off by holding the  button **4** for 3 seconds until acoustic signal sounds and the LED goes out.

● **Voice control function with Siri / Google Assistant**

Please follow below steps to activate the voice control function:

- Activate Siri or Google Assistant on your mobile device.

■ **iOS devices:** Complete the Siri setup. Then, use Siri to activate this product's voice control function.

Android devices: Open Google Assistant. Follow Google Assistant's instructions to complete settings before using this product's voice control function.

NOTICE Google Assistant is available on Android 5.0 or above devices.

- Activate the Bluetooth® function. Pair this product with your mobile device.
- Press the button **[10]** to activate the voice control function.
- Now you can use the voice control function.
- If there is no detection on voice command within 10 seconds, the voice control function will be turned off automatically.

● Connecting the headphones to a second Bluetooth® device

The headphones may be connected to two Bluetooth® communication devices at the same time. If the headphones are already connected to a device, follow the steps below to connect to the second device:

- Activate multipoint mode by pressing the button **[10]** twice. Acoustic signal sounds. The first communication device (mobile phone or computer) is disconnected.
- Now connect to the second communication device via Bluetooth® with the headphones. Please refer to the notes in the instructions for your communication device. Select the entry "SPC K23 A1" from the list of devices detected by your computer or mobile. The second communication device is connected and the headphones emit a confirmation tone.

- Press the button **10** twice and an acoustic signal will sound. The first communication device is connected again. Now, both communication devices are connected to the headphones simultaneously.

● **Clearing paired devices**

- In paired mode (the LED will briefly flash blue twice every 3 seconds), press and hold the button **10** twice and an acoustic signal will sound.
- The headphones are now in pairing mode.
- Simultaneously pressing and hold buttons **12** and **11** for approx. 6 seconds. A signal tone sounds and the LED **5** flashes red / blue in turn. The headphones are now in pairing mode again.
- The memory in the headphones is cleared and it will not auto-connected to the previous paired communication device.

● **Putting on the headphones**

The headphones can be adjusted to your head size, if necessary:

- The speakers **2** are secured to the band **1** with a metal rail for this purpose. Adjust these to ensure optimal comfort.
- Please follow the marking "L" (= left) and "R" (= right). Put on the headphones so the control panel **13** is on the left.

● **Headphones button functions for music playback**

- Start a playlist on the playback device and set the volume to the minimum level to begin with. Choose a comfortable volume after putting on the headphones. Using the buttons **12** and **11** on the headphones allows the volume to be adjusted. Music is played back through the speakers **2**. The control panel has 4 buttons. These control the following functions:

Button	Function
	<ul style="list-style-type: none"> - Press and hold to switch the device on / off. - Press once to play / stop music playback.
	<ul style="list-style-type: none"> - Press once to increase the volume by one level. One signal tone will sound when the maximum volume has been reached. - Press and hold approx. 2 seconds to skip to the next track.
	<ul style="list-style-type: none"> - Press once to reduce the volume by one level. - One signal tone will sound when the minimum volume has been reached. - During playback, press and hold approx. 2 seconds to jump to the previous track.
	<ul style="list-style-type: none"> - In paired mode (LED flash blue twice every 3 seconds), press twice and an acoustic signal will sound to change to pairing mode allowing another communication device for connection.
	<ul style="list-style-type: none"> - In pairing mode (LED flash blue), press twice to connect again to the previously paired communication device.

● Headphones button functions as a headset

You may also use the headphones for telephone calls when used with a communication device which supports this function.

If your communication device supports the Bluetooth® standard ~~5.2~~ or above, you will be able to use the following functions:

Function	Action
Answer / end call	<ul style="list-style-type: none">- Briefly press the  button 4.
Ignore call	<ul style="list-style-type: none">- Hold the  button 4 for approx. 1 second until 2 beeps sound.
Redial	<ul style="list-style-type: none">- Briefly press the  button 4 for 2 seconds.
Increase volume	<ul style="list-style-type: none">- Briefly press the button 12 (one signal tone will sound when the maximum volume has been reached).
Reduce volume	<ul style="list-style-type: none">- Briefly press the button 11 (one signal tone will sound when the minimum volume has been reached).

Function	Action
Mute/Unmute microphone	<ul style="list-style-type: none"> - Briefly press the button [10] to mute/unmute the microphone (one signal tone will sound when briefly pressed).
End the current call and answer call waiting*	<ul style="list-style-type: none"> - Briefly press the ¶ button [4].
Switch between two calls (toggle)*	<ul style="list-style-type: none"> - Briefly press the ¶ button [4] twice.

*These functions must be supported by your mobile service provider.

- When there is incoming call, the LED will briefly flash blue four time per second.
- The ringer and the caller's voice are rendered through the speakers **[2]**.
- Music playback is automatically paused when a call is received.
- The microphone **[3]** records your voice.
- Music continues after the call has been ended.
- Depending on the software version of the mobile phone used, not all the functions described may be available.

● Cleaning and maintenance

⚠ CAUTION

Potential damage to the product!

- Switch the product off and remove all plugs before cleaning!
- Be sure moisture does not enter the product during cleaning to prevent damage to the product and related repairs.

● Troubleshooting

● = Fault

● = Possible cause

○ = Action

● = No functions

● = Battery drained.

○ = Recharge the battery as described in the "Charging the battery" section.

● No Bluetooth® connection

● Error operating the headphones.

○ Switch the headphones off and on again.

● Communication device error.

○ Separate the connection to the headphones and connect again.

○ Check if other devices using Bluetooth® standard ~~5.2~~ or above work with the communication devices.

● Bluetooth® connection error.

○ Move closer to the devices connected via Bluetooth®.

● No sound

● The headphones volume is set to Minimum.

○ Press the button **[12]** to increase the volume.

● Error operating the communication device.

○ Increase the volume on the playback device.

- Bluetooth® connection error.
- Move closer to the devices connected via Bluetooth®.
- Disconnect Bluetooth® and reconnect.
- Unable to use all functions
- Communication device error.
- Verify your communication device supports all functions.

● **Disposal**

Dispose of the packaging through your local recycling facilities and in compliance with all federal, state and local regulations.



Please note the package markings regarding waste separation, indicated by abbreviations (a) and numbers (b), meaning: 1-7: plastics / 20-22: paper and cardboard / 80-98: composite materials.



Contact your local waste management authority for additional information on how to dispose of the used product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage. Information on collection sites and their opening hours is available from your local authority.



Improper disposal of batteries can damage the environment!

Never throw batteries in the garbage. They may contain toxic heavy metals and must be handled as special waste. The chemical symbols of heavy metals are: Cd = cadmium, Hg = mercury, Pb = lead. Used batteries should therefore be disposed of through a local collection point.

● **Three year limited warranty**

What does this warranty cover?

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

What is not covered by the warranty?

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.).
- Tampering with the product (such as removing cover, unscrewing screws etc.)

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

What is the period of coverage and warranty resolution?

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

What will we not do?

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

How to process the warranty?

To initiate, please:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at www.lidl.com/contact-us
or
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

What must you do to keep the warranty in effect?

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

How does state law relate to this warranty?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

