



1. Figure

The EUT-Overall View

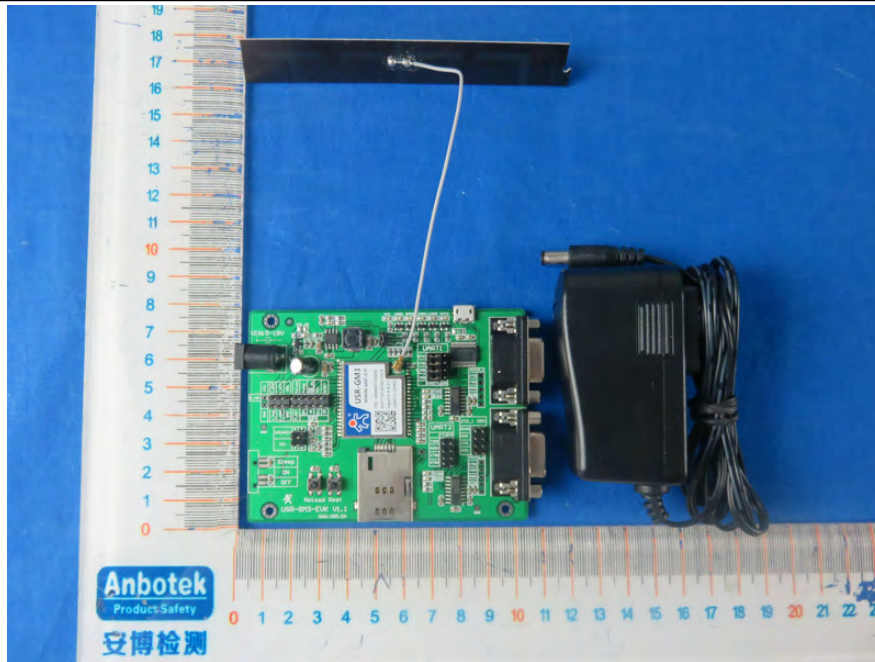

2. Figure


The EUT-Front View

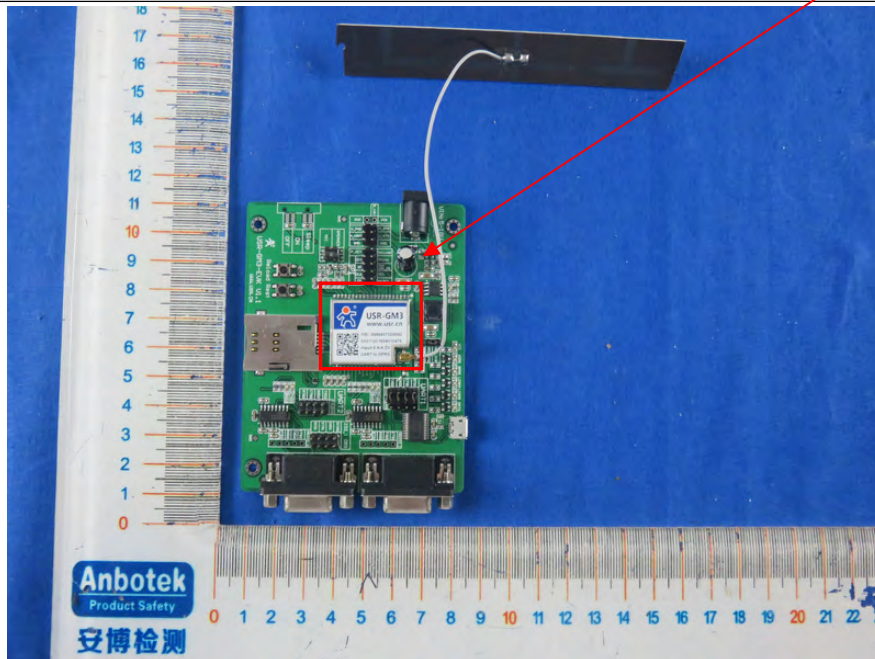

EUT is placed
on the host


3. Figure

The EUT-Back View

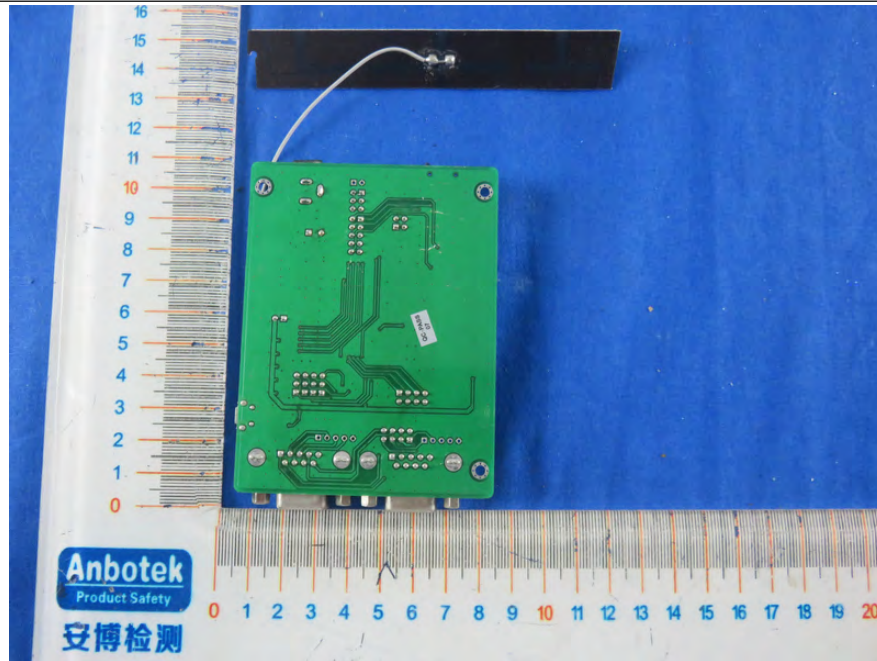

4. Figure

The EUT-Front View

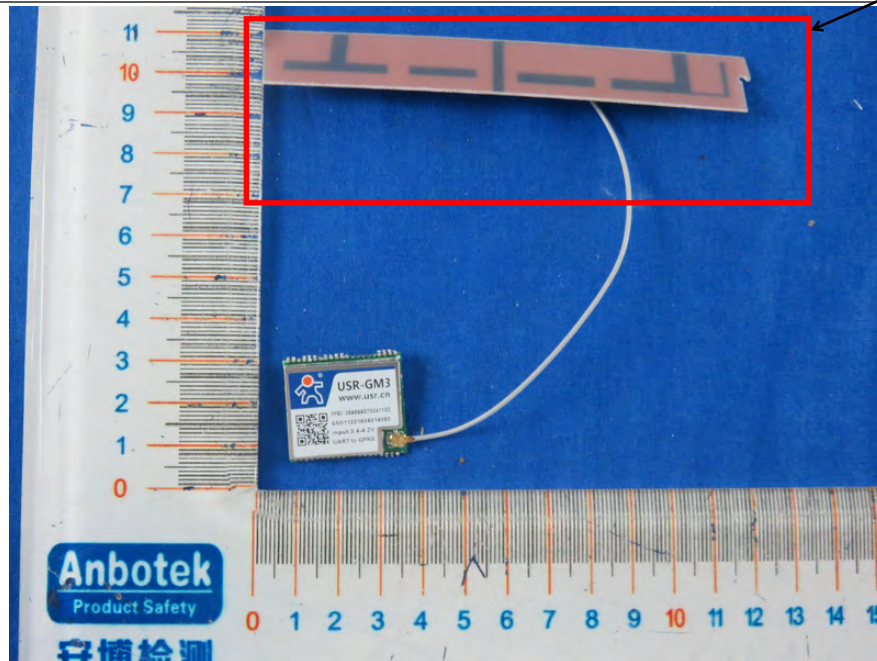

Antenna

5. Figure

The EUT-Back View

