

# **USER MANUAL**

Model : M1029

FCC ID:2AJEA-M1029

## Content

1. Attention.....	3
2 Main function.....	3
3 Appearance and button.....	5
4 First use.....	5
4.1 Battery management and Charge.....	5
4.2 Connection with PC.....	6
5.Equipment operation interface.....	6
5.1 Main interface describe .....	6
5.2 Status bar describe.....	7
5.3 Use touch panel.....	7
6.Equipment basic set setting.....	7
6.1 Silent mode,Volume,Notification ringtone,Audible selection,Screen lock sounds.....	8
6.2 Application.....	8
6.3 Privacy.....	9
6.4 Storage.....	10
6.5 Language & Keyboard.....	10
6.6 Data & time aetting.....	11
6.7 USB mode select.....	11

6.8 About device.....	11
7.Apps Install and manage.....	12
8. Problem Solution.....	13
8.1 Device can't open.....	13
8.2 Device shut down after start up.....	13
8.3 Headset can't hear the voice .....	13
8.4 Can't copy file or play music and so on .....	13

**1. Attention:**

- Please don't be in high temperature, moisture or very dust place

- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- please charge In the following condition,
  - A、 The battery power ICONS shows have no power
  - B、 The system automatically shut off, startup after power off soon
  - C、 Operation buttons no response
  - D、 The machine that the top right corner show red icons

When the device in the format or ongoing upload and download file, please don't suddenly disconnect, this could cause application error.

- Don't disassemble the product, don't use alcohol, Thinner or benzene to scrubbing products
- USB just only be used for data transmission

## **2.Main function**

- Operation systems: Android 5.1


Processor: ALLWINNER A83T

- CPU processor speed: Octa core, ARM Cortex A7 1.8--2.0GHz
- Memory: 16G FLASH
- RAM: 2G DDR3
- WI-FI Function: AP6210, 802.11b/g/n
- BT4.0(BLE)
- TF card: 128M-64GB
- Display screen:10.1inch Capacitive multi-touch

- Resolution: 1920\*1200
- Dual camera: Front:2.0M Pixels; Rear:5.0 M Pixels AF
- Battery and capacity: rechargeable Built-in type polymer battery, 3.8/5500mAh
- USB: 2.0
- G-sensor 3D
- Support Speaker
- Record: built-in microphone
- MIC phone: input
- Video: AVI, MKV(XVID/px/H.263/H.264), MOV, TS, M2TS, RM/RMVB, FLV, 3GP, MPEG1 UP TO MP, MPEG2 UP TO MP, MPEG4 UP TO ASP LEVEL 5.2, DAT, MP4 MVC
- Music: MP3、WMA、APE、FLAC、OGG、WAV
- Pictures: JPG, JPEG, BMP, and PNG
- Recording function: Format supported:WAV Format
- E-book Function: Format Supported:TXT、LRC、PDF、Html、Htm、EPUB
- Working temperature: -5 ~ 40 °C
- Languages: Chinese、English、Japanese、French、German、Spanish、Russian,etc.
- The company reserves the right to improve product, products specification and design have any change, and the information is subject to changes without prior notice.

(This tablet without waterproof function)

### 3. Appearance and button:

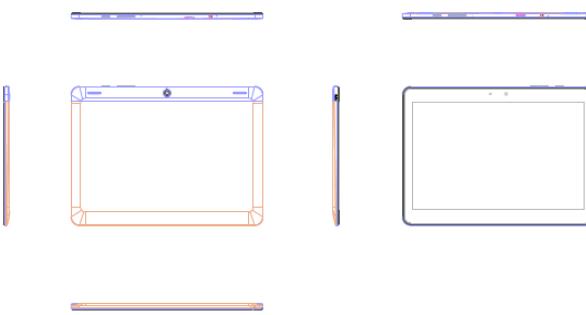

#### I/O Connector

1.Power Switch; 2.Earphone Jack;3.DC Jack;4.micro USB port/USB Host port;5.mini HDMI port;6.TF Card (Micro SD);7.reset

#### 4. First use

##### 4.1 Battery management and charge


Before first use, please set the device's battery is fully charged

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Remark】: This tablet using Built-in type polymer battery. Charge must be to choose standard adaptor (**Adaptor: power supply: DC 5V 2A, adaptor technical data: input AC110-240V,50/60Hz, Max: 500mA, DC5V 2A**)

##### 4.2 Connection with PC

Use USB cable to connect with tablet PC, first turn on, next step click on the left device will pop up the USB connection window; last turn on USB storage to connect to PC

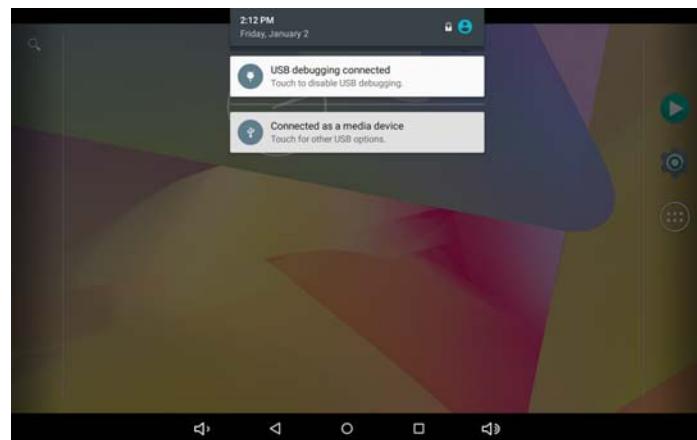

Into the load mode, you can copy; delete the file on the device and the file on the memory card.

## 5. Equipment operation interface


### 5.1 Main interface describe

After startup will enter the main interface, In the main interface, you can:

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box" Choose wallpaper from" as shown below

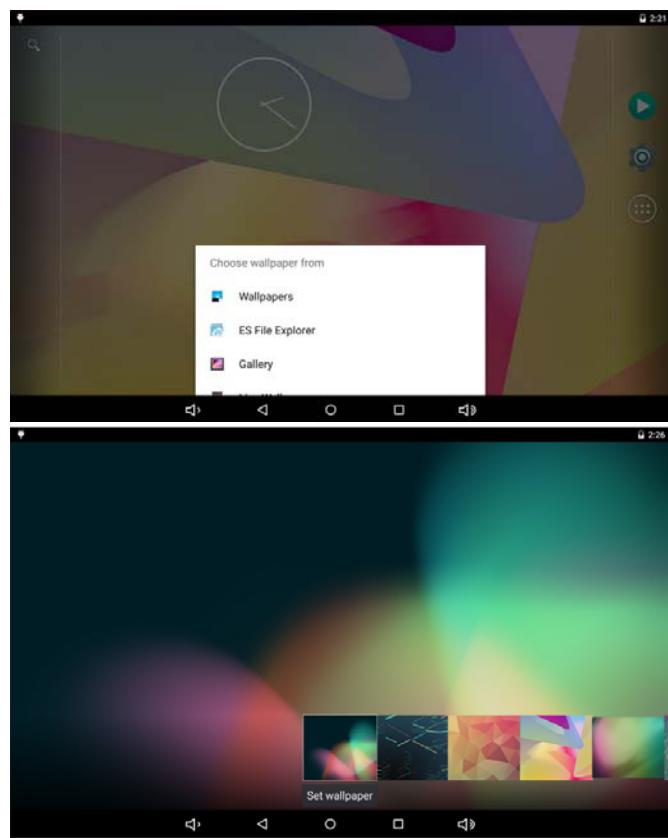

## 5.2 status bar describe

Bottom right display the battery, battery charge icons, current time, Settings Menu

## 5.3 Use touch panel

No matter which interface you are on the screen, can go back to main screen through

pressing the soft key  on the bottom middle corner of the main screen.

In different applications, by tapping the back soft key  on the bottom middle

corner on the touch screen, you can return to its interface on the upfloor. By tapping the


soft key  on the bottom middle corner on the touch screen, tablet pc will be to display the current all running applications.

## 6. Equipment basic set Setting:




Click setting icons

enter setting interface

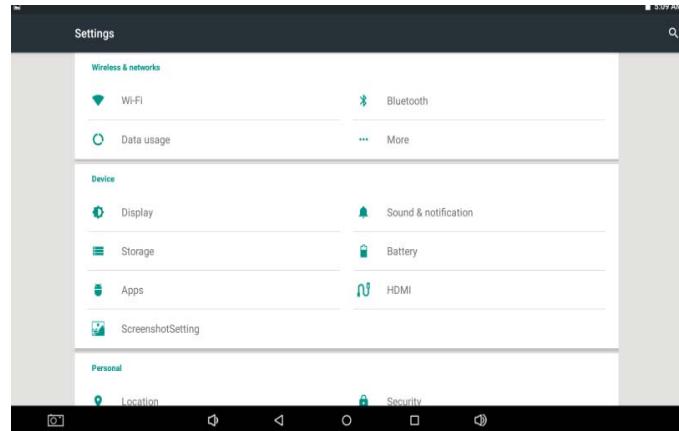

**6.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds.**

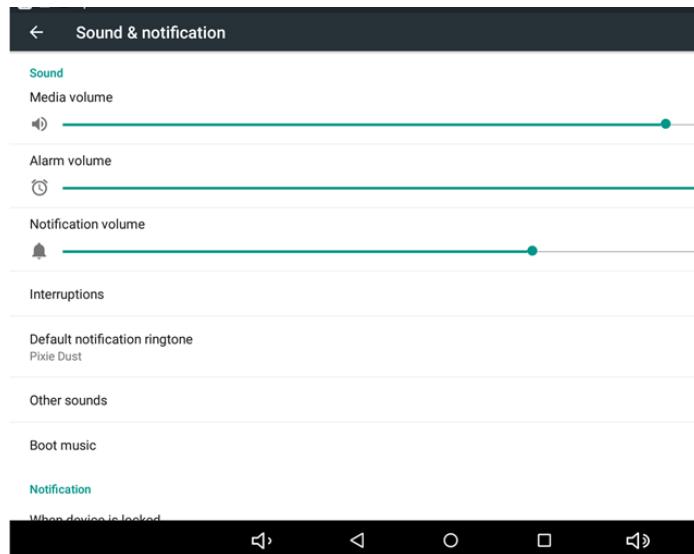

## 6.2 Application

Manage applications



Unknown sources: Click "Unknown Sources", then click "OK"

Manage application: manager and uninstall Application

【Remark】: when you Firmware Upgrade, please close the USB connect

How to uninstall?



A、enter "setting" > "Application" > "Manage application" And then there will be installed the program list

B、Click you want to uninstall icons, will enter the following interface

C、Click Uninstall, then you can delete the application


### 6.3 Privacy

Factory data reset



#### 6.4 Storage


Remove TF card , view of the available storage space

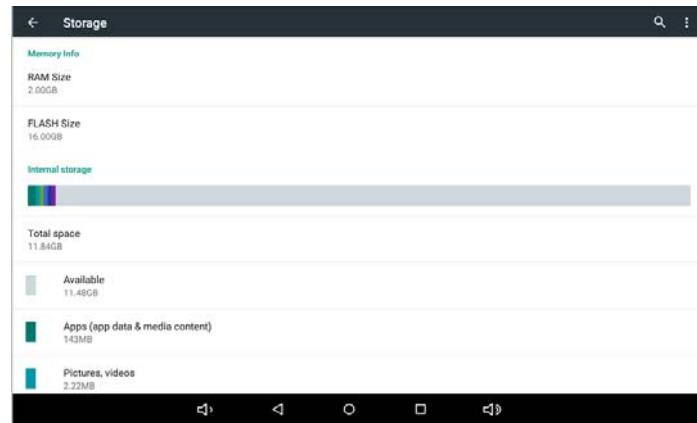

【Remark】: please touch option " delete SD card", so that can safety to remove SD card

#### 6.5 Language & keyboard

Setting: (Language), text input and automatic error correction options;

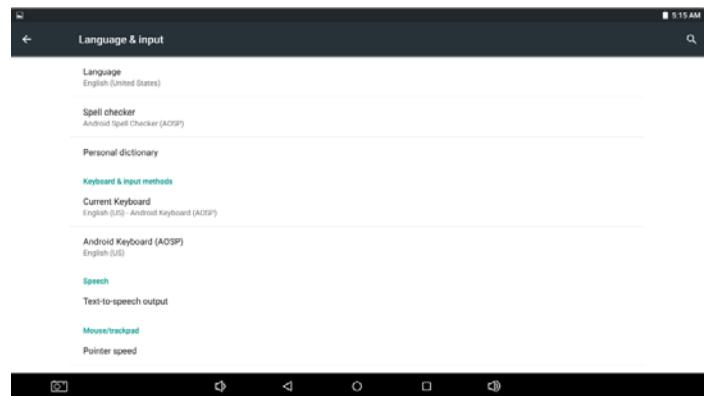

Select Language: 54 kind of national languages are available

## 6.6 Date & time setting


Set date, set time, Select time zone and select date format



#### 6.7 USB Mode Select

Choose USB work pattern: OTG/HOST.....

#### 6.8 About device

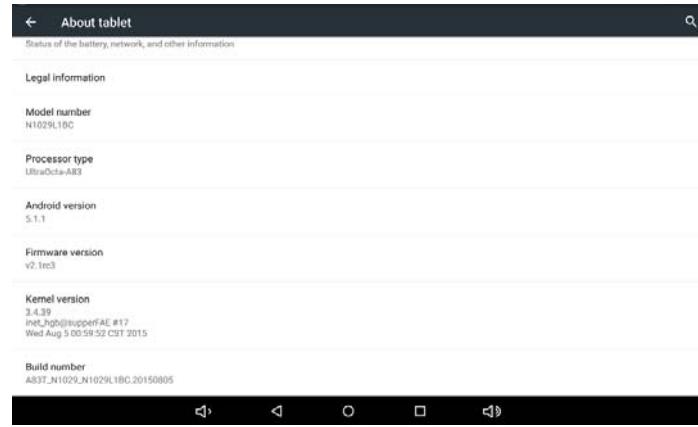


## 7. Apps Install and manage

### App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click App installer icon, will appear Install, manage, Exit options.

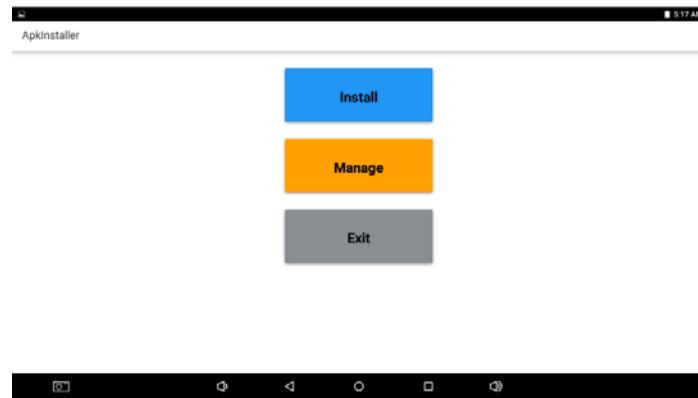

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Select the APP you which you want to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3<sup>rd</sup> APK must install properly by memory card, downloaded 3<sup>rd</sup> party app may not install properly on device.

Manage: click manage, enter third party interface, click install icon, will enter Action interface.

#### **8. Problem solution**

##### **8.1 Device can't open**

**A、** Check the battery power

**B、** Connect adaptor first, then check again

C、Press the "reset" key first, the press "power" key

D、After charging then can't to open, pleas contact with the supplier

#### **8.2 Device shut down after start up**

After startup the screen or the opening picture has been appear, the device appear

shutdown: Power is not enough, please charge

#### **8.3 Headset can't hear the voice**

A、Please check the volume whether set to 0

B、Check the music file whether damaged. Try playing other music.

C、If the file has damaged may lead to serious noise or hop sounds.

#### **8.4 Can't copy file or play music and so on**

A、Please check between computer and device is correct connection

B、check the memory storage space is already full

C、check the USB cable is good or not

D、USB connection is disconnected

#### **FCC STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

\*Reorient or relocate the receiving antenna.

\*Increase the separation between the equipment and receiver.

\*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

\*Consult the dealer or an experienced radio/TV technician for help.

**RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.