


Bluetooth music hat

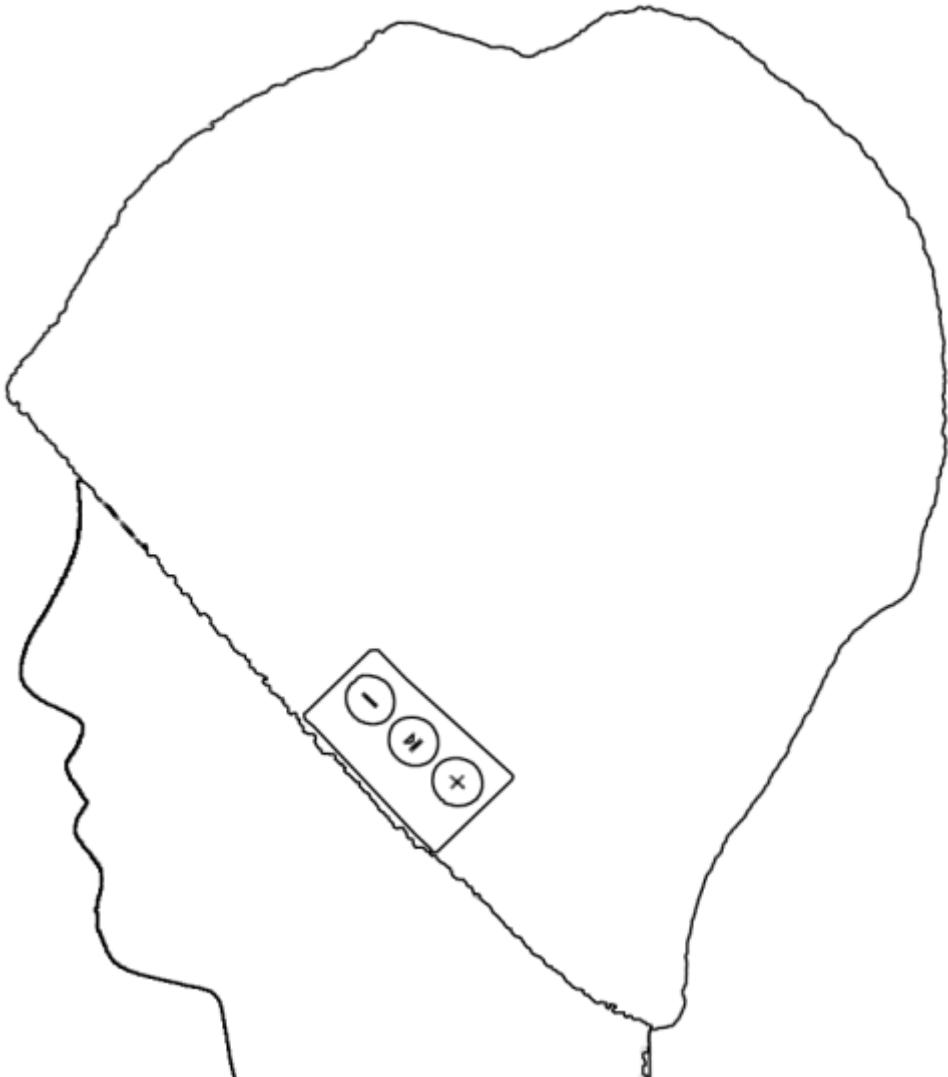

User Manual


FEATURES

1. CSR 4.1 Bluetooth version, available for most of devices with Bluetooth function.
2. Knitted material, fashion and keep warm with answer the phone in winter
3. the hat can be washed.
4. set-in mic, available for cell phone to transmit the speaking phone to your audio devices directly so that the user can hand free answering phone up via the device.
5. set-in Li-ion chargeable battery. Charge via USB cable, long stand-by time.
6. Support power display on IPhone.

SPECIFICATIONS

1. Bluetooth: CSR 4.1
2. Frequency: 2.402GHz-2.480GHz
3. Transmission distance: 10M
4. Transmission distance of mic: <1M
5. Rechargeable Lithium Battery: 130mAH, 3.7V
6. Charging time: 2-3 hours
7. Continues working time: About 6-8 Hours
8. Bluetooth pairing name: bluetooth hat

Function Button and cable

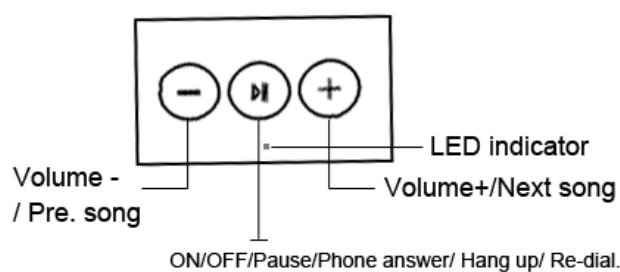

Function specification

Plug USB port of micro into earphone, then connect the USB port of USB cable into computer, at the time the LED light will turn red, when the LED light is off, it means the speaker is fully charged, please pull out the cable.

ON

Press the “” 3 seconds, the device is open once “Blue”LED slowly flash.

OFF

Press the “” 3 seconds again, the device is close while the LED off.

Wireless broadcasting via the device.

1) Pairing & connecting

Press “Power”5 seconds, try to seek the Bluetooth match name of “bluetooth hat” for pairing, while Red and Blue slow flashing in alternative, when the Blue LED slowly flashing seems pairing successful.

2) Automatically Re-pair

Your device can be automatically re-pair promptly once both Devices not cancel the pairing.

3) Automatically search

The device can automatically search when it disconnect to phone or computer

4) Broadcasting/Pause

Once the receiving is broadcasting, Press button” ”, pause the song; press it again to cont the song.

5) Previous song:” ” one time

6) Next song:” ” one time

7) Decrease the sound: continue to press” ”,sound of”do”while sound min

8) Increase the sound: continue to press” ”,sound of”do”while sound max
Phone answer

1) answering phone up: Press” ”one time to pick phone up.

2) Hang-up: Press” ” again to hang it up.

3) R-dial phone: Press” ” two times to re-dial the latest phone number directly.


Power save mode

The device will be off automatically after 3 minutes no working device pairing it.

Low power warning

The device alarming as “do” while is working seems the power not enough, need to be charged.

Using the USB Cable.

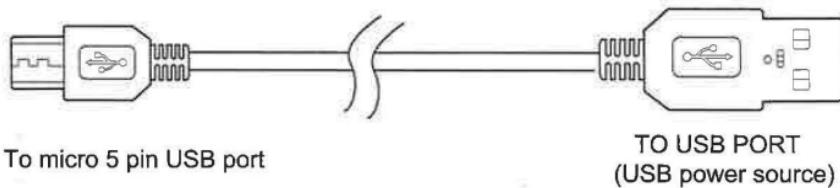

Notes

1. Please use and store the device far away acidic, alkaline and cuspidal things
2. Please keep the device dry
3. Please keep the device clean and put desiccant in it after using
4. Please remove the earphone before wash
5. Please do not disassemble, amend or alter device alone.
6. Please do not throw or drop

Accessories

Bluetooth music hat	1set
User manual	1pc
USB Charging cable	1pc

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates, uses

instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

-- Consult the dealer or an experienced radio/TV technician for help.