

MVOICE 5000-B USB/Bluetooth Conference Speakerphone


Welcome!

MVOICE series speakerphone is specially designed to fulfill the customers' increasing demand for web-conferencing calls, hands-free calls and teleconferencing. MVOICE 5000-B USB/Bluetooth speakerphone can connect to computer with USB cable for audio and video conference based on internet application, or connect to mobile phone or tablet via Bluetooth to realize wireless hands-free teleconference.

Highlights and features

- Connect to PC via USB.
- Connect to mobile device via Bluetooth.

- Three built-in 360° coverage microphones.
- Hi-Fi sound quality.
- DSP noise and echo cancellation.
- Low power consumption.

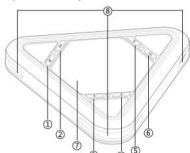

1. Mute speaker
2. Mute microphone
3. Volume up
4. Volume down
5. Bluetooth
6. Battery level / Choose microphone
7. Speaker
8. Microphones

Connecting to PC or laptop

Plug and play, simply connect the MVOICE 5000-B to the USB port on your PC with USB cable. Support Windows XP, Windows Vista, Windows7/8/10 etc.

Attention: MVOICE 5000-B works excellently in web-conferencing via Skype or other VoIP software. The PC can automatically recognize the MVOICE device, but you may need to choose MEETEASY USB AUDIO in application software. For example, you would need to choose MEETEASY USB AUDIO in Skype audio setting section.

Connect to mobile device

Press and hold (2secs) the Bluetooth button ⑤ until the light flashes blue. Enable Bluetooth on your mobile device, and select "Meeteasy" from the list of available Bluetooth devices. The light turns solid blue when the connection is established.

Turn off the Bluetooth function

Press and hold (2secs) the Bluetooth button ⑤ and then the Bluetooth function will be closed.

Answer /Reject a call via Bluetooth

Short press ⑤ to answer the incoming call, long press ⑤ to reject the incoming call. When in a connected call or dialing, short press this button could hang up the call.

Mute the speaker

Press the button ① can mute the speaker, the button turns orange

Mute the microphones

Press the button ② can mute the microphones all, the button turns orange

Increase the volume

Press the button ④ can increase the volume level

Decrease the volume

Press the button ③ can decrease the volume level

ON/OFF button

Turn the button to ON side, the MVOICE 5000-B can be powered by built-in battery. ON/OFF state will not affect the USB charging and USB connectivity to PC.

Attention: Please keep it OFF to save battery power if the unit is not using.

Separate microphone selection

In normal room conditions, the reception distance can reach to 3 meters. Built-in three microphones provides with 360-degree coverage.

For group meeting, all three microphones open can make proper audio reception of all participants. In a conference room with weak sound absorption and strong acoustic reflection (particularly the glass rooms), and the talker is far from the microphones, the microphones will receive the echo from different directions, which is impossible to eliminate completely. The other side of the conference may hear unclear voice. Speak close to the microphone and use only one microphone pointed to the speaker can receive the voice more clearly. Press (5) button could turn on one microphone and mute two others in turn. The operating microphone's indicator turns orange.

Charging the speakerphone

The speakerphone is equipped with a 700mAh battery, which would last for over 4 hours of talk time.

When the battery indicator (5) turns orange and flashes, less than 10 minutes talk time remain. Plug the MVOICE 5000-B with USB cable to USB port on PC or charging adapter to charge the battery.

Charging safety

Charging starts once the MVOICE 5000-B is connected to PC.

Attention: If a charging adapter is used, please make sure it is qualified and the output voltage less than 5V.

Specification:

System requirements	Windows XP/ Windows Vista Windows7/8/10 etc.
Connections	USB version 2.0
Max volume	83dB
Speaker frequency	30-16KHz
Microphone frequency	30-16KHz
Power voltage	5V DC
Power consumption	300mAh max.
Battery capacity	700mAh
Operating temperature	5°C-40°C
Storage temperature	-30°C-55°C
Accessories	6ft USB cable/ User Guide Protective bag/Gift box
Compliance	RoHS/FCC/CE

For more information, please visit

www.meeteasy.com.hk

MVOICE 5000-B

USB/Bluetooth Conference Speakerphone
User Guide



Meeteasy Technology Limited

Add: 6F Jianda Building, Keyuan Road, Science and Technology Park, Nanshan District, Shenzhen, 518057, China
Tel: (+86) 755 8884 1883
Fax: (+86) 755 2690 5650
E-mail: info@meeteasy.com.hk

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note 2: 1. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. The minimum separation generally be used is at least 20 cm.