 





## 单频道遥控器 使用说明书

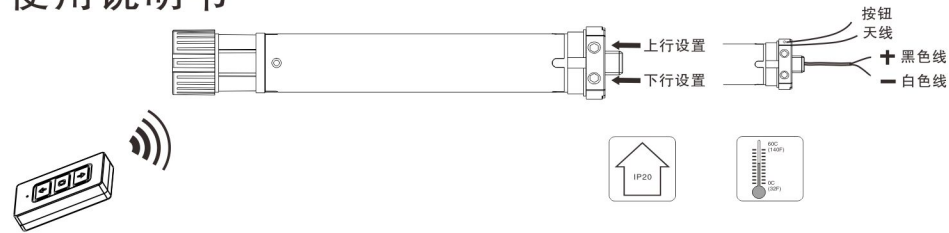


### 产品特点

 额定功率	1.5mW
额定电压	3V
待机电流	<1uA
工作频率	433.92MHz
工作温度	-10°C~+50°C
接收灵敏度	-110dBm
控制范围	空旷环境下无线传输距离<25M

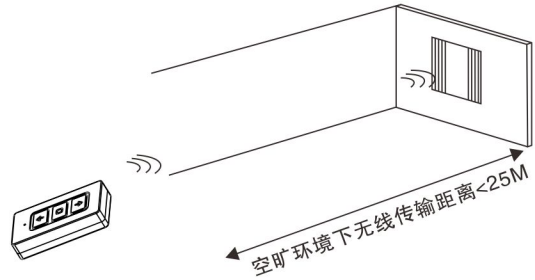

### 遥控器型号和尺寸

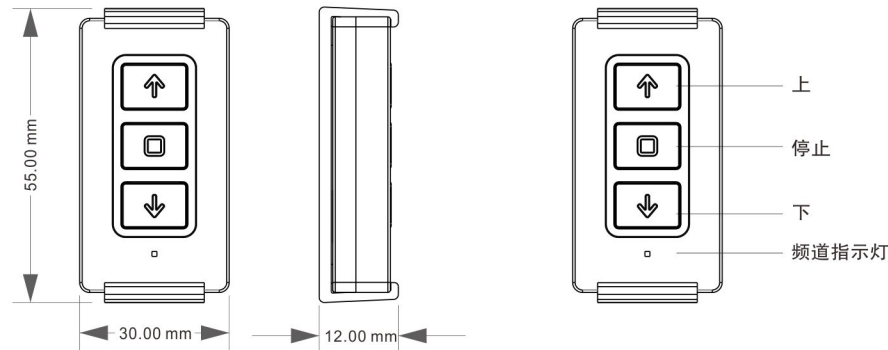 


### 遥控器设置

#### 遥控器ID登陆：

1.长按外引线上的按键约3秒钟，电机上下微动 1 次，此时进入对码状态。



 2.选定遥控器上所需ID登陆的频道，按一下遥控器背面ID键，按住“□”键，遥控器指示灯闪烁。

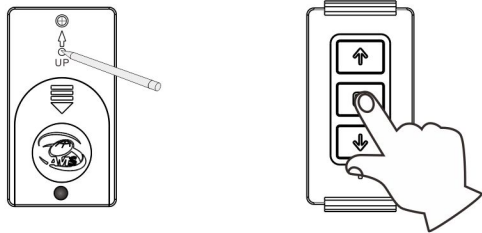

3.完成操作后电机自动退出上述状态，如果10秒内无操作电机也会自动退出上述状态，同时电机也会上下微动一次。

#### 遥控器单频道删除：

 
选定遥控器上所需删除的频道，按一下遥控器背面ID键，按住“↓”键，遥控器指示灯闪烁。

#### 电机正反转切换：

选定遥控器上所需切换的频道，按一下遥控器背面ID键，按住“↑”键，遥控器指示灯闪烁。

### 遥控器电池更换

用大拇指稍用力推出后滑盖，轻松置入电池（有字面向上放置）。

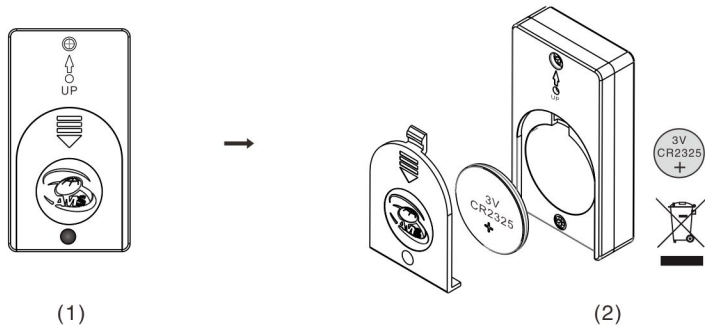


### FCC要求：

该设备符合联邦通信委员会规则的15部分。  
操作有以下两个条件：（1）此设备可能不会造成有害干扰，  
（2）此设备必须接受任何干扰，包括可能导致不希望操作的干扰。



 
## SINGLE CHANNEL REMOTE CONTROLLER

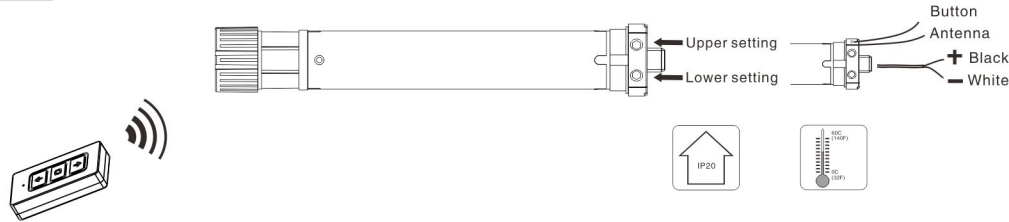


### Products features

 Rated power	1.5mW
Rated voltage	3V
Rated current	0.5mA
Working frequency	433.92MHz
Working temperature	-10°C~+50°C
Receiving sensitivity	-110dBm
Control range	launch distance <25m without obstacles

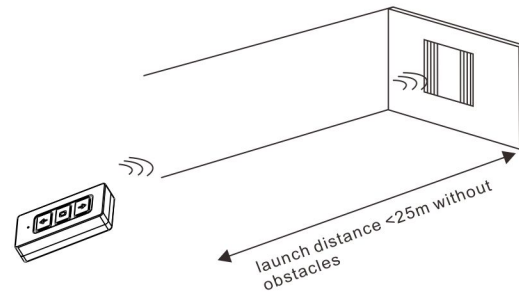

### Controller model and size

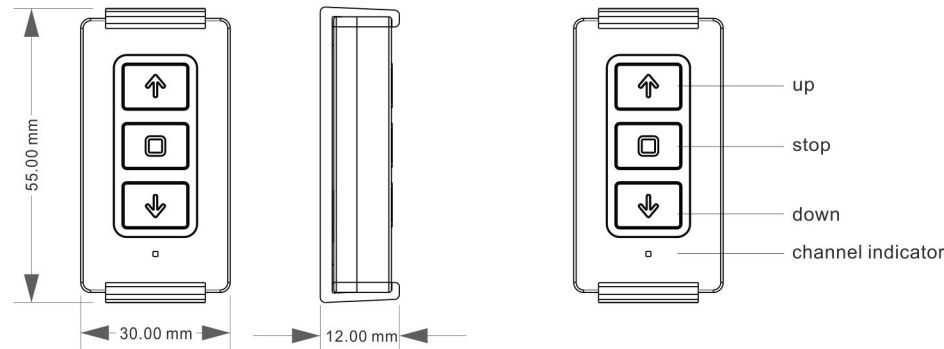 


### The remote control setting

#### The ID login of the remote control:

1. Clicking the button of the outer lead about 3s.when the motor shake up and down one time,it will start code.



 2. Select the channel which need the ID login of the remote control,then click the ID button that on the back of the remote control.Next clicking the “□” button, the light of the remote control will flash.

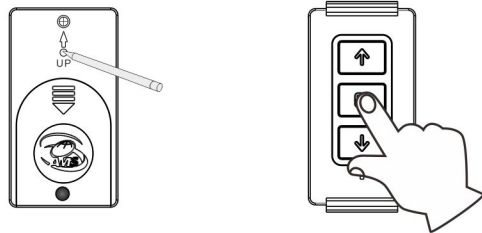

3. The motor will automatic quit the condition above after finishing the operation . If there's no operate on the motor during 10s,the motor also automatic quit the condition above,the motor will slightly move one time up and down at the same time .

#### Delete the single channel of the remote control

 
Select the channel which need to delete on the remote control.Then click the ID button on the back of the remote control,next click “↓” ,the light of the remote control will flash.

#### Positive&negative switch of the motor

Select channel which all need to switch,click the ID button which on the back of the remote control,then click “↑” button,the light of the remote control will flash.

### How to replace battery

With the thumb slightly pushing the sliding cover, easy placement cell (there are literally placed upward)

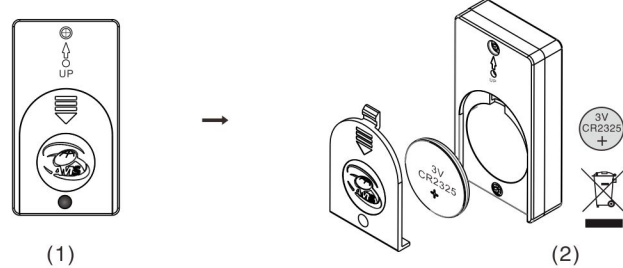

### FCC Requirement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.