




Product function manual

Smart home

HJH55 Ble

一、 Remote control button silicone diagram

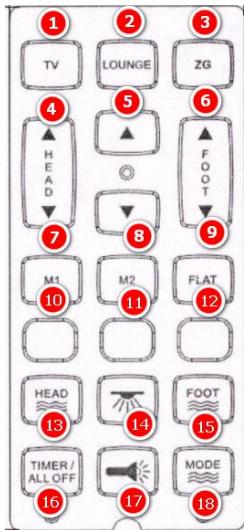

二、 Remote control function description

Button label	Function
1	Short press and release to run to TV position. Multiplexing function: FLAT+TV button, the backlight flashes, the buzzer sounds, and the current motor position is recorded to the TV position.
2	Short press and release to run to LOUNGE position. Multiplexing function: FLAT+LOUNGE button, the backlight flashes, the buzzer sounds, and the current motor position is recorded to the M1LOUNGE position.
3	Short press and release to run to ZG position. Multiplexing function: FLAT+ZG button, the backlight flashes, the buzzer sounds, and the current motor position is recorded to the ZG position.
4	The head motor extends.
5	Once the external drag rises, release it to stop. (lumbar support)
6	The foot motor extends.
7	The head motor retracts.
8	Once the drag is lowered, release it to stop. (lumbar support)
9	The foot motor retracts.
10	Short press and release to run to the M1 position. Multiplexing function: FLAT+M1 button, the backlight flashes, the buzzer sounds, and the current motor position is recorded to the M1 position.

11	Short press and release to run to the M2 position. Multiplexing function: FLAT+M2 button, the backlight flashes, the buzzer sounds, and the current motor position is recorded to the M2 position.
12	One key reset, all motors retract to the minimum stroke position
13	Head massager enhancement: press the button, if the head massager is not activated, start the head massager and enter the "CONSTANT" mode; if the head massager motor is activated, increase the vibration intensity of the massager, 1→2→3→Off, cycle switching.
14	Under bed light on/off
15	Foot massager enhancement: press the button, if the foot massager is not activated, activate the foot massager and enter the "CONSTANT" mode; if the foot massager motor is activated, increase the vibration intensity of the massager, 1→2→3→Off, cycle switching.
16	Multiplexed function button: Before pressing the button, if the massager is in working state, then press the button to turn off all the massagers, and set the timing of the next massage motor working time to 10min, 20min, and 30min respectively. The timing time is displayed by the indicator light. If the massager is not working, it will directly time the working time of the next massage motor.
17	light up the flashlight
18	Mode switch---CONSTANT-PULSE-WAVE , Adjust the massage motor mode, after the massager has been turned on, press this button, the massage motor that has been working will enter the "PULSE" mode, after pressing the button again, the massage motor will enter the "WAVE" mode, press the button again, the massage motor will enter the "PULSE" mode. CONSTANT mode, cycle in turn
<p>Coding method: [Remote head lift + foot lift (4,6) + control box pairing key] The buzzer sounds, indicating that the pairing is successful.</p>	

Precautions:

To protect the reliability and safety of the motor and control box, do not switch the buttons frequently.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.