




Product function manual


Smart home

HJH159B Ble

一、 Remote control button map

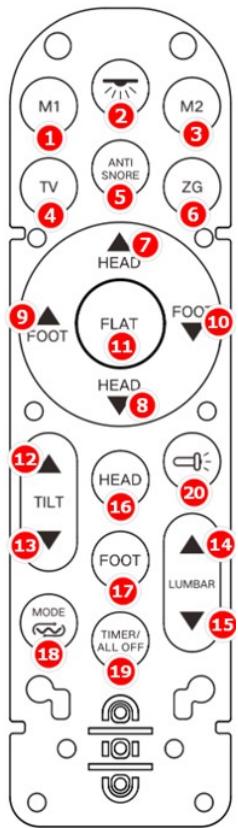

二. System configuration diagram

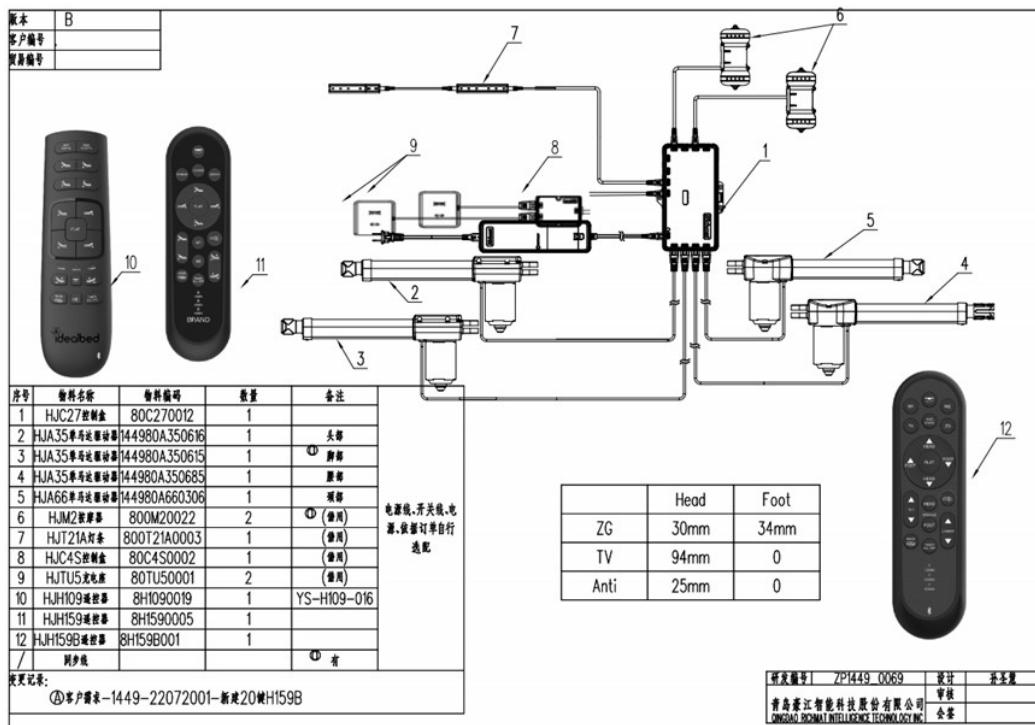

三、 Remote control function description

buttons	function
1	Short press to run to M1 position (with initial setting). Press and hold (FLAT+ M1) to memorize current position as new M1 position, backlight blinks and buzzer sound (new M1 position will be cleared when power-off)
2	Under-bed light on/off (5 minutes off)
3	Short press to run to M2 position (with initial setting). Press and hold (FLAT+ M2) to memorize current position as new M2 position, backlight blinks and buzzer sound (new M2 position will be cleared when power-off)
4	Short press to run to TV position (with initial setting). Press and hold (FLAT+TV) to memorize current position as new TV position, backlight blinks and buzzer sound (new TV position will be cleared when power-off)
5	Short press to run to SNORE position (with initial setting). Press and hold (FLAT+SNORE) to memorize current position as new SNORE position, backlight blinks and buzzer sound

	(new SNORE position will be cleared when power-off)
6	Short press to run to ZG position (with initial setting). Press and hold (FLAT+ZG) to memorize current position as new ZG position, backlight blinks and buzzer sound (new ZG position will be cleared when power-off)
7	Press and hold to extend head motor, release to stop
8	Press and hold to retract head motor, release to stop
9	Press and hold to extend foot motor, release to stop
10	Press and hold to retract foot motor, release to stop
11	Press to retract all motors to 0mm stroke, system will automatically FLAT when power-on
12	Press and hold to extend tilt motor, release to stop
13	Press and hold to retract tilt motor, release to stop
14	Press and hold to extend lumbar motor, release to stop
15	Press and hold to retract lumbar motor, release to stop
16	Enhanced head massager, can also turn the massager on (auto-off after 30 minutes) (1→2→3→4→5→6→7→off cycle)
17	Enhanced foot massager, can also turn the massager on (auto-off after 30 minutes) (1→2→3→4→5→6→7→off cycle)
18	Adjust the massage motor mode, after the massager has been turned on, press this button, the massage motor that has been working will enter the "PULSE" mode, after pressing the button again, the massage motor will enter the "WAVE" mode, after pressing the button again, the massage motor will enter the "PULSE" mode. In the "CONSTANT" mode, after pressing the button again, the massage motor enters the "PULSE" mode, which will cycle in turn.
19	Massager turned off. The working time of the massager is set at 10min, 20min and 30min respectively, and the timing time is displayed by the indicator light.
20	Press to turn on flashlight, release to turn off

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.