






Product function manual









 


Smart home
HJH92S B1e





一、 Remote control button map



二、 Remote control function description

Button label	Features
	<p>Press the flashlight to light up, release the flashlight to extinguish (default 10S)</p> <p>Reuse function:</p> <p>① Press and hold the key for 5s, the backlight will flash and enter the memory mode. Press ZG/SNORE/M1 within 2s, the buzzer will ring, and the current motor position, the status of the massager and the light bar can be memorized.</p> <p>② Press and hold the flashlight+LOCK for about 11s at the same time, the backlight will flash, and all the buttons on the remote control will enter the one button release mode. You can reset all the memory positions to the factory default memory positions at the same time.</p> <p>③ At the same time, press and hold the flashlight+FLAT for about 6s, the backlight flashes, all buttons on the remote control enter the continuous pressing mode, and release the button to stop the motor.</p>
	The head motor extends and stops when it is released
	Head motor retracted, released and stopped

	<p>Press the key for about 5s, the backlight flashes for 3 times, and the remote control is locked (except for the flashlight, the other keys are locked, and the backlight flashes when pressing);</p> <p>Press the button for about 5s, the backlight flashes 3 times, and the remote control is unlocked;</p>
	FLAT one button reset, all motors retract to the minimum stroke position, close the massager, and keep the state before pressing the button (no reset when powered on)
	The foot motor extends and stops when it is released
	Foot motor retracted, released and stopped
	Bedlight on/off (always on)
	Head and foot motors extend, release and stop
	Head and foot motors retract, release and stop
	<p>The motor runs to the SNORE position with one key. In the one key release mode, the motor is leveled and closed 15 minutes later. Press any key to exit the timing; The continuous pressing mode has no timing.</p> <p>Reuse function: long press the flashlight for about 5s, the backlight will flash, press SNORE within 2s, the buzzer will ring, and the current motor position, massager and light bar status will be recorded to SNORE. (Power off without clearing)</p>
	<p>The motor runs to the ZG position with one key.</p> <p>Reuse function: long press the flashlight for about 5s, the backlight will flash, press ZG within 2s, the buzzer will ring, and the current motor position, massager and light bar status will be recorded to ZG. (Power off without clearing)</p>
	<p>The motor moves to the M position with one key.</p> <p>Reuse function: long press the flashlight for about 5s, the backlight will flash, press M within 2s, the buzzer will ring, and the current motor position, massager and light bar status will be recorded to M. (Power off without clearing)</p>
	If the head massager is not opened, press the key to open the massager. The massager defaults to the state when it was last closed. If the massager is opened, press the key to increase the strength of the head massager

	Press the key to lower the strength of the head massager, 3 strengths, and press the massager again to close when the minimum strength is reached
	If the foot massager is not turned on, press the key to turn on the massager. The massager defaults to the state when it was turned off last time. If the massager is turned on, press the key to increase the strength of the foot massager
	Reduce the strength of the foot massager by 3. When the strength reaches the minimum, press the massager again to close
	Mode switching -- CONSTANT Low speed WAVE Medium speed WAVE High speed WAVE Strength remains unchanged after mode switching

Coding method:

Single control box/single remote controller: press the head up and foot down buttons until the backlight flashes, and clear the code matching information of the remote controller; Power on the control box again, and the control box will be in the code matching state within 60s. Keep pressing the head down and foot up buttons of the remote control until the buzzer rings and the backlight flashes, indicating successful code matching

Note: If any key is pressed for more than 50s, the remote control will go into sleep. If it is released and pressed again, the function can be resumed (if it is pressed for 3s, the backlight will flash all the time, and if it is pressed for 50s, the remote control will go into sleep)

Precautions:

To protect the reliability and safety of the motor and control box, do not switch the buttons frequently.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.