

System User Manual

2025-08.29

Version Change Logs


Version	Change Date	Brief Description	Remarks
V1.0	2025-09-06	Initial Release	

Conventional functions

Description of Remote Control Functions

Remote Control Model: HJSR38 Ble

Remote Control Printing:

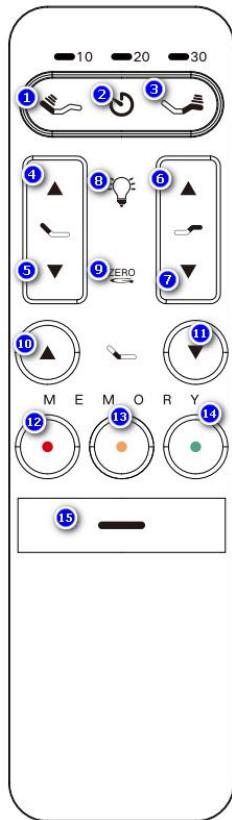

Key	Function	Definition
4	Back Lift	The back motor extends. Release to stop.
5	Back Lowering	The back motor retracts. Release to stop.
6	Leg Lift	The leg motor extends. Release to stop
7	Leg Lowering	The leg motor retracts. Release to stop.
10	Lumbar Lift	The lumbar motor extends. Release to stop.
11	Lumbar Lowering	The lumbar motor retracts. Release to stop.
15	FLAT	One-Click Reset: All motors operate to the horizontal position with a

		single press.
12	M1	<p>M1 Position Button: All motors operate to the M1 position with a single press.</p> <p>Memory Function: Press and hold the button for 3 seconds until the backlight flashes and the buzzer beeps; the positions of all motors will be saved to M1. (Retained after power-off)</p>
13	M2	<p>M2 Position Button: All motors operate to the M2 position with a single press.</p> <p>Memory Function: Press and hold the button for 3 seconds until the backlight flashes and the buzzer beeps; the positions of all motors will be saved to M2. (Retained after power-off)</p>
14	M3	<p>M3 Position Button: All motors operate to the M3 position with a single press.</p> <p>Memory Function: Press and hold the button for 3 seconds until the backlight flashes and the buzzer beeps; the positions of all motors will be saved to M3. (Retained after power-off)</p>
9	ZG	<p>ZG Position: Press the button once, and all motors operate to the ZG position with a single command.</p> <p>ZG Memory: Press and hold the button for 3 seconds until the backlight flashes and the buzzer beeps; the current positions of all motors will be recorded to ZG. (Cleared after power-off)</p>
8	Under-Bed Light	Turn On/Turn Off the Under-Bed Light
1	Head Massager Enhancement	Press the button. If the head massager is not activated, it will start up and enter the "CONSTANT" mode; if the head massage motor is already activated, it will increase the vibration intensity of the massager, following the cycle: Level 1 → Level 2 → Level 3 → Off.
2	Foot Massager Enhancement	Press the button. If the foot massager is not activated, it will start up and enter the "CONSTANT" mode; if the foot massage motor is already

		activated, it will increase the vibration intensity of the massager, following the cycle: Level 1 → Level 2 → Level 3 → Off.
3	TIMER	<p>1、Press the button to set the working time of the massage motor. The available settings are 10min, 20min, and 30min. The timer is displayed via three indicator lights, with a default setting of 30 minutes.</p> <p>2、When the button is pressed for the 4th time to turn off [the timer], both the time indicator lights and the massager will be turned off.</p> <p>3、Press the time button, and the head and foot massagers will turn on and default to Level 1.</p>

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.