


Bluetooth speaker

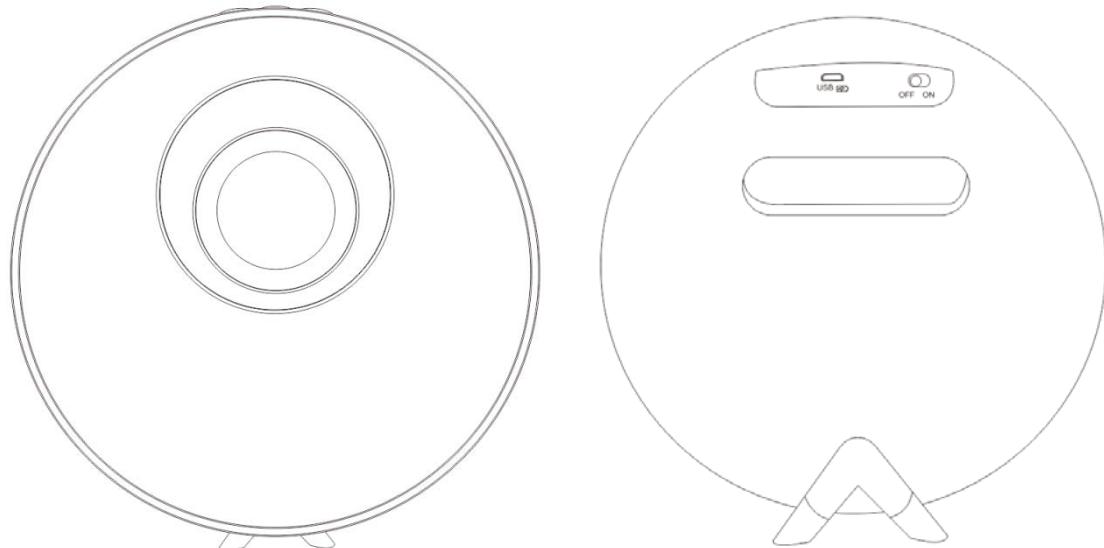

Carefully read operate manual to operate this unit properly, and keep this manual handy for future reference.

Specifications

Output voltage: 3.7V---4.2V

output power: 52MM, 5W*2

Input: 5.0V

Loud speaker: 4Ω /5W*2

Signal and noise ratio(SNR) ≥ 80 db

Frequency Response: 20HZ-20KHZ

Output distortion rate $\leq 0.5\%$

Battery: 2400mAH(built-in lithium battery)

Bluetooth standards: Bluetooth 4.1

Transmission distance >10M
(A straight line without blocking state)

Charging time: 3 hours (Please extend the charging time when first charge)

Playing time: 3 hours

Product Size: 20*7.0cm

.BT Speaker With Built in Mic for Hands free calling

.Micro SD slot (Suggested Max Capacity 8GB for SD Card or USB)

.Charge & Aux cable included

Power supply for Unit

Connect one end of the supplied cable to DC 5v jack and other end to USB power outlet (5v adapter not included), will charge the built in battery at same time can play unit.

.For best results (or to charge faster) do not use the unit while it is charging.

.Please charge the unit before using.

Operating BT

1. Turn the unit ON. You will hear the message "Dong".

2. After you hear the message you will be able to scan for "A8" from your Bluetooth enabled device and pair with your speaker.

3. To control the volume long press button **V+** (to raise the volume) or **V-** (to lower the volume). The sound quality off the speakers will depend on the quality of your music files and on the distance of external Bluetooth enabled device from the speaker.

4. When connected to Bluetooth enabled device, short press **V-** to play the previous track and short press **V+** to listen to the next track. Tracks can also be changed through Bluetooth enabled device.

5. To pause or release pause, press **▶▶** from speaker. Alternatively you can also pause/release pause from your external Bluetooth enabled device connected to speaker.

6. When connected to speaker using Bluetooth through your cellphone,in the unit's control panel press  to receive a call or disconnect call.

7. While using the hands free feature the suggested maximum distance from of mic is 12"(30cm).

8. Please remember to turn OFF the power of the speaker after use.

9. When using the Bluetooth feature,make sure Micro SD card is not connected.

Operating Micro SD

1. Turn the unit ON. Plug in your Micro SD Card in the slots provided. You will hear the message "MUSIC". Please make sure you use the correct file format in your media devices-MP3 FILES ONLY.

2. To control the volume long press button  (to raise the volume) or  (to lower the volume) . The sound quality off the speakers will depend on your MP3 files.

3. To change tracks short press  for previous track and short press  for next track.

4. To pause or release pause,press the button at position .

5. Please remember to turn OFF the power of the speaker before removing the Micro SD Card.

Warm Tips

1. In order to avoid damage to your hearing and prolong the speaker's use-life,please don't listen to music for long time in high volume environment.

2. When a fault occurs,please immediately turn off the power switch,unplug the USB plug,prevent speaker and other components damaged.

3. Over use of battery will affect the Bluetooth distance and use-life,please charge in time.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **E-far Digital (Shenzhen) Co., Ltd.** may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.