


Location of Controls:

1.  ON/OFF/Play/Pause/Telephone Button
2.  M Button
3.  Volume+
4.  Next
5.  Volume-
6.  LED ON/OFF
7.  Previous
8. State Indicator/Charging Indicator
9. Built in Microphone
10. Aux in
11. TF card reader
12. Micro USB port(For charge only)

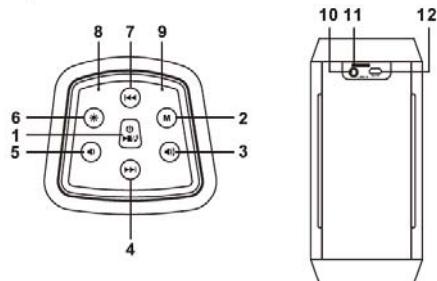

OPERATION:

General operation:

1. Power on the unit by press and hold the  Power ON/OFF Button approximate 3 seconds.
2. Press the Button to turn  LED ON/OFF the decorative light.
3. Press and hold the  Volume- or  + Button to adjust volume level.
4. When finish listening, press and hold the  Power ON/OFF Button to shut off.

BT(Bluetooth) mode

The first time you use the unit or pair it to a new Bluetooth Device, please follow these instructions:

1. Power on the unit as previous procedures.
2. The unit will enter to Bluetooth mode automatically. The Blue Indicator on the rear of unit will light and blinking.
3. Power on the external Bluetooth Device and enter to searching mode. Start pairing following the on screen instructions from the external Bluetooth device. After paired, the Blue Indicator will stop blinking.

Notes:

- When the external BT player searched the unit, our model number "A039" will appear on the display of external BT device.
- Pairing code "0000" or "1234" may need to enter.

Normal operation after pairing:

1. Power on the unit as previous procedures.
2. The unit will enter to Bluetooth mode automatically. Wait a few seconds until the Blue Indicator stop blinking.
3. Plays the music in the connected Bluetooth Device as usual.
4. During playback:

Press and release the Next or Previous Button repeatedly to skip tracks.

Press the Play/Pause Button to pause, press again to resume normal playback.

AUX IN:

To listening from the external Music player such like MP3 Player, Discman ...etc.

1. In power on mode, connect the 3.5mm stereo Plug from the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio player.
2. Connect the other end to the AUX(IN) Jack on the rear of unit as the figure below:
3. Plays the music on the connected Player as usual. (Make sure the volume level of the connected music Player is turned to high level. Otherwise, sound from this unit is weak)

NOTE: If the Audio Connection Cable was plugged in the AUX (In) Jack, the BT function will auto cut. Unplug the Cable from the AUX (In) Jack before use BT function.

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

Accessories:

- 1 x Instruction Manual
- 1 x USB Connection cable (For charge only)
- 1 x Audio Cable

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by E-far Digital (Shenzhen) Co., Ltd. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.