



X1-BT

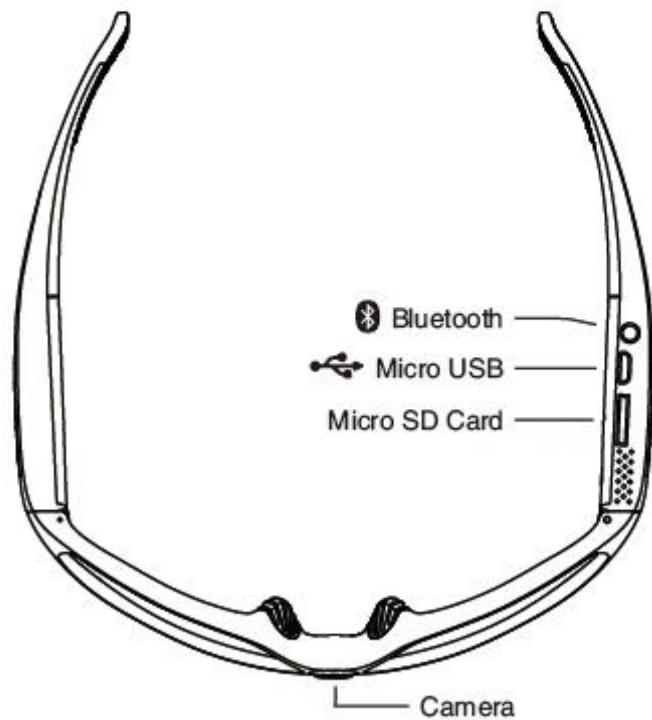

**Quick Start**  
**User Guide** v1606

## Overall of Controls

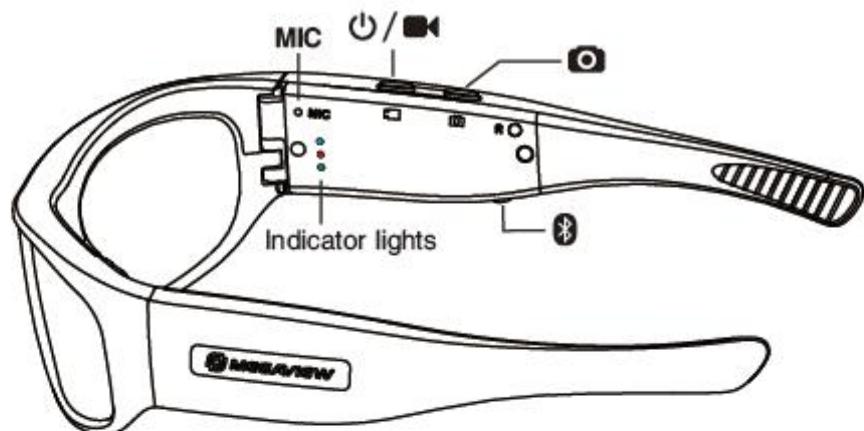


## Controls of Video / Photo

Status	Controls	Indicator
Power On	Press  and hold for 3 sec	Solid Red to solid Blue
Take Video	Auto Recording after Power on	Solid Blue
Stop Recording	Press 	Solid Red
Power Off	Press  and hold for 3 sec	Flash Red&Blue to Off
Charge	Connect to a PC or Mac USB port	Solid Red
Fully Charged	(Connected with USB)	Solid Green
Memory Full	(Automatically Power Off)	Flash Red/Blue to Off
Low Battery	(Automatically Power Off)	Flash Red/Blue to Off
PC Camera	Press  and hold for 3 sec (Not available for Mac OS)	Solid Red
Reset	Press  and  at the same time	

## Charge


Use the supplied USB cable to connect your glasses to a running computer and charge the glasses. The indicator shows solid red during charging.

Allow to charge for a minimum of 3 hours (until the indicator light turns solid green.)

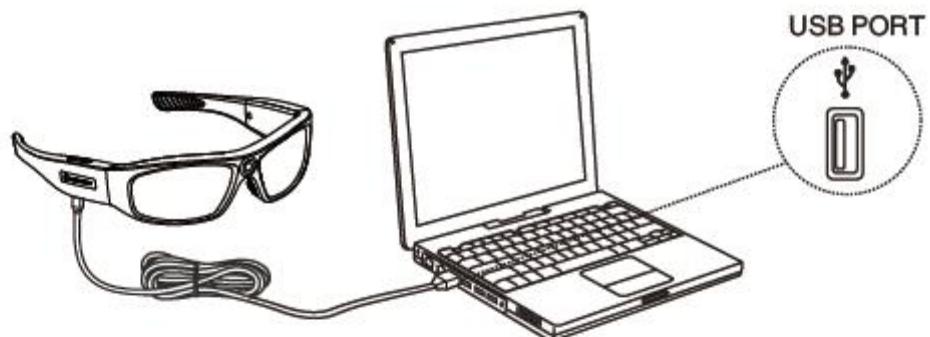

## Update Time

Connect the Glasses to your computer, find out and open the "UpdateTime" folder in the glasses memory. Run the  "UpdateTime" program and click "Write" to updating time on the glasses.

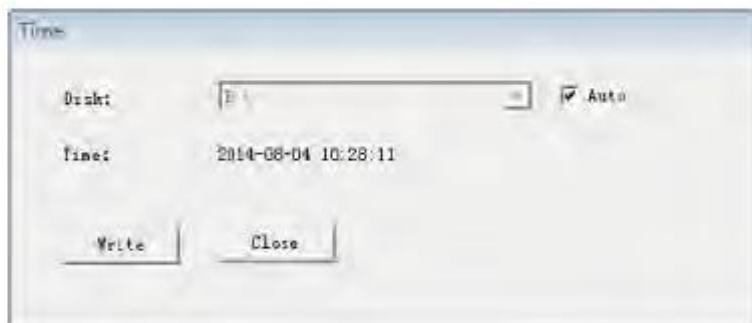

# Take a Video/Photo

## Quick Start Video Recording

The glasses enable quick start recording. Just press and hold  $\text{O}/\text{REC}$  to turn on the glasses, the recording starts automatically. Press  $\text{O}/\text{REC}$  again to save and enter standby mode, press  $\text{O}/\text{REC}$  again to continue recording. Press and hold  $\text{O}/\text{REC}$  to save video and turn off.

## Take a Photo


On video recording or standby mode, press  $\text{O}$  to take a photo.

## User friendly and power saving features:

During 90 seconds pause mode, If no further operation, the glasses will automatically turn off for power saving.


## Video Recording Trick

Please pay attention to the angle and distance between the glasses and objective before recording video. We suggest you practicing a few times prior to getting start.

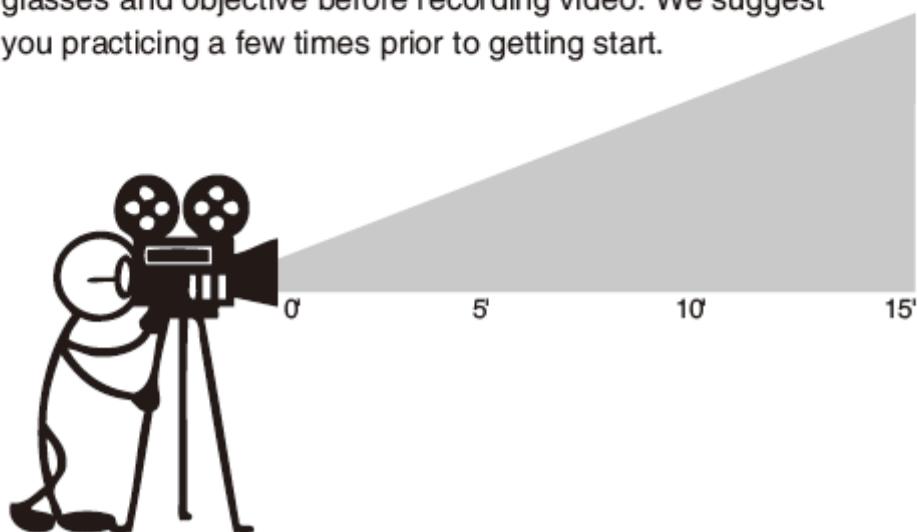

## Download and Play Videos


Connect the glasses to your computer. The device appears as a “Removable Disk” in Windows Explorer. Open the “DCIM” folder in the disk, copy or cut the video files to your local hard disk. Play the videos with “Windows Media Player” or other supported media player.

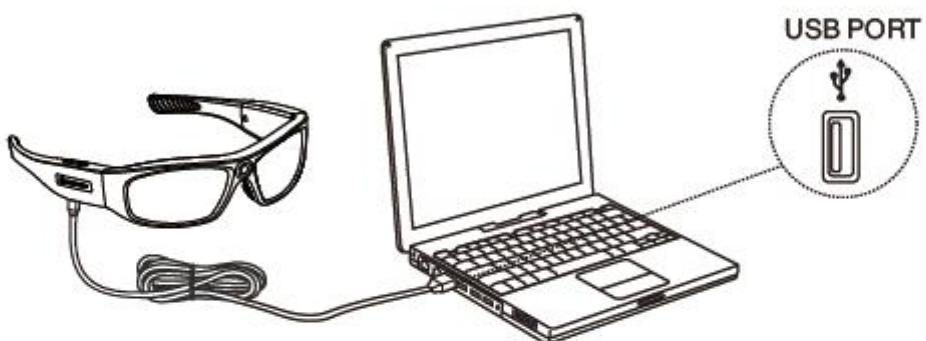

## PC Camera

**The PC camera is free of driver installation.**

Connect the glasses to your computer. The Removable Disk appears in Windows Explorer. Copy the PC camera software onto the desktop of your computer. Press and hold  $\text{O}/\text{■}$  for 3 seconds, the Removable Disk disappears from Windows Explorer indicating the PC camera mode is ready. Run the “PC Camera tool” software on your desktop to access the PC camera feature of the glasses. You can also use the camera for the online video chatting.

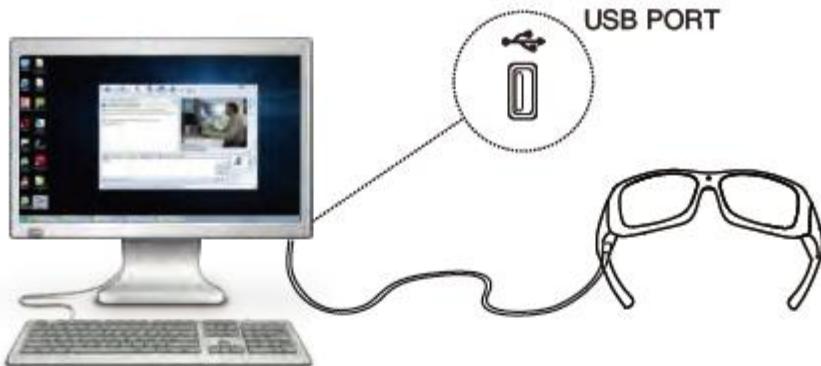

To return the Removable Disk mode, reset the glasses or reconnect the USB cable to your computer.

**Note:** PC Camera is not workable on Mac OS

## Trouble Shooting

### **Unable to turn on the Glasses**

Check the battery power. Recharge the battery if the power is exhausted.

### **Unable to take video**

Please check if the memory is full. Delete or copy the old video files to your computer hard disk.

### **Auto shut-off**

Check the battery power. Recharge the battery if the power is exhausted.

If auto shut-off on Video Recorder mode, check if the memory is full. Delete or copy the old video files to your computer hard disk.

### **Removable Disk is not found in Windows Explore**

Check if the USB connection is fine.

Make sure you did not pressed  to switched the glasses to PC Camera mode. RESET the device or reconnect the USB cable to return Removable Disk mode.

### **Resetting**

Most problems can be solved by resetting. Press and hold  for 3 seconds to reset the glasses.

Resetting will not erase the videos or other files stored in the glasses SD card. If the reset procedure does not work, charge the battery and try again.

## **Use the battery properly**

For the first time using, please charge the battery for 3 hours until the indicator turns solid green.

If the battery is exhausted, please recharge the battery as soon as possible.



If you don't use the glasses for a long time, please charge the battery every 3 months to avoid battery damage from over discharge.

## Specifications of Video Features

Lens	Polarized lens, UV400
Camera	5.0Mega Pixels color CMOS
View Angle	64°
Video Format	AVI (1280x720@30fps)
Audio Recording	Stereo Sound
Memory	Micro SD Card Max 32GB
Battery	620mAh 3.7V Li-ion Polymer Battery
Input Power	DC 5V, 500mAh
Charging Time	3hrs by computer USB Charge (approx.)
Optional Charger	AC Adaptor, Car Charger
Battery Working Time	3.5 hours recording after fully Charged
Interface	USB2.0
Operation System	Windows XP / Win 7/ 8 / 10 / Mac OS
Operation Temperature	0~40°C
Operation Humidity	15~85%RH
Weight	57g (without speakers)
Dimension	W157 x D170 x H45 (mm)

**Note:** Specifications are subject to minor change with upgrade and update. Please base on real object.

## Overall of Controls

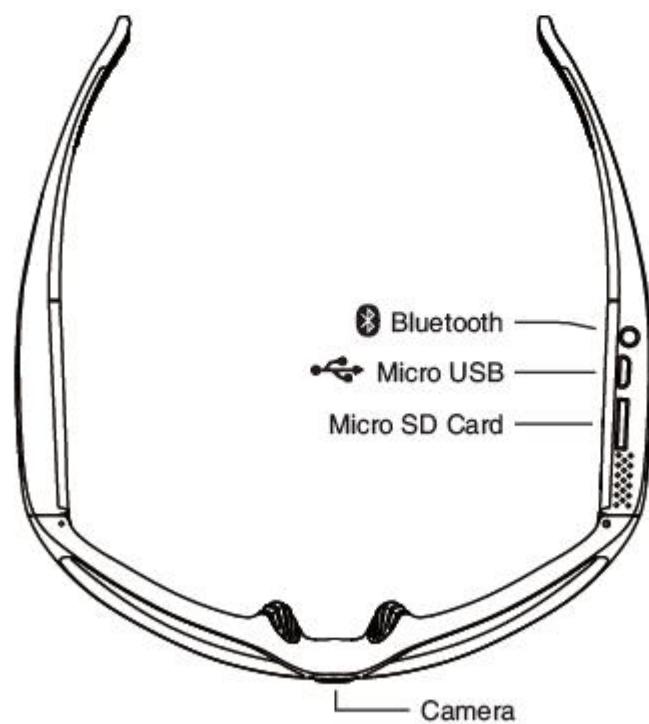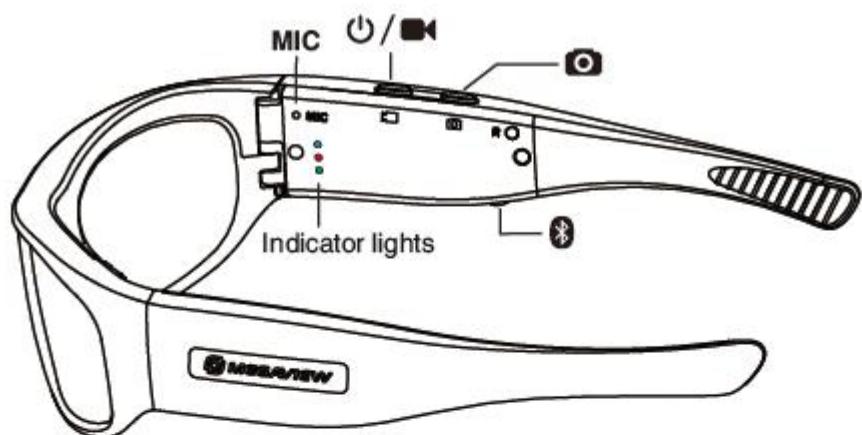


## Controls of Bluetooth headset

Status	Controls	Indicator
Power on	Press and hold  for 3 sec.	Flash Green
Ready for Pairing	Press and hold  for 5 sec.	Flash Red/Green
Take a call	1 tap	
Hung off	1 tap	
Redial	2 taps	
Play / Pause	Press  for play/pause music	Flash Green
Turn off	Press and hold  for 3 sec.	Indicators goes off
Charge	Connect to a PC or Mac USB port	Solid Red
Fully Charged	(Connected with USB)	Solid Green


## Charge

Use the supplied USB cable to connect your glasses to a running computer and charge the glasses. The indicator shows solid red during charging.

Allow to charge for a minimum of 3 hours (until the indicator light turns solid green.)

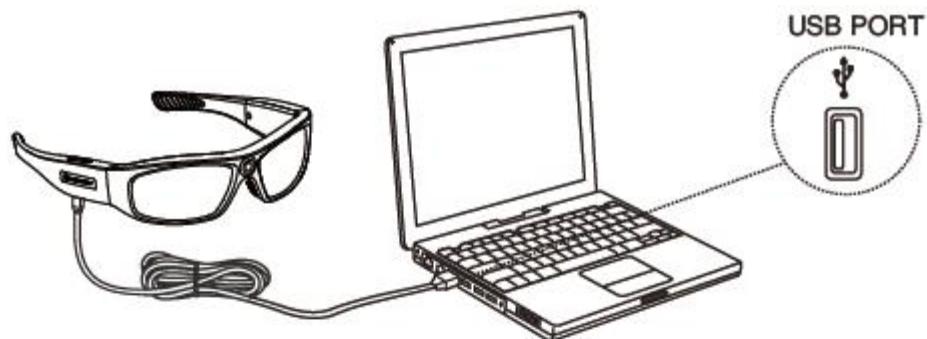

## Pairing and Connecting

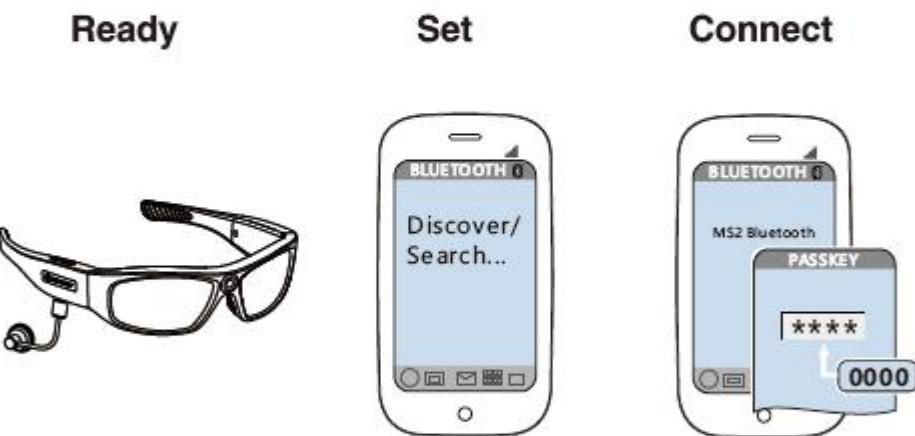

### 1. Ready

First time connection:

Press and hold  $\text{Bluetooth}$  for 5 seconds, Flash RED/BLUE lights indicate the pairing mode.

"Pairing" is the set-up process of introducing your headset to your phone. Before using your headset for the first time, you must pair it with your Bluetooth-enabled phone.

## **2. Set**

Activate the bluetooth feature on your phone, then use phone menus to "add", "search" or "scan" new Bluetooth devices.

For Example:

iPhone: Setting > General > Bluetooth: On (Start the search for devices)

Andriod: Setting > Wireless & Networks > Bluetooth: On > Scan for devices

BlackBerry: Setting/options > Bluetooth: On > Search for devices

## **3. Connect**

Select "X1-BT" from the list of Bluetooth devices shown on your phone.

If phone asks for a passcode, enter four zeros (0000). You may see \*\*\*\* on screen.

Some phone also ask to confirm headset connection after pairing.

Headset LED will stop flashing red/blue once successfully paired / connected.

You can now make a call using your phone keypad.

# Specifications of Bluetooth Headset

Talk Time	Up to 18 hours with 50% Volume
Standby Time	Up to 18 days
Music Playing Time	Up to 18 hours with 50% Volume
Operating Distance	Up to 33 feet (10 meters), Class II
Charge Connector	Micro 5Pin USB charging
Battery Type	620mAh 3.7V Li-ion Polymer Battery
Charge Time	3 hours for full charging by PC USB
Power Requirements	DC 5V, 500 mAh
Bluetooth Version	Bluetooth V4.0
Operating Temperature	0~40C
Storage Temperature	0~40C
Charging Temperature	0~40C
Lense	Polarized lense, UV400 protection
Frame	Nylon TR90
Weight	57g (without speakers)
Dimension	W157 x D170 x H45 (mm)

## Trouble Shooting

My headset does not work with my phone.	Make sure the glasses batteryt is fully charged. Make sure you are trying to pair to a Bluetooth enable phone
---	--

---

My phone did not locate the headset.	Turn both your phone and headset off and on, and then repeat the pairing process.
I cannot hear caller/dial tone.	The headset is not turned on. Press and hold  for 3 seconds until you hear the voice saying "Power On".
	Your headset is out of range. Move the headset closer to the Bluetooth phone.
	The listening volume is too low. Increase the volume on your phone.
Callers cannot hear me.	Your headset is out of range. Move the Headset closer to the Bluetooth phone. Check that you have not activated the mute feature

---

## Use the battery properly

1. For the first time using, please charge the battery for 3 hours until the indicator turns solid green.
2. If the battery is exhausted, please recharge the battery as soon as possible.
3. If you don't use the glasses for a long time, please charge the battery every 3 months to avoid battery damage from over discharge.

## In the box



X1-BT Sunglasses



Detachable Speaker



USB Cable



Carrying bag



Carrying case



Quick Start Guide



**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.