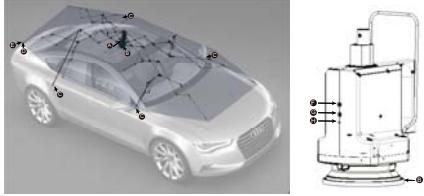


size: 100x200mm

<p> <b>Portable Car Sun-shade Umbrella</b> <b>User's Manual</b></p> <p><b>Model:M1</b> <b>Brand:Mingkai</b> <b>FCC ID:2AJLY-M1</b></p> <p>Please read this manual carefully before using the product and keep it well</p>	<p><b>Packaging list:</b></p> <p>Sunshade umbrella*1, remote*1, car charger*1, hand bag*1, user's manual*1</p> <p><b>Product Illustration:</b></p>  <p><b>Labels:</b> A Handle   B Suctioncup   C Wind proof hook D Wind proof snap fastener   E Soft plastic pad F Reset button   G Charging port H Charging indicator</p>	<p><b>Installation:</b></p> <p><b>Unfolding</b></p> <ol style="list-style-type: none"><li>1. Open the car boot, take out the umbrella and close the boot.</li><li>2. Put the umbrella in the middle of the sunroof, the handle should be right in front of the user.</li><li>3. Unfasten the strapping.</li><li>4. Push down the handle of the suction cup to fix the umbrella onto the car roof.</li><li>5. Takeout the remote and press the button till the  umbrella unfolds completely, then fasten the windproof hooks onto the frontal mirror arms and back door handles.</li></ol> <p><b>Folding</b></p> <ol style="list-style-type: none"><li>1. Unfasten the windproof hooks, press  button on the remote till the umbrella folds completely.</li><li>2. Remove the umbrella from the car roof by pulling up the handle of the suction cup, strap and put back into the car boot.</li></ol> <p><b>Kindly Reminder:</b></p> <p>Please user the melody original car charger. The indicator changes in to red when power is insufficient, keeps flicking while charging and changes in to blue when it's fully charged.</p>
--	--	---

<p><b>Specification:</b></p> <p>Product name: Portable Car Sun-shade Umbrella Unfolding size: 3800 x 2200mm/4300 x 2200mm Folding size: 220 x 220 x 590mm/220 x 220 x 600mm Weight: 5.5kgs/6.5kgs Color: dark blue/black/silver</p> <p><b>⚠ Attenions</b></p> <ol style="list-style-type: none"><li>1. Do not use the umbrella while driving.</li><li>2. Do fasten the windproof hooks when using the umbrella.</li><li>3. Do not use in the heavy windy or rainy days.</li><li>4. If the user wants to remove and unfold the umbrella in heavy windy day urgently, do unfasten the windproof hooks before handle, otherwise it might be overturned.</li><li>5. When the user encounters an operation failure, first, please press the reset button. Second, if still does not work by first step, please check the power source. The last step, take out the lockpin and unfold it manually if still does not work by these two steps.</li><li>6. If the remote is being lost, please press the reset button to unfold the umbrella and contact the customer service center of melody to get a new remote.</li></ol>	<p><b>Warranty Terms &amp; Regulations</b></p> <p><b>Exceptions:</b></p> <ol style="list-style-type: none"><li>1. Any failures or damages caused by improper operations against the user's manual during installation, operation, maintenance or storage.</li><li>2. Warranty term expires.</li><li>3. Change the current settings or disassemble the product without permission from melody.</li><li>4. Any failures or damages caused by accidental or human factors, such as incorrect voltage, high temperature, water seepage, physical damage, human break, oxidation or rusting, etc.</li><li>5. The product is damaged during the way back to repair due to transportation or disassembly.</li><li>6. Any failures or damages caused by force majeure such as typhoon, earthquake, fire, flood, lightning stroke, etc.</li><li>7. Any failures or damages caused by other issues irrelevant to the design, technology, manufacture or quality of the product itself.</li></ol>	<p><b>FCC Caution.</b></p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.</p>
---	--	--