





Getting Started

Setting Up Your Smart Wallet

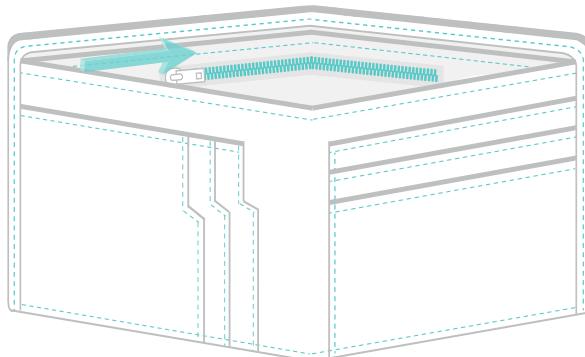

Open the wallet and unzip the zipper inside.


Tip: Avoid touching the wires inside the zipper.

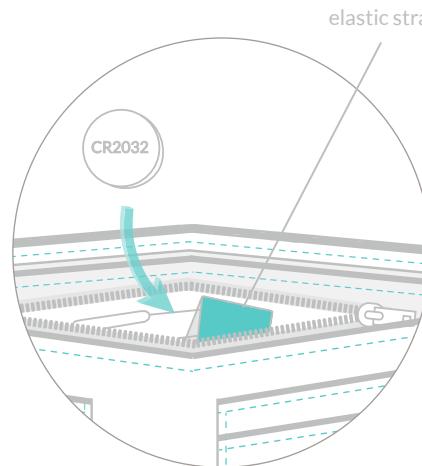

Please insert CR2032 battery into the hardware, which is hidden by the elastic strap, and close the zipper back.

Tip: The marking on the battery (CR2032, positive terminal) should be facing you while you insert it from the left side of the hardware.

To remove the battery, you can push it from the right side of the hardware/elastic strap.

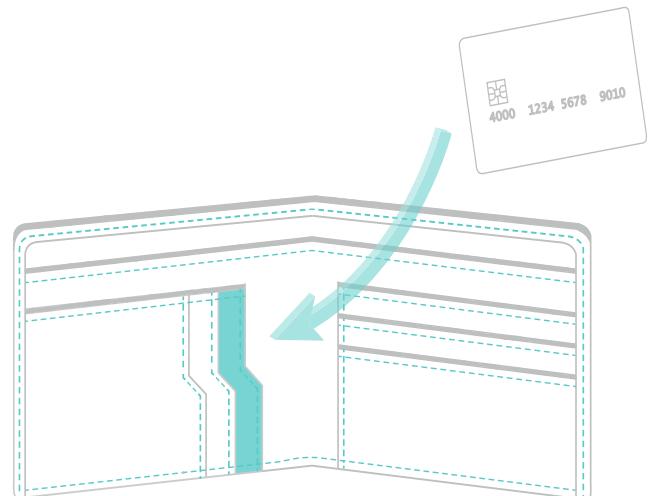


Insert all your necessary cash and cards into your wallet.

Tip: It is recommended to insert the most frequently used card into the SecurePocket™.

The SecurePocket™ is the highlighted pocket in the picture above.

Connecting to the Walli App

Download the Mobile Application. The app is available on [Google Play Store](#) and [App Store](#).

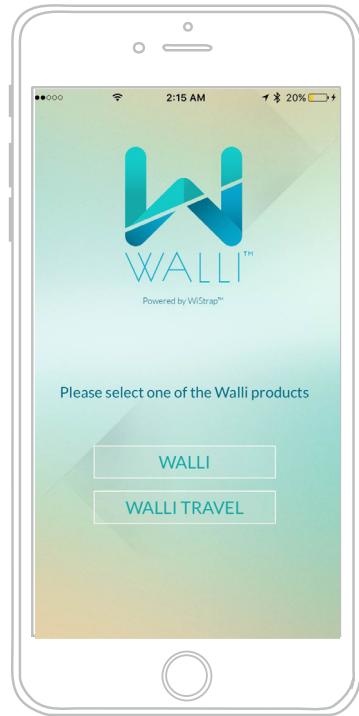


Please select your Walli Wearables product.

Tip: Your phone's bluetooth has to be on all the time for the Walli App to operate.




Enter the code provided at the back of the box.

Tip: The code is a 6-digit number which is unique for each Walli product.

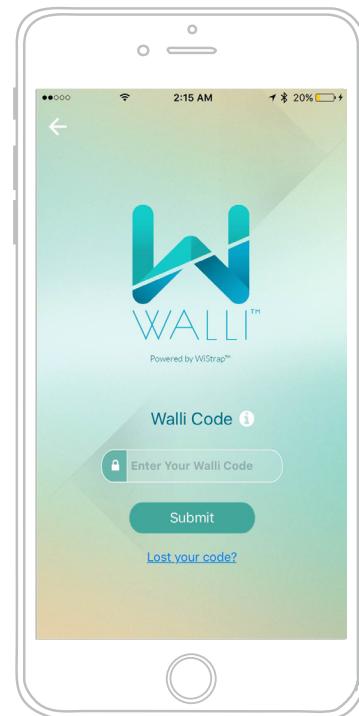

You can find your Walli Code by selecting [Lost your code?](#) and then pressing the  button.

Connecting Walli

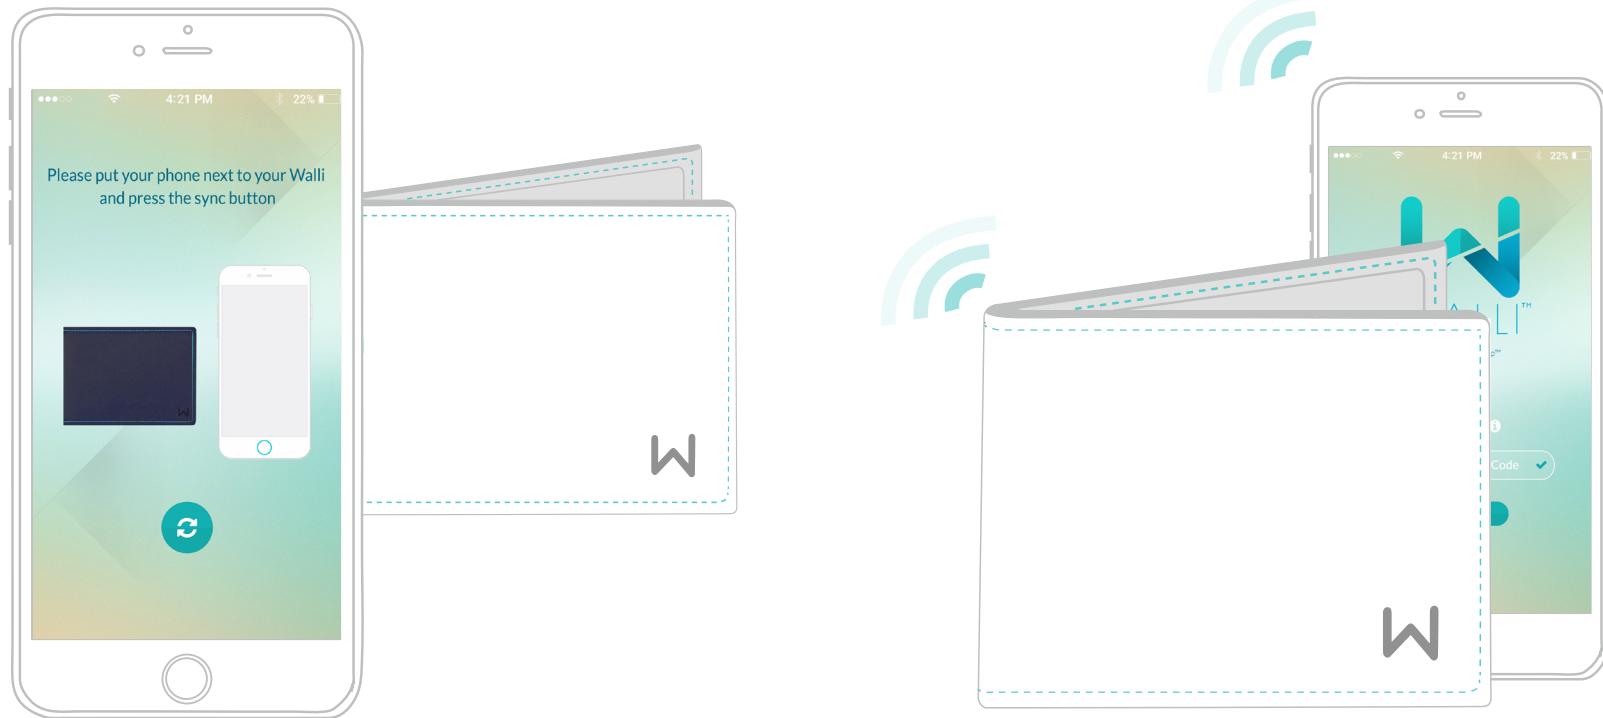

Place your phone close to your Smart Wallet and press the


 sync button for Walli App to connect.

Your Walli is now connected.

Tip: Keep the Walli App running in the background and have Bluetooth ON for your Smart Wallet to stay connected.


Using Walli App Features

Finding your Smart Wallet

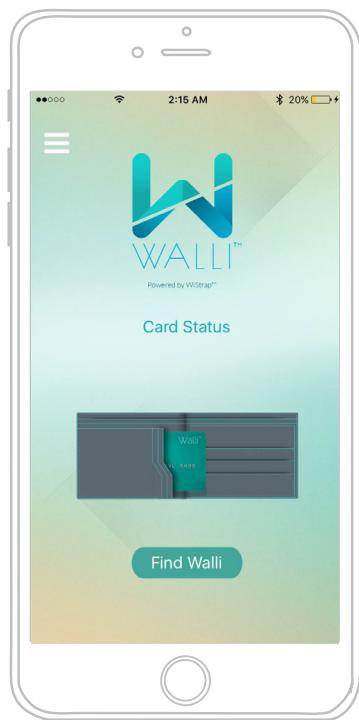


The **Find Walli** button will turn the buzzer of your Smart Wallet when in range.

SecurePocket™ Status

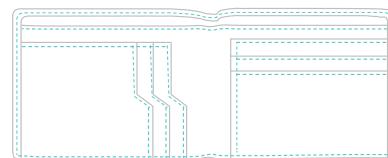

without card

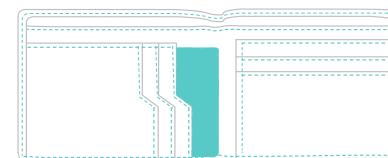


with card

The main screen of the Walli App indicates the status of the card inside the SecurePocket™ of your Smart Wallet.

Tip: Always keep only one card in the SecurePocket.


Finding your Phone

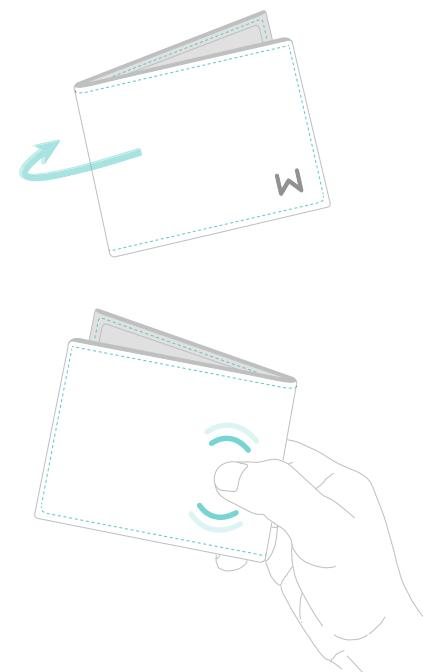

To find your phone, flip your wallet and double tap as shown on the picture above.

Tip: You should feel a button press as you tap. The tap interval should be fairly fast.

Adding Key Finder

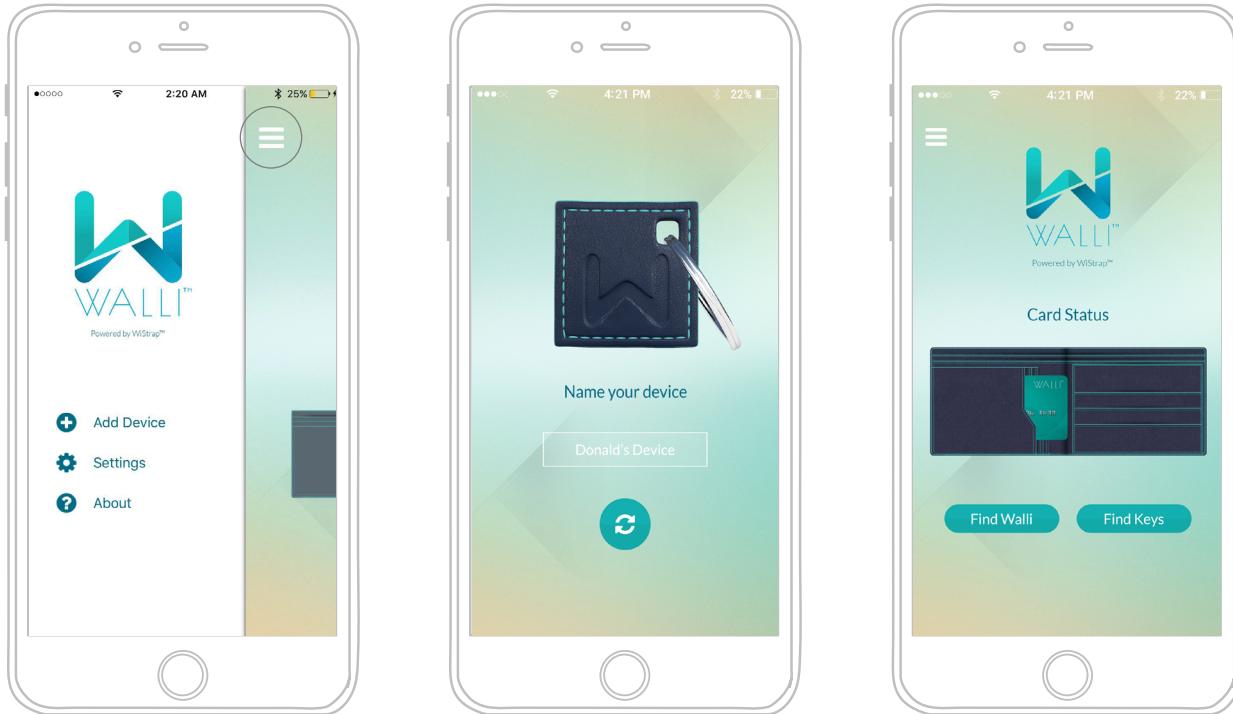

Press on the three bar  to enter Walli navigation


To add your key finder, please select  Add Device >  , and key finder will connect automatically.

To find your key finder, select 

Tip: Keep your key finder close and steady to your phone when connecting.

Walli App Settings

The settings of your Walli App will allow you to customize your Smart Wallet as per your needs.

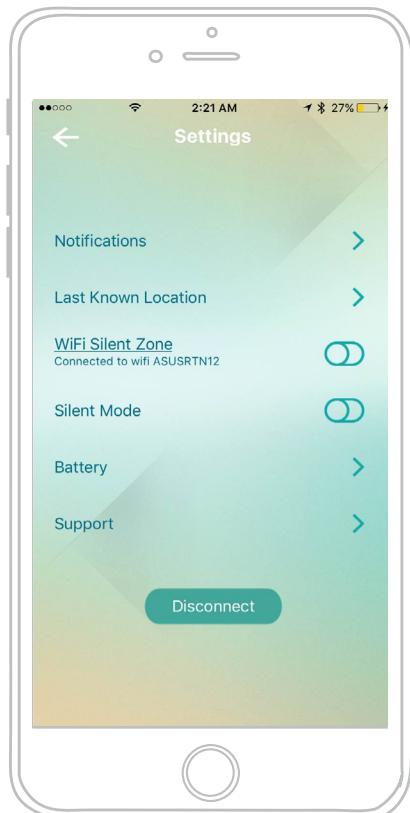

Wifi Silent Zone


If this feature is enabled, the Walli App will be in Silent Mode whenever you are connected to this preset WiFi network.

Hint: This feature is for someone who is in a large house and does not want any notification when connected to their home WiFi. Whenever you are disconnected from this WiFi network, the app will go out of Silent Mode.

Battery

Shows the level of your battery

Hint: This may take few seconds before the correct level is reflected.

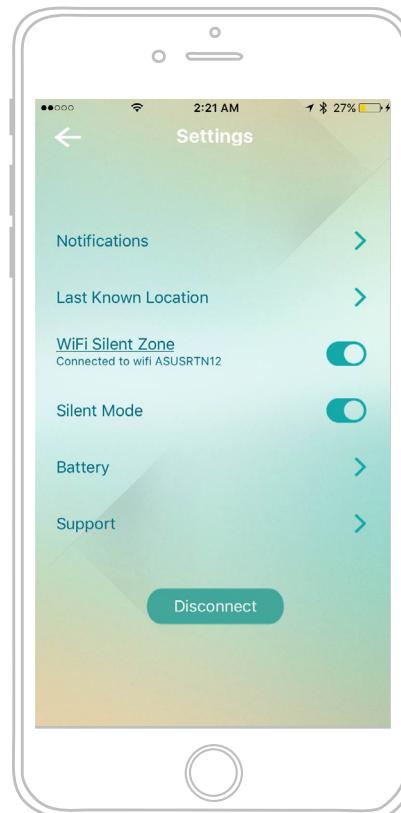


Safe Mode

Enabling this feature means you will have to double tap twice (4 taps) on the back of your wallet within 3 seconds for Finding Your Phone feature. This feature will also disable the sound for "Hey you forgot your wallet" notification but you would still get the push notification.

Hint: This would reduce the unintended double taps if you keep your wallet in your back pocket. This is useful in an environment with a lot of interference from other wireless devices which may cause false notifications from the Walli App.

Walli App Settings

The settings of your Walli App will allow you to customize your Walli product as per your needs.

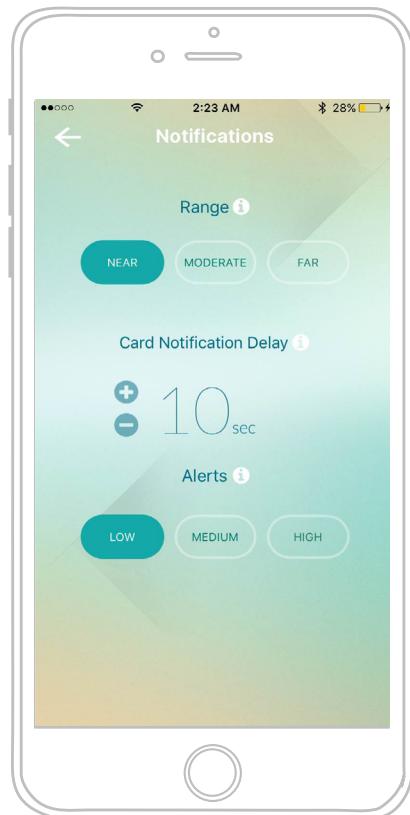

Range

Set the distance level at which you expect a notification after losing your wallet. Note that this range will change based on your environment.


Tip: It's recommended to use FAR to avoid any false alarms.

Card Notification Timer

Set time after which you want to get notified when a card is taken out of the SecurePocket™.

Alerts

Sets different notification sounds and music. HIGH for more alarming sounds.

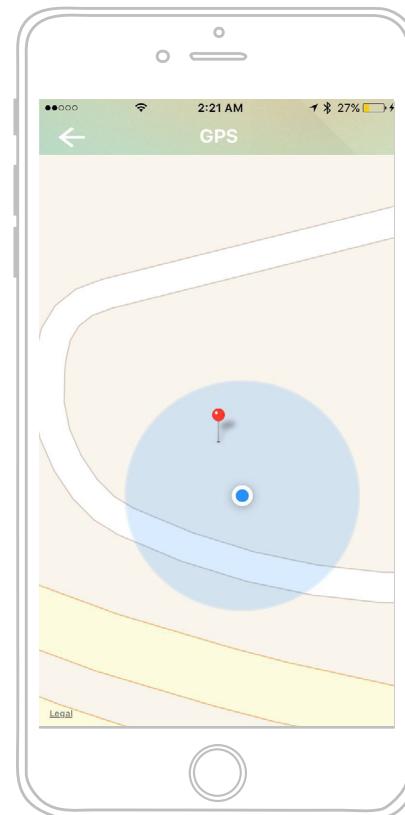

Last Known Location

≡ > Settings > Last known Location.

You can check location of your wallet where it was last connected to the app.

CE Maintenance

1.Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

2.EUT Operating temperature range: -20° C to 40° C .

Declaration of Conformity

SHENZHEN BOTERLAN TECHNOLOGY CO.,LTD hereby declares that this WALLI – Smart Wallet is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

C E0700

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction