
### QUICK START GUIDE

# Model:M-X1,Mono speaker Brand:Dellica




#### In the Box

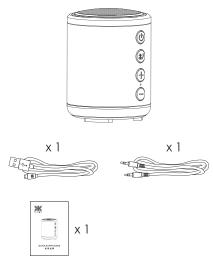


(ENG) Contents vary by region

#### Controls

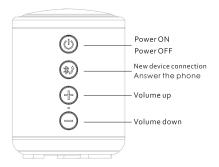


#### Connections

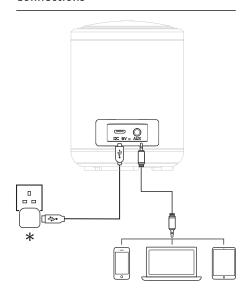


\* (ENG)Not included, Advice charging input is 800mA

#### Connections

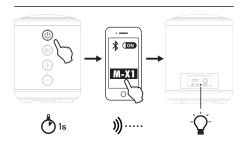

## Pickup phone call

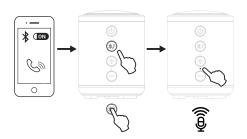

## **Battery Charging**



Charging light red after power off

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.



# Specifications

1X 45mm (1.75in) full range driver, 4Ω 8W 1X 45mm Auxiliary Bass Radiator(ABR)
8W output
Bluetooth 4.0 + EDR 3.5MM AUX Micro USB 0 charging
10m
3 devices
2.402GHz - 2.48GHz
CLASS 2
12W
20Hz-20KHz
Li-Polymer rechargeable battery 1800mAH
4 hours to fully charge
8 hours playback time
D75mm * H97.4mm
0.5kg
5V D.C 0.8A



IMPORTANT SAFETY INFORMATION

#### English

Thank you for choosing Dellica. Dellica is dedicated to producing premium audio products with best sound quality to give you a natural and pleasurable listening experience that is true to the original performance. Please read the important safety and warranty information bellow. For any other services, please contact your local authorized Dellica distributor, whose details can be found at www.dellica.com

#### IMPORTANT SAFETY INFORMATION

- Follow this manual carefully for the best results from your speakers
- · Read and return the warranty card
- · Clean with a dry lint free cloth
- Do not use spirit based cleaners
  Avoid champ and water
- Avoid temperature extremes
- Avoid direct sunlight
- SAFETY NOTICE! Trailing cables are dangerous, secure all cables

#### WARRNING

TO REDUCE THE RISK OF FIRE OF ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLICANCE TO RAN OR MOISTURE



CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUIALIFIED SERVICE PERSONNEL

#### **English**

- A combined mains power input lead an country-specific mains plug is provided
- Check before connecting to your local mains supply that the local supply voltage is the same as that marked on the connectors panel. If it is not, check with your supplier before proceeding.

#### **Explanation of Graphical Symbols**



 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulfated "dangerous voltage" within the products enclosure that may be of a sufficient magnitude to constitute a risk of electrical shock to persons.



 The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



- Correct Disposal of This Product. This marking
  indicates that this product should not be
  disposed with other household wastes
  throughout the EU. To prevent possible harm
  to the environment or human health from
  uncontrolled waste disposal. Recycle it
  responsibly to promote the sustainable reuse
  of material resources.
- To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product from environmentally safe recycling.

#### **Notice Points**

Please take heed of the following before using the DELLICA Speaker. Note also that the word "appliance" shall refer to the DELLICA speaker, or any part of it.

- Read Instructions All the Safety and Operating Instructions should be read before operating the appliance.
- 2. Retain Instructions The Safety and Operating Instructions should be retained for future reference.
- 3. Heed Warnings All warnings on the appliance and in the Operating Instructions should be adhered to.
- Follow Instructions All Operating and Use Instructions should be followed. Only use attachments/accessories specified by the manufacture.
- 5. Important Do not defeat the safety purpose of the polarized or grounding type plug. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Refer all servicing to a qualified service personnel. Servicing is required for any damaged parts such a power supply cord or plug.
- 6. Water and Moisture The appliance should not be used in or near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, near a swimming pool, and the like. The appliance shall not be exposed to dripping or splashing. Care should be taken so that objects containning liguids are not placed upon or spilled into the enclosure through openings and that no objects

#### Before Using the Speaker

- filled with liguids, such as a vase, shall be placed on the appliance.
- 7. Ventilation The appliance should be situated so that its location or position does not interfered with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, or similar surface that may block any ventilation openings.
- Heat The appliance should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 9. Power Sources The appliance should be connected to a power supply only of the type described in the Operation Instructions or as marked on the appliance and it shall remain readily operable. The mains plug is used as the disconnect device. To be completely disconnected from the
- 10. power input, the mains plug of the appliance must be disconnected from the mains completely. The building installation shall be regarded as providing protection in accordance with the rating of wall socket outlet.
  - Power cord protection Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed up or against them. Pay particular attention to cords at plugs, convenience receptacles and the point where they exit from the appliance. The mains plug should not be obstructed or should be easily accessed during indented use.
- Attachments and Accessories Use only attachments/accessories specified by the

#### Before Using the Speaker

manufacturer.

- 12. Handling The appliance should be transported with the cart, stand, tripod, bracket, or table specified by manufacturer, or sold with the apparatus. When a cart is used, pay caution when moving the cart/appliance combination to avoid injury from tip-over.
- 13. Non-use Periods Unplug the appliance during lighting storms or when unused for long periods of time.
- 14. Damage Requiring Service The appliance should be serviced by qualified service personnel when:
  - a) The power supply cord or the plug has been damaged; or
  - b) Objects have fallen or liquid has been spilled into the appliance or
  - c) The appliance has been exposed to rain; or
  - d) The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - e) The appliance has been dropped or the enclosure is damaged.
- 14. Servicing The user shall not attempt to service the appliance beyond that described in the Operation Instructions. All other servicing should be referred to qualified service personnel.

#### FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.