



realwear HMT-1.

HMT Release 10 User Guide




Version 1.1.1-P – Updated for Release 10.3.0

Table of Contents

RealWear Head Mounted Tablet One	3
HMT-1 Features	4
HMT-1 Product Specifications	5
HMT Release 10 – Overview	6
HMT-1 Safety Guidelines	8
Safety and Usage Guidelines	9
HMT-1 Connectivity	10
HMT-1 Box Contents	10
HMT-1 Device Overview	11
HMT-1 Device Overview – Details	12
HMT-1 Setup Guide	17
Wearing the HMT	17
Remote configuration for HMT from web browser	21
Determining Eye Dominance	22
Headwear with HMT Devices	23
Using the HMT with a Hard Hat	25
Using the HMT without a Hard Hat	25
Wearing HMT with Eye Protection	25
HMT-1 Charging Basics	26
Configuring your HMT on Release 10	29
Settings	29
Setting Up Screen Lock	30
Unlocking the HMT	32
HMT Release 10 Wireless Update	33
Selecting HMT Interface Language	35
HMT-1 MicroSD Card	36
How to insert a MicroSD card:	36
Setting Up and Using a MicroSD Card	38
HMT Device Care	40
Storing the HMT	40
Cleaning the HMT device	41
HMT Interaction Modes	42
Speech Keyboard	43
Voice Control	46
HMT Release 10 Software Overview	48
My Programs	50
Recent Applications	51
My Files	52
My Documents	55
Media Player	57
Deleting Files from File Manager	59
My Camera	61
My Controls	67
Action Button	71
Power Management	72
Battery Hot Swap	73
Microphone Settings	73
Screen Orientation	74
Power Warnings	74
Notifications	75
Barcode Reader	76
HMT-1 Ownership Information	78
HMT-1 Regulatory and Compliance Statements	79
Declaration of Conformity	81
HMT-1 Specific Absorption Rate (SAR) Information	82
HMT-1 Limited Warranty and Software License	83

RealWear Head Mounted Tablet One

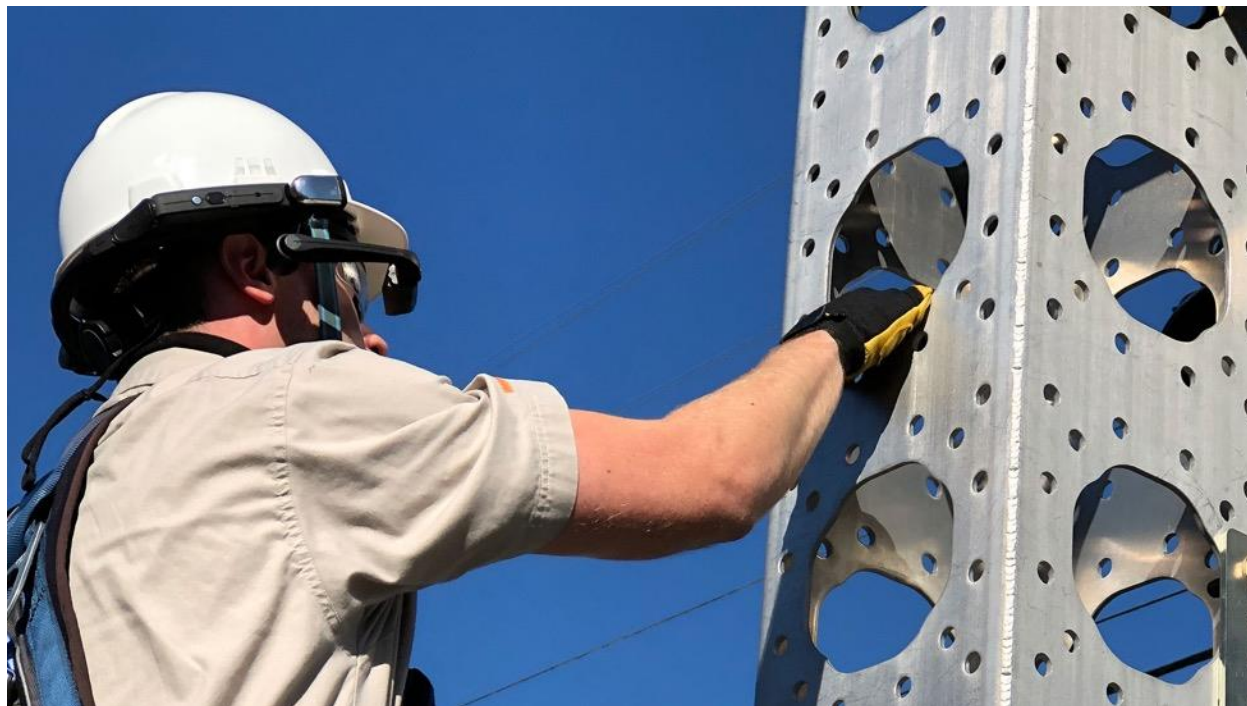

The RealWear HMT-1 is the world's first hands-free Android™ tablet class wearable computer for industrial workers. The RealWear HMT-1 provides the foundation for Connected Worker programs.

Use it in wet, dusty, hot, dangerous and loud industrial environments.

A fully rugged head-mounted device, it optionally snaps into safety helmets or attaches to bump caps and can be used with safety glasses or corrective eyewear.

The high-resolution micro display fits just below your line of sight and views like a 7" tablet. It's an industrial dashboard: there when you need it and out of your way when you don't.

The HMT-1 works with powerful software applications from our solution partners in four core categories, each optimized for completely hands-free voice control. That means no scrolling, swiping, or tapping - just simple voice commands.

Use it for remote mentor video calling, document navigation, guided workflow, mobile forms and industrial IoT data visualization.

HMT-1 Features



100% Hands free
Voice based operating system with local speech recognition in loud areas.



Powerful Audio
Integrated speaker and 3.5mm audio jack for use with hearing protection.



Unmatched Noise Cancellation
The HMT-1 uses four microphones and advanced algorithms to perform noise cancellation prior to voice recognition.



PPE Compatible
Designed to work with standard hard helmets, bump caps and safety glasses.



Full-Shift Internal Battery
Field swappable for continuous use.



Outdoor Display
Viewable in bright sunlight.



Water Proof
IP66 – Protected against heavy seas or powerful jets of water.



Dust Tight
IP66 – Complete protection against the ingress of micro particles.



Drop Proof
Resistant to 2-meter drops onto concrete from any angle.



Built Rugged
Fully operational from -20° C to +50° C.

HMT-1 Product Specifications

Core Platform & Functions

Chipset 2.0 GHz 8-core Qualcomm® Snapdragon™ 626 with Adreno 506 GPU - OpenGL ES 3.1 & OpenCL 2.0

Included Applications

Document Navigator, Camera with Barcode Reader, Video Recorder, Media Player

Languages Supported

English, Spanish, French, German, Italian, Portuguese, Russian, Mandarin Chinese, Japanese, Korean, Thai, Polish

Memory

64 GB Internal Storage / 4 GB RAM / MicroSD slot (max card supported 256 GB)

Operating System

Android 8.1.0 (AOSP) + WearHF™ hands-free interface

Connectivity & Sensors

Bluetooth

BT 4.1 LE (Low Energy)

Wi-Fi

802.11 a/b/g/n/ac – 2.4GHz and 5GHz

GPS and Location

GPS, GLONASS, A-GPS

IMU

9-DOF (3-axis accelerometer, magnetometer, and gyroscope), software enhanced stabilization

Battery

Capacity

3250 mAh Li-Ion, rechargeable and field swappable

Battery Life

Full shift (9-10 hours) with typical use

Physical Characteristics

Weight

380g

Ruggedization

IP66, MIL-STD-810G, 2-meter drop test

Dedicated Keys

Power key, application-specific Action key

Ports

3.5mm audio, 1 USB Type-C

Boom Arm

Adjust six ways for all head sizes, left or right eye compatible, display flips out of the way when not in use

Display

Type

20° field-of-view, 1-meter fixed focus 24-bit color LCD, 0.33 inch diagonal, outdoor visible

Resolution

WVGA (854x480)

Audio

Microphone

4 digital microphones with active noise cancellation
Accurate voice recognition even in 95 dBA of typical industrial noise

Speaker

Internal 91 dB loudspeaker

Multimedia

Camera

16 MP, PDAF with LED flashlight

Video

Up to 1080p @30fps. Codecs: VP8, VP9 and hardware encoding support for H.264, H.265 HEVC

Accessories

Included

Battery Wall Charger, USB Type-C Cable, Overhead Strap, Rear Head Pad, Removable Battery

Optional

Spare Battery, 6 Battery Multi-Charger, Hard Hat Clips, Bump Cap and Tri-Band Strap, Ear Bud Hearing Protection Headphone rated at 33dB noise reduction rating (NRR), Soft Pouch Carrying Case, Semi-Rigid Carrying Case, replacement Overhead Straps and Rear Pads, Hard Hat, Baseball Cap with HMT-1 clips, Micro SD card

HMT Release 10 – Overview

Purpose-built hands-free secure software for increased productivity.
Safer. Faster. Smarter.

HMT Release 10 - powered by Android 8.1 - is the only software purpose-built for harsh or dangerous environments where workers use their hands for more connected and secure work. Release 10 is optimized for safe and secure jobs, taking hands-free to new heights of productivity and connectivity.

With Release 10, the overall experience and functionality has been improved, extending the HMT's capabilities and making it much more powerful. The major upgrade is a comprehensive, end-to-end overhaul, improving usability, look and feel, security, and includes an entirely new and improved camera system. The new camera functionality gives your connected workforce more granular control resulting in faster turnaround for visual verification and inspection when safety and compliance of your work on the frontline matters most.

HMT Release 10 lays the groundwork for RealWear Foresight Cloud Services, improving your overall hands-free experience while keeping you securely connected to the data in your cloud.

Enhanced Usability

Redesigned user interface, keyboard and file management system, focused on ease of use and productivity.

Fortified Security with Android 8.1 OS

Android 8.1 OS upgrade with regular security patches & software updates, and additional remote management.

Smarter Camera System

Camera features designed for productivity and performance in industrial environment

Core Functions	
Operating System	Android 8.1
Smart Camera System	My Camera App 2.0

Usability	
Enhanced UI	The new UI utilizes head movement for easy scrolling left to right. The new My Controls menu and speech keyboard allow the user to look left or right and make selections using their voice. Improved user experience with better screen layout and colors and a more consistent philosophy overall design. Better access to core Android capabilities such as Notifications.
Gestures	Better leverage head gestures when doing so is more effective than voice commands
Customization	White label design can be branded just for your business needs
My Files	Completely redesigned user interface Browse through high volumes of files through better structure and sorting capability Read full filenames Bigger thumbnails Locate files faster than ever
Keyboard	Fully redesigned hands-free keyboard with gestures and voice including: Standard keyboard Secure Entry mode enables hands-free password entry without speaking the characters aloud Full dictation for improved productivity

Security	
Android 8.1 Security	Security patch Level December 2018 Security patch updates targeted within 90 days Compliance with current enterprise IT security policies Regular software updates from RealWear API Level 27 support for developers

Customization and Configuration	
Centralized WearHF configuration	OS level and App level customization and configuration. Default values and preferences can be stored in a common configuration space and updated, refreshed, or managed for easier deployment and support
Cloud Services	Fully manageable by RealWear Foresight Cloud
Language	Dynamic and individual language strings can be adjusted or improved by administrators
More languages	Thai and polish languages have been added for a total of 12 languages Languages can be updated over the air (OTA)

Most Advanced Camera System for Harsh Environments	
Hands-free for industry	Command and control all features while keeping your hands free for work
Preview	Instant preview of photos and videos
Smoother experience	Seamless experience from 'MY CAMERA' to 'MY PHOTOS' and 'MY MEDIA'
Low Light Performance	Improved performance in low light settings and situations
Field of View (FOV)	Wide angle range or standard range
Focus and Exposure	Can lock focus and exposure to one of 9 points in the frame for capturing serial numbers in non-ideal lighting conditions
Image and Video Stabilization	More usable footage when work is being done and image and video accuracy is required for compliance, inspections and remote mentoring
Flashlight	Flashlight functionality can be controlled directly from the camera app
New Controls (MORE OPTIONS)	• Exposure level • Flashlight controller • Aspect ratio 16:9 and 4:3 • Image resolution: High and low • Video resolution: High and Low • Frame rate: 15, 25, 30 • Video Stabilization: On or Off • Picture preview • Manual focus • Field of view: narrow and wide • Direct access to your photos
Narrow Setting	Improves visibility of camera view when used with a baseball cap. Enhanced zoom to provide even more magnification for small or far away subjects
Wide settings	Full width of camera view is captured

HMT-1 Safety Guidelines

Battery Performance

A rechargeable battery powers your device. Always use only the original type of RealWear battery that came with the device. Use the battery only for its intended purpose. Never use any charger or battery that is damaged. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before the device can be used. The full performance of a new battery is achieved only after 3 to 4 complete charge and discharge cycles. The battery can be charged and discharged for multiple cycles, but it will eventually wear out. Unplug the charger from the electrical plug and the device when not in use. Ensure that you do not leave the fully charged battery connected to the charger. If left unused, a fully charged battery will lose its charge over time.

Warning: There is a risk of explosion while charging if a battery other than the specified model is used.

Battery Replacement

If the HMT-1 battery is not charging properly, replace the battery with an original RealWear battery. If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to begin charging the battery.

Avoid Short Circuit

Do not short-circuit the battery. An accidental short-circuit can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. This might happen, for example, when you carry a spare battery in your pocket or toolbox. A short-circuit at the terminals may damage the battery or the connecting object.

Avoid High Temperatures

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. For the best results, try to keep the battery between -10°C and +50°C (+14°F and 122°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Battery Disposal

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations and recycle when possible. Do not dispose as household waste. Do not dismantle, open or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of leak or a hazard seek medical help immediately.

Child Safety

Do not allow children to play with your device or its accessories. Keep it out of their reach. They could hurt themselves or others or could accidentally damage the device or accessories. Your device and its accessories may contain small parts, which could be detached and create a choking hazard.

Health and Safety Warnings

Stop using RealWear HMT-1 or its display immediately if you experience a headache, vertigo, dizziness or nausea. Do not use the HMT-1 display while operating any vehicle. Move the boom arm completely out of your line of sight when not using the display. Maintain situational awareness of your surroundings while using the HMT-1.

Safety and Usage Guidelines

- Do not use HMT-1 while driving
- Always wear HMT-1 with eye protection.
- Always use your dominant eye for comfortable viewing.

Disposal of Old Electrical and Electronic Equipment



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, cannot be disposed as unsorted waste but must be taken to separate collection at their end-of-life.

Disposal of Battery



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Guideline for Headphone and Earphone



To prevent possible hearing damage, do not listen at high volume levels for long periods.

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

Charger Use Safety Instructions

Warning: To use the charger follow these instructions:

- Make sure that the cable plug is properly connected.
- Keep the charger away from liquids.
- In case of any strange smell or noise from the charger, disconnect it and contact support.
- Before cleaning the cable or charger, disconnect from power supply.
- When using an extension cable, check the integrity of the ground conductor.
- Disconnect the charger from HMT-1, once the battery is fully charged.
- Do not use this charger in wet areas. This charger is for indoor use only.
- Do not insert or remove the plug with wet hands.
- Do not open the charger. For any issues, contact support.
- Do not cut, break or bend the cable in a knot.
- Do not put any objects on the cable that may let it overheat. It may damage the cable and cause fire or electrocution.
- Do not use any cable other than the original cable as it may cause short circuit or electrocution.

HMT-1 Connectivity

Operating Frequency Bands for RealWear HMT-1

Wi-Fi operating frequency band(s) details are as follows:

802.11a: 14.34dBm
802.11b: 13.32dBm
802.11g: 12.29dBm
802.11n HT20: 11.25dBm
802.11n HT40: 11.39dBm
802.11ac: 12.26dBm
5G Wi-Fi Connection Information

Operations in the 5.15 – 5.35GHz band are restricted to indoor use only.

Bluetooth

BT 4.1 LE (Low Energy): 10.55 dBm

HMT-1 Box Contents

The list of items in the RealWear HMT-1 box are:

RealWear HMT-1 (with rechargeable/removable battery, overhead strap, and rear head pad installed)


- USB cable type C
- HMT-1 Quick Start Guide

Included with purchase of HMT-1, but shipped in a separate box:

- HMT-1 Regional Wall Charger


HMT-1 Device Overview

Front View

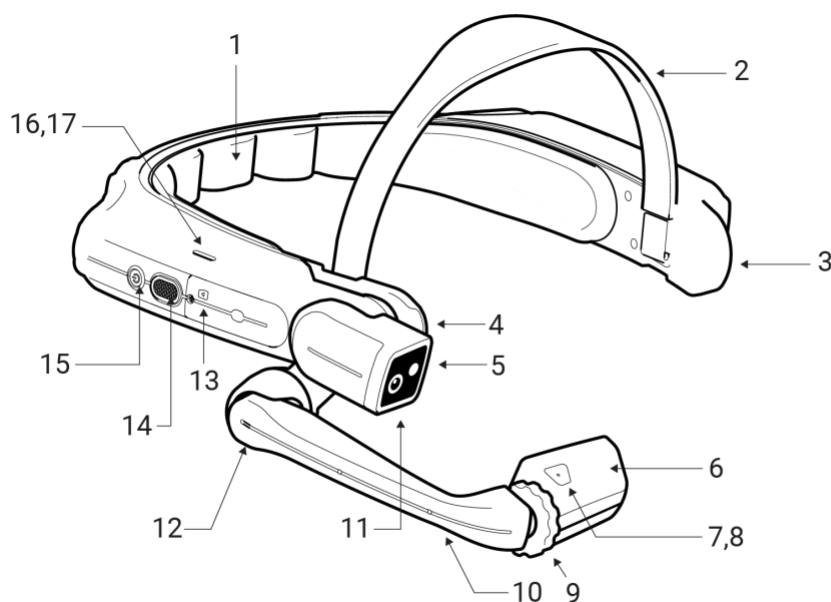

- | | |
|------------------------------|--------------------------------|
| 1. Removable Head Pad | 10. Boom Arm |
| 2. Removable Head Strap | 11. Camera |
| 3. Mic B1 | 12. Elbow Joint |
| 4. Shoulder Joint | 13. Micro SD Card Slot Cover |
| 5. Flashlight | 14. Action Button |
| 6. Display Pod | 15. Power Button |
| 7. Mic A1 | 16. Speaker |
| 8. Mic A2 (on opposite side) | 17. Speaker (on opposite side) |
| 9. Wrist Joint Locking Ring | |

Rear View

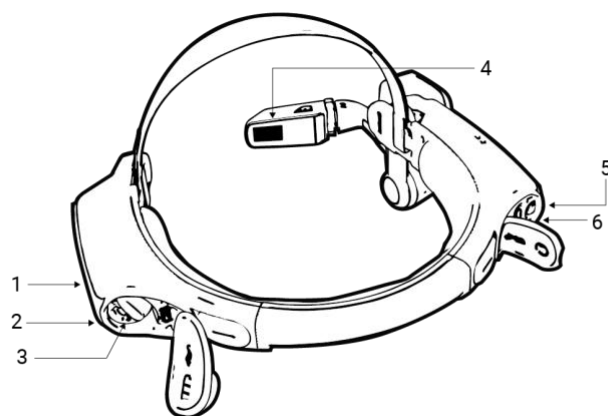

- | | |
|----|---------------------|
| 1. | Mic B2 |
| 2. | Battery Compartment |
| 3. | Battery Cap |
| 4. | Display Window |
| 5. | Audio Jack |
| 6. | USB-C Port |

HMT-1 Device Overview – Details

Power Button



There are 2 buttons on the side of the boom arm side of the device. The smaller, silver, circular button is the power button. Later you'll learn how to use this button to turn on the device, turn off, put to sleep, or wake up.

Action Button



The action button is the large, textured button beside the power button, and serves multiple purposes. A single tap serves as a failsafe method of returning you to your home screen. Three quick, consecutive taps will toggle the microphone array between front and back configurations. Pressing and holding the action button will open the Language Select menu and will cycle through a list of supported languages. Release the button to select your desired language.

SD Card Door



The MicroSD card door can be opened with a 001 Phillips Head screwdriver. You can insert a FAT32 formatted microSD card with a maximum capacity of 256 GB for portable storage.

Details Continued

Camera Pod



The Camera Pod is located above the boom arm and can be pivoted up and down ((x)) degrees. It is capable of taking 16 MP photos and 1080p videos. It also includes a built-in flashlight that can be controlled with your voice.

Boom Arm



The Boom Arm allows the user to adjust the positioning of the Display Pod and allows for 6 degrees of freedom, which means it can be adjusted up and down, left and right, and forward and back. It is comprised of a Shoulder, Elbow, and Wrist joint (imagine the human arm). Its orientation can be inverted to allow use by left or right eye dominant users.

Wrist Joint Locking Ring



This is the small Wheel-shaped lock that locks the display pod in place, and is located between the Display Pod and Boom Arm.

Display Pod



The Display Pod can be rotated and adjusted so the user can see the display clearly. The Display itself is an 854x480p 24-bit LCD Display with 20-degree field-of-view and 1-meter focal depth, meaning that it appears like a 7in. Tablet at arm's length.

Microphone Array



There are two sets of two microphones on the HMT-1. The Primary Microphones handle user input, while the reference microphones cancel external noise. The front microphones, active by default, are located on the display pod. The Primary Mic is downward-facing, close to the user's mouth, and the reference mic is upward-facing to pick up and remove background noise.

The rear microphones are located on the side of the device opposite from the boom arm. These should be used only when communicating when the boom arm is flipped back and out of your field of view.

Speakers



There is a 91 dB loudspeaker that sits above the ear when worn on either side.

Battery Compartment



You can remove the battery cap with a small counterclockwise turn followed by a pull. Once removed, tilt the device to remove the battery. To replace, insert a fresh battery, press to secure the battery cap and turn slightly clockwise to lock in place. Secure the flap.

USB-C Port




The USB-C port is used for fast charging and data transfer. It is located beneath the rear flap on the boom arm side of the device.

Auxiliary Jack (Headphones)



Headphones can be connected to the HMT-1 via this jack. We recommend using RealWear 33 dB noise-reduction earbuds with your HMT-1. This jack is located beside the USB-C port.

Rear Head Pad

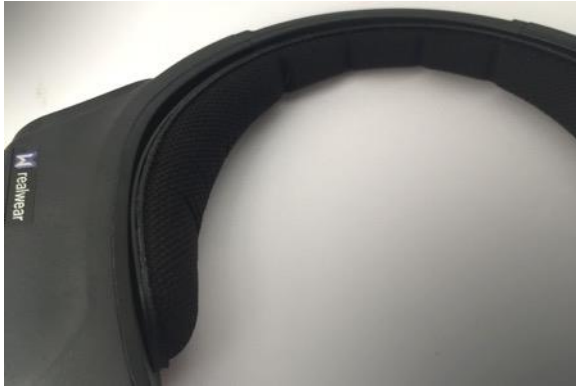

The rear head pad is an adjustable and removable pad located at the inside rear of the device that rests along the back of your head. If you are mounting your HMT-1 on a hard-hat or bump cap, you may choose to remove this for comfort.

Overhead Strap



This is an adjustable hook & loop strap that rests across the top front of the wearer's head. Again, if mounting via hard-hat or bump cap, this can be removed.

HMT-1 Setup Guide

Wearing the HMT

This article will walk you through how to wear your HMT device and ensure the best possible experience.

Step 1 - Determining Left- or Right-Eye Configuration

The HMT can be set up so that the display and camera are aligned with the left or right side of your head.



First, it is important to determine your dominant eye, to do so, follow the simple instructions in this [linked article](#). Viewing the HMT's display with your dominant eye will allow for the most clear and comfortable use of the device.

Step 2 - Get the HMT Ready

Before wearing, hold the HMT level with the boom-arm/display on the left or right, whichever is your dominant eye side. Bend the boom so it forms a slight "Z" shape as shown below.



Step 3 - Ensure proper head-mounting accessories are in place.

These can include the single strap, tri-strap, hardhat with clips, bump cap with tri-strap, or baseball cap with mounting kit. See the article on mounting accessories for instructions on how to attach the device to your chosen mounting option.



Step 4 - Putting on the HMT

Start by positioning the device on your head so that it is roughly level with ground. The head strap should be positioned vertically, not at an angle, resting over the top part of your head.



Step 5 - Fitting the HMT

Adjust the head strap or mounted headwear so that the device is not hanging too low - it should be positioned right along your temple area, above your ears.

Next, move the display pod into position. For the optimal experience it is recommended that the display is close to the center line of your face, in front of and close to your eye.

Step 6 - Adjusting the fit

Ensure that the display pod is not positioned too far to the outside or too far in front of your eye.



Move the display towards the center line by pushing from the outside inward.



Then holding the boom arm with one hand and holding the back of the HMT with the other, push the display pod inward so that it is close to, in front of and slightly below your eye.



Step 7 - Turning on the HMT

Before putting the HMT on your head, press and hold down the power button for about three seconds then release the power button. The power button is the round silver button on the same side of the HMT as the boom arm/display.




In about ten to fifteen seconds you will hear a sound as the start-up sequence completes. The HMT is now powered on and ready to wear. You should now be able to see the screen.

Step 8 - Fine tuning

It is best to tilt and rotate the display pod to make minor adjustments.



Make sure that the display pod is rotated so that all four corners of the screen are clearly visible to your eye. With your HMT powered on, and the display pod positioned correctly, you will see the entire HMT Home Screen.

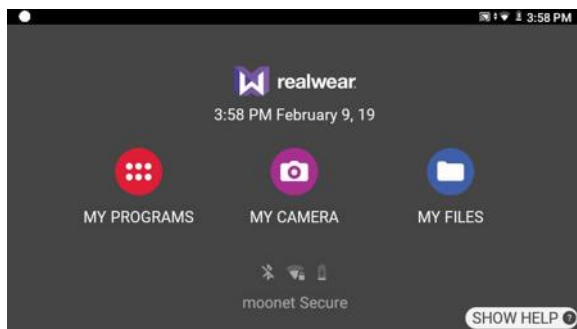

Warning: If you are not able to clearly see what is on screen, review how your device and display setup - double check the fitting of the strap or headwear and if your display is correctly setup for your dominant eye.

Step 9 - Fine tune the camera



When you are ready to use the camera, you will need to make some final adjustments so that the view of the camera is forward and unobstructed.


Remote configuration for HMT from web browser

Generate a QR Code for Configuration from a Web Browser

The Configuration App (found in My Programs) scans a QR code that can contain setup information for language, time zone, time, and WiFi connections. A web page enables anyone to create the QR code.

To setup the device, complete the following procedure:

1. Open a Web browser in your computer.
2. Visit realwear.setupmyhmt.com or <http://www.realwear.com/configure>
3. Click the 'Configuration' button on the page and then 'First Time Setup'. (Note: you can also click the 'Configuration' link on the top navigation bar:)
4. Select the desired language and click 'Next'. You will need to select the world region first, then the time zone.
5. The 'Set Automatically' checkbox will default to checked with the values from your computer or phone. If you desire different settings, uncheck the box and change any values necessary.
6. When the Date & Time values are set, click 'Next'.
 - Optional: Enter the WiFi access point name (or SSID) and password to setup the Wi-Fi network for your HMT. Note: most simple WiFi networks use WPA/WPA2 PSK security.
7. Click 'Generate Code'. A QR code will display on the computer screen.
8. On the HMT open the Configuration App. Say "NAVIGATE HOME" then "MY PROGRAMS" then "CONFIGURATION". The device will start beeping.
9. Scan the QR code by pointing the HMT camera so the QR code is within the target outline on the display.
10. When the QR code is scanned a tone will sound and you will be returned to the previous screen.

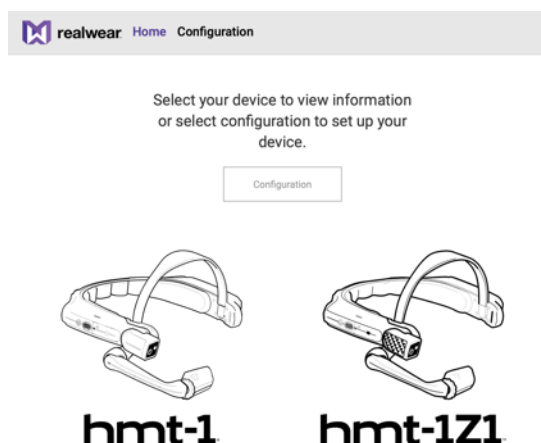

The preceding steps can also be accomplished using the RealWear Companion app, available on the App Store and Google Play.

Note: when you power on the HMT device for the first time a remote configuration screen will be displayed. To skip the remote configuration and perform later, press the Action button. You may return to the configuration app at any time by saying "NAVIGATE HOME" > "MY PROGRAMS" > "CONFIGURATION".


Determining Eye Dominance

Eye dominance is the tendency to prefer visual input from one eye to the other. It is best to use your dominant eye when viewing the display.


Eye dominance is not related to right- or left-handedness.

To determine which eye is dominant:

1. Form a triangle with your hands placed together at arm's length.

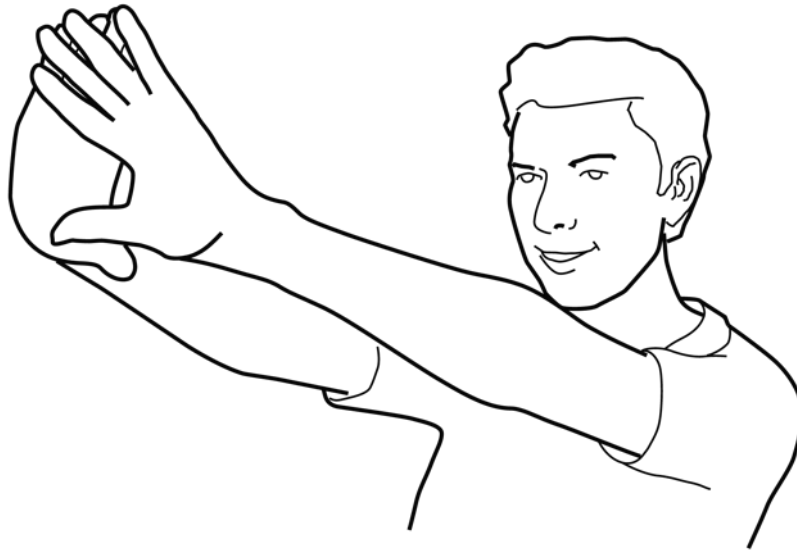

2. With both eyes open, focus on any distant object centered in the triangle (such as a light bulb or door knob).
3. Maintaining focus on the object centered in the triangle and - keeping your head and both hands still - close your right eye.
4. If the object is still in the triangle, you are left-eye dominant.
5. Maintaining focus on the object centered in the triangle and - keeping your head and both hands still - close your left eye.
6. If the object is still in the triangle, you are right-eye dominant

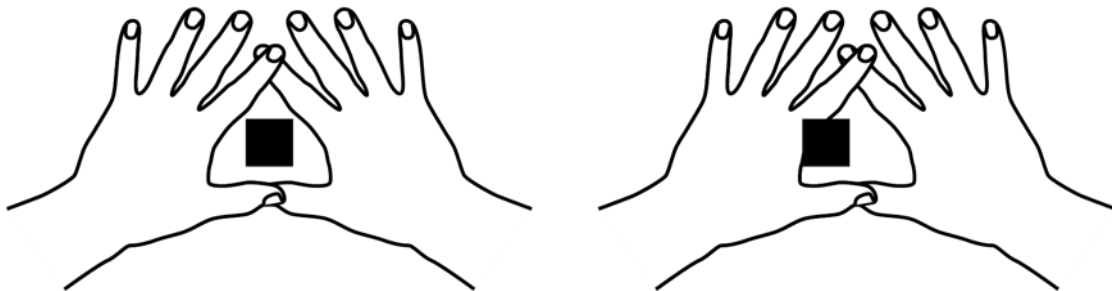

7. If the object is in the triangle with either eye, then you are dominant eye neutral.

Headwear with HMT Devices

(Check RealWear Website for specific model availability.)

HMT devices are equipped standard with a Removable Head Strap.



Compliant with your PPE, HMTs can be mounted several other ways in order to increase stability, comfort, and safety.

Mounting with Hardhat and optional accessory clips.



Headwear continued

The HMT-1 can be mounted to a bump cap using a tri-band strap.



Mounting with a specially modified RealWear Baseball Cap




Mounting with tri-band strap and bump cap




Using the HMT with a Hard Hat

To get hard hat clips, visit shop.realwear.com.

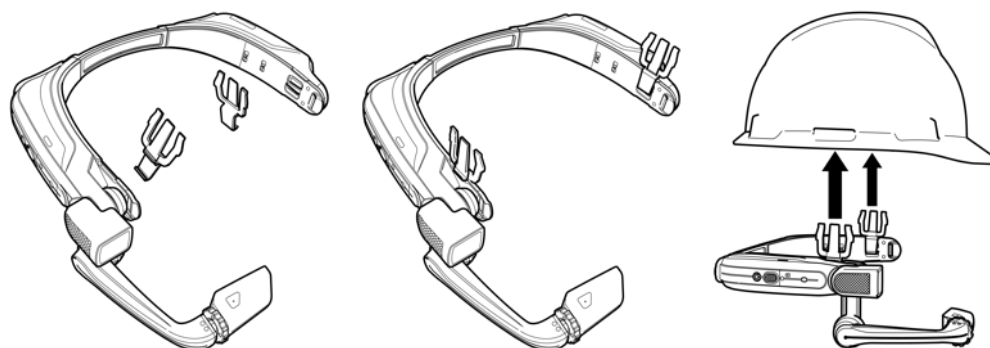


1. Hook the Hard Hat Clips into the HMT band and snap them into place.
2. Slide the clips into the hard hat accessory slots; the HMT band should sit outside of the hard hat's harness.
3. Put on the hard hat and if applicable, tighten until secure and comfortable.
4. To remove the HMT from the hard hat, pinch the clip fingers and push the clip out of the hard hat slots.

Using the HMT without a Hard Hat

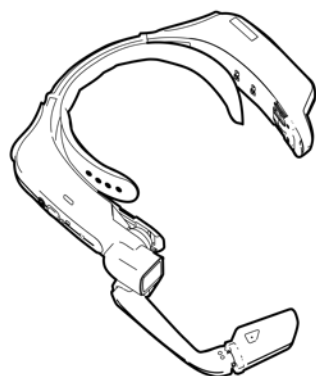

Attaching the Rear Pad

The Rear Pad snaps onto the HMT's rear band; align the openings on the Rear Pad to the pegs on the HMT's rear band, and snap into place.

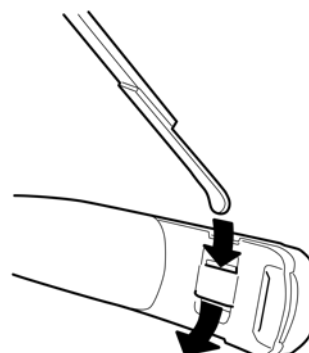

Attaching the Head Strap

Insert the end of the strap into the inside slot on both sides of the HMT as shown. Fold the end back on itself and secure using the Velcro patch.

Wearing HMT with Eye Protection

If you wear eye-glasses to operate a computer, or eye protection for your work, continue to wear the same glasses or eye protection while using HMT. While HMT devices are designed to work well with or without eye-glasses or eye protection, RealWear recommends wearing eye protection while using an HMT.


HMT-1 Charging Basics

HMT-1 Direct Charging

To charge the HMT-1 battery while installed in the HMT-1, use the included Wall Charger and USB-C cable.

To recharge the battery:

1. Connect the USB Type-C charging cable to the Type-C USB port located under the rubber lid on the rear of the boom-side housing. Using the USB-C cable and USB C port will ensure the shortest charging time.

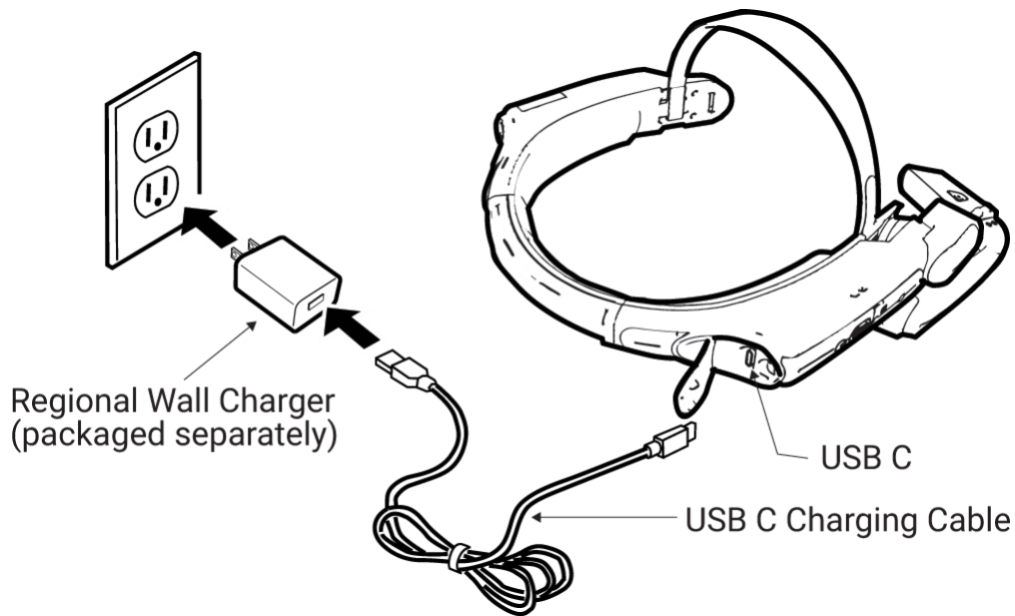


2. Connect the charging cable to the wall charger.
3. Plug the wall charger into an electrical outlet. The power button LED will blink throughout the charging cycle, changing color from Red to Yellow to Green, depending on the amount the battery has charged. Green signifies a full charge.

A Red light means the battery is extremely low or dead.
A Yellow light means the battery is less than 100% and charging.
A Green light means the battery is full.



The battery icon will 'fill up' indicating its state of charge.

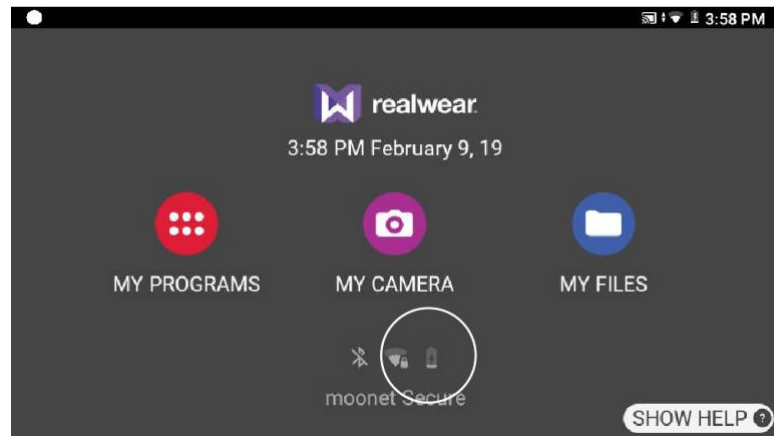

Inserting Rechargeable Battery

The RealWear HMT-1 requires a rechargeable battery to function. The device ships with the battery already installed.

1. Open the rubber lid located on the back of the battery housing and unscrew battery cap by turning counter-clockwise for approximately 1/8 turn.
2. Align and insert the battery in the compartment, with the contact positioned at the bottom of the battery compartment.
3. Align the white dot on the battery cap with the white dot on the HMT-1 housing and slide it fully into the compartment. Secure the cap by turning it clockwise for approximately 1/8 turn.



Multi-charger Charging and Use

You can charge up to six spare batteries simultaneously using the Multi-charger.

Warning: DO NOT charge batteries with third-party chargers.

Power the charger using ONLY the RealWear charging cable included with the Battery charger.


1. Insert the batteries contact side down, contact side first into the charging compartments.
2. Press down gently to secure.
3. A light will appear next to the battery contact when it is connected, and the display will read the current charge levels of each battery.
4. It is best to remove batteries when possible after charging is complete to ensure the optimal life of batteries and charger.




Configuring your HMT on Release 10

Settings

You can access Settings from My Programs. Go to My Programs and say 'SETTINGS'.

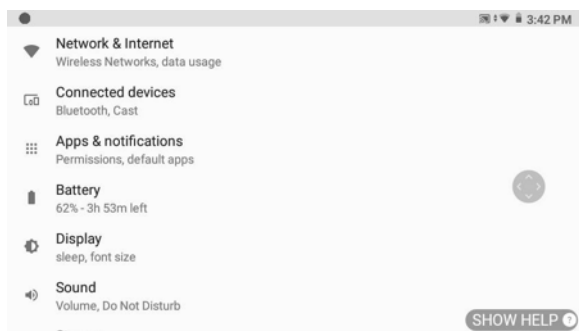

'Page down' to see more options.

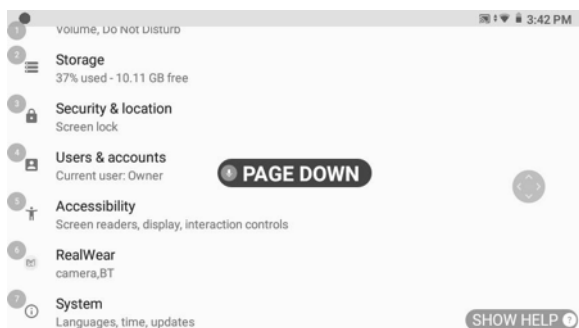

Settings provides access to important system level controls and capabilities. Each of the following Settings options can be select by speaking the corresponding commands:

- Network & Internet
- Connected devices
- Apps & notifications
- Battery
- Display
- Sound
- Storage
- Security and location
- Users & accounts
- Accessibility
- RealWear
- System


HMT Configure Continued

Setting Up Screen Lock


Using Android's Screen Lock feature protects your HMT device from unauthorized access. To setup the screen lock, do the following:

Step 1:

Enter Settings one of two ways. You can say "MY CONTROLS", then "MORE SETTINGS". Or you can say "NAVIGATE HOME", then "MY PROGRAMS", then "SETTINGS".

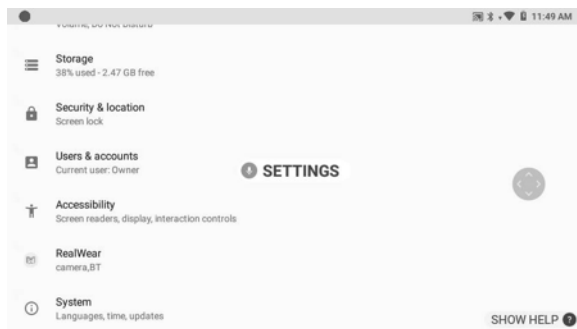


Step 2: Say "PAGE DOWN", then say "SECURITY AND LOCATION".

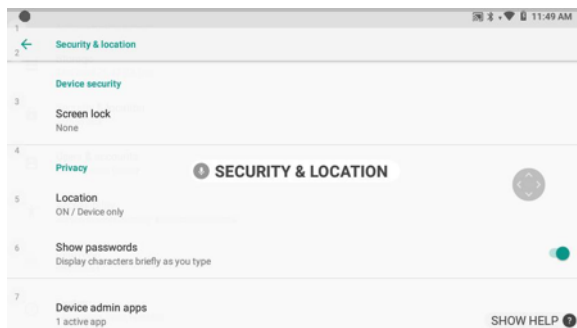


(Note, the Settings page will be scrolled to the last location visited after a reboot. So Settings may not be scrolled all the way to the top of the page. The instructions here assume you will start at the top of the page.)


Step 3: Say 'SCREEN LOCK' or select using the 'SELECT ITEM #' command. On the screen above the correct command would be "SELECT ITEM 3"

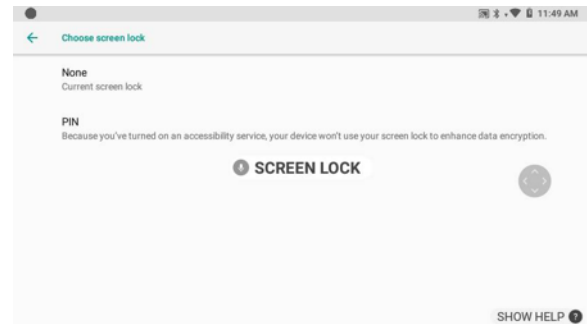


Step 4: Say the word 'PIN'

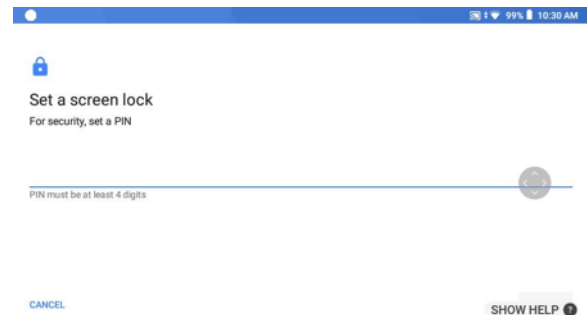


Step 5: Move your head left or right until the number you want to select is within the frame. Say "SELECT" to enter that number.

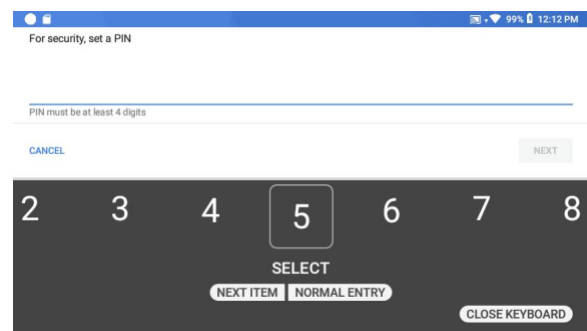

Step 6: Repeat to input your desired PIN sequence. The PIN may be from 4 to 16 digits. When complete say "NEXT ITEM".

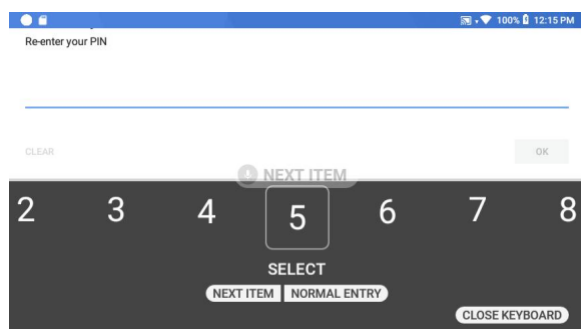


Step 7: Re-enter the PIN for confirmation. When finished, say "NEXT ITEM" or say "CLOSE KEYBOARD", then say "OK".

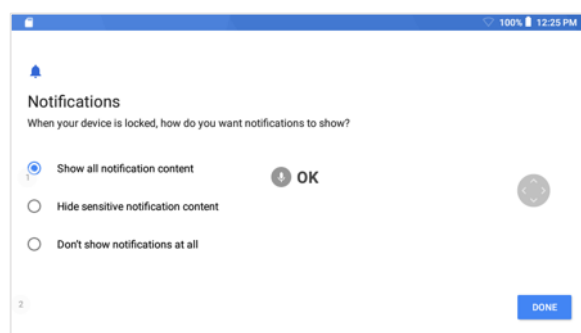


Step 8 Select desired Notifications display option. This will determine if the HMT will display notifications on the Home screen when the device is locked.

You can opt to view all the notifications or hide specific notifications.

You can also opt to hide all the notifications. The default is "Show all notifications". Simply say "SHOW ALL NOTIFICATIONS", "HIDE SENSITIVE NOTIFICATION CONTENT" or "DON'T SHOW NOTIFICATIONS AT ALL" to select.

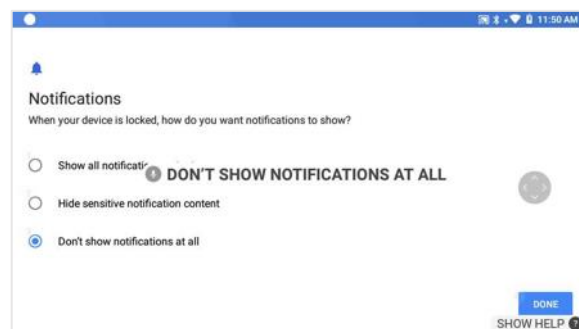

Step 9: When finished, say 'DONE'.

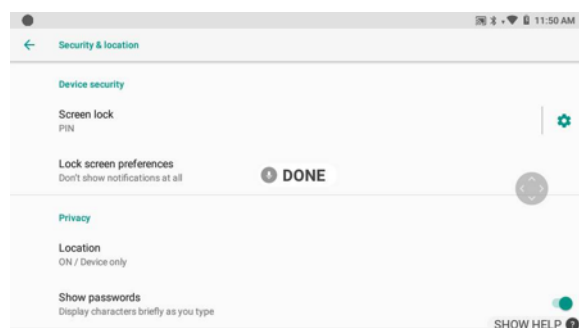

The Screen Lock is enabled, and the device will lock the next time it goes to sleep. You can press the power button for one second or less to lock the device. Or if the device is idle for an amount of time selected in Settings>Display>Sleep.


HMT Configure Continued

Unlocking the HMT


When screen lock is enabled, the device requires a PIN number upon waking from sleep mode or when the device is restarted.

To unlock the device:


Step 1: Press the Power button. When the lock screen appears say "UNLOCK".

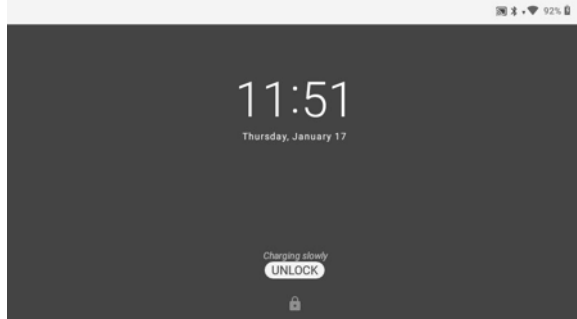


Step 2: Input your PIN. Move your head left or right to highlight numbers.

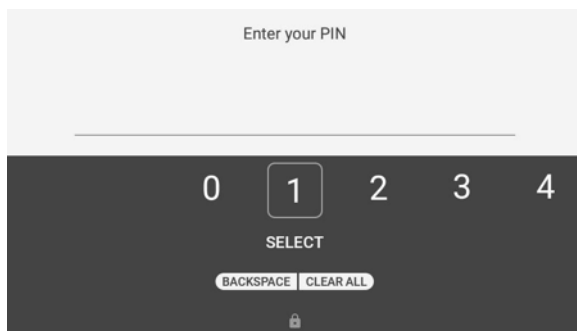

Step 3: When highlighted, say "SELECT" to enter the number. Repeat to enter your entire pin.

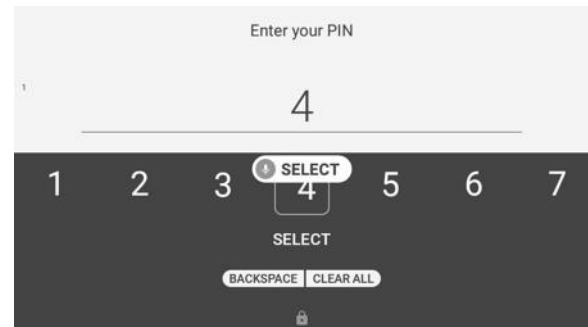

Step 4: When finished, say "ACCEPT" to unlock the device. The device will go to the Home Screen in the case of a reboot of the device or will return to the last screen open in the case of waking from sleep mode.

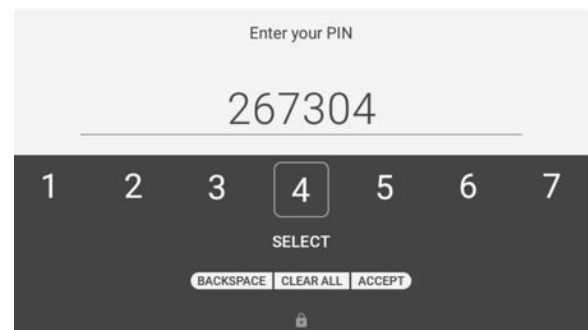

HMT Configure Continued

HMT Release 10 Wireless Update

Your device is already configured to keep its operating system up to date via over-the-air (OTA) updates distributed by RealWear. The HMT will not update automatically, it requires a user to launch the update.

Step 1: Power ON the HMT-1 and connect to a Wi-Fi network.

Step 2: Navigate to My Programs and say "WIRELESS UPDATE"



WIRELESS UPDATE

Check for updates

Step 3: An update may already have downloaded. If not, you may say "CHECK FOR UPDATES".



CHECK FOR UPDATES



Check for updates

✓ Your device's software is currently up to date.

A message will display if you're up to date.


If there is an available update, an option to download the package is displayed.

Step 4: Say "DOWNLOAD" or say, "SELECT ITEM (followed by the item number)". The software update download will start. The download time depends on the size of the package and the network connectivity.

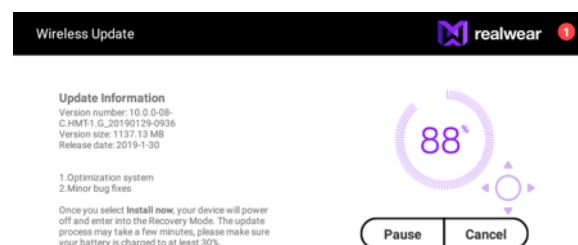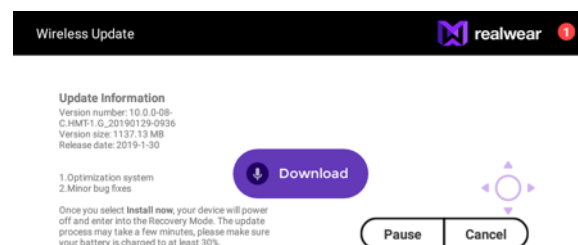


We recommend muting the microphones if the the download is large. Just say "MUTE MICROPHONE". When the download has finished, briefly press the large black Action Button on the boom-side of the HMT-1 housing. Then you can install the update via voice commands.


Step 5: Once the download is complete, an option to install now or later is displayed.

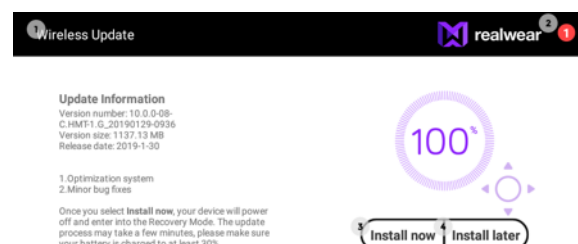


Step 6: If you say "INSTALL LATER", a pop-up to set the installation delay time is displayed for about 15 seconds.

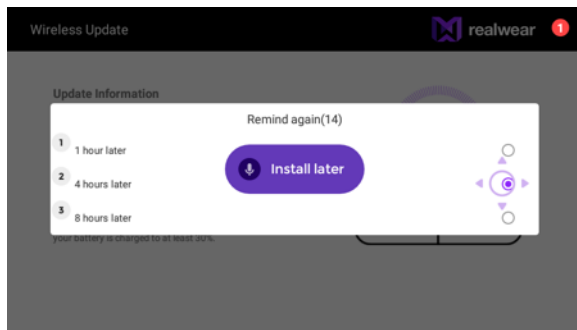

You can set the installation delay time to by 1, 4 or 8 hours. If the delay time is not set within the given time, the default delay timer is set to 4 hours.

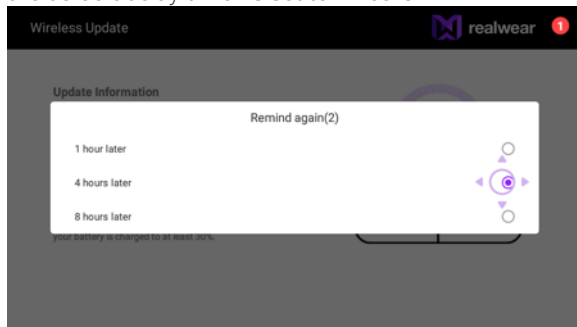

Step 7: Say "INSTALL NOW" to install and update the HMT-1 software immediately.

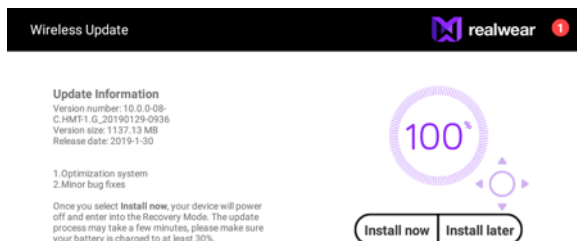

Warning Messages to Note During Software Update


'Be sure to read the following warning messages before proceeding with the software update'

Battery Alert


'We recommend not to use HMT-1 during the software update. Also ensure that there is at least 30 % charge before installing an update.'

Software Update Warning

'When the software update begins, the following warning is displayed.'

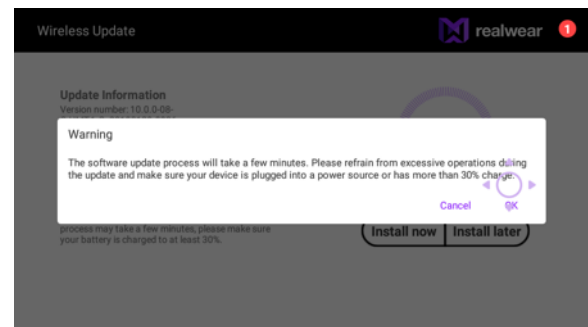

Say "OK" to proceed with the update.

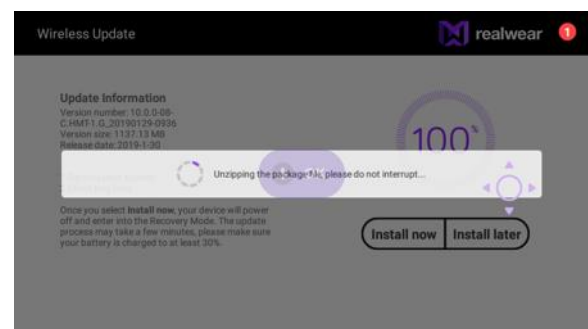

The HMT will reboot itself upon completion of the update.

HMT Configure Continued

Selecting HMT Interface Language

The HMT supports the following languages:

1. English (US)
2. French
3. German
4. Italian
5. Japanese
6. Korean
7. Mandarin Chinese
8. Polish
9. Portuguese (Brazil)
10. Russian
11. Spanish
12. Thai

To select the user interface language:

Step 1: Press and hold the large, black Action button on the boom-side housing.

Step 2: All the supported languages are displayed as preview, using their respective Country flags:



The device automatically scrolls through the language list and highlights one language at a time, for about two seconds each.

Step 3: When the desired language is highlighted, release the Action button and the device will immediately reconfigure to show commands only in that language.

HMT-1 MicroSD Card

You can insert a MicroSD card into the specified slot and store media files and documents.



	Part Name	Action
1	MicroSD card slot door	Covers the MicroSD card slot. Open this door to insert/remove the micro SD card.
2	Screw to open MicroSD card slot	Holds the MicroSD card slot door. Unscrew to open the door using a Philips #00 screwdriver.

How to insert a MicroSD card:

Step 1: Unscrew the MicroSD card slot door and pull the edges to open.




Step 2: Open the MicroSD card slot door and hold open with your thumb.



Step 3: Unlock the metal compartment and swing out to open.



Step 4: Insert the MicroSD card into compartment as shown below.

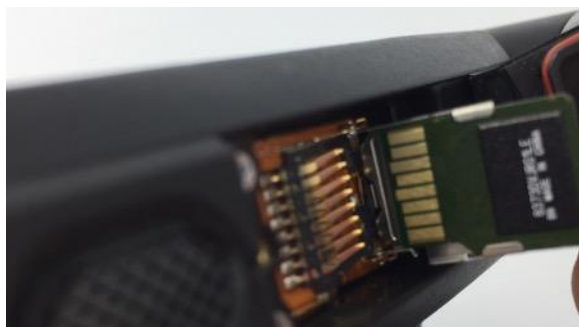

Step 5: Close the compartment and slide compartment left to lock in place.



Step 6: Close the MicroSD card slot door.




Step 7: Re-insert the screw and tighten to secure.





Setting Up and Using a MicroSD Card

Complete the following procedure to setup the MicroSD card. When first installed, the card will need to be formatted.

Step 1: Say "SHOW NOTIFICATIONS". One of the notifications should be an SD card message. It is expected that the message will state the card is unsupported, but this simply means it needs to be formatted. Follow the steps on this page to format and configure the card.

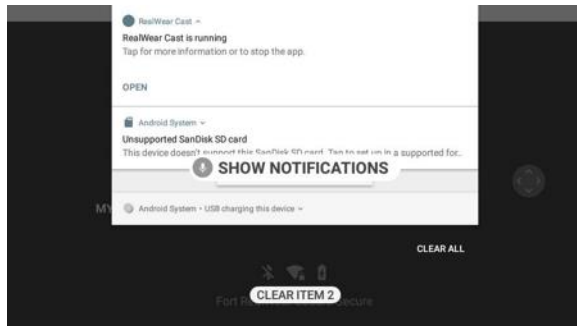

Step 2: Use the "SELECT ITEM #" command to select the notification number and setup the MicroSD card. Then say "OPEN".

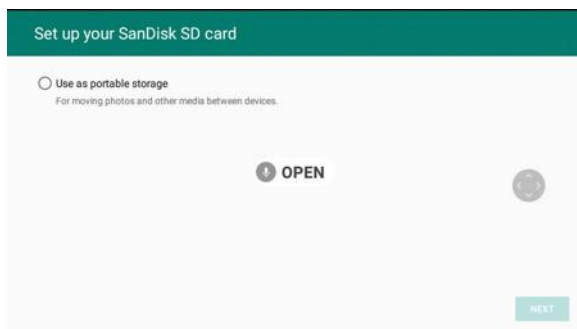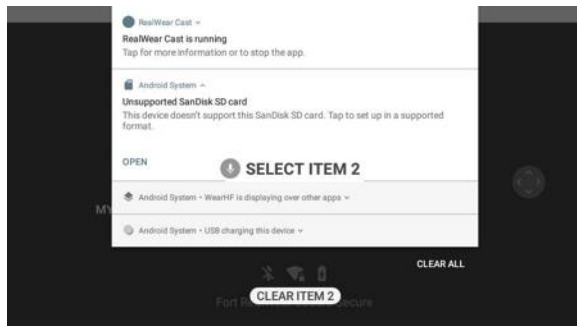


Step 3: Say "USE AS PORTABLE STORAGE"



Step 4: Say "NEXT"





Step 5: Say "ERASE AND FORMAT". The MicroSD card formatting progress is displayed.

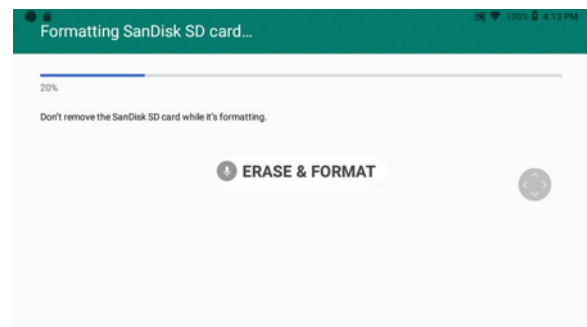


MicroSD Card Setup Continued


Step 6: When finished, say "DONE"

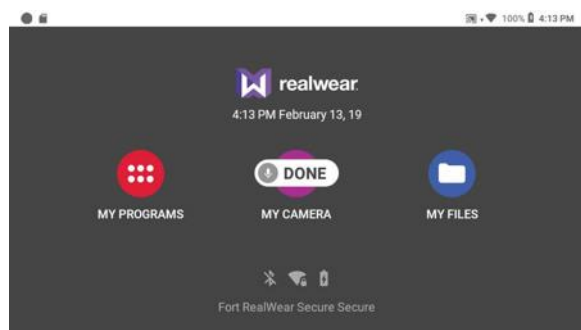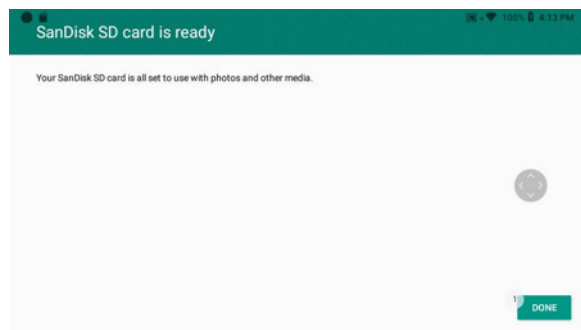



Step 7: Now enable the card as the default storage. Say "MY CONTROLS"

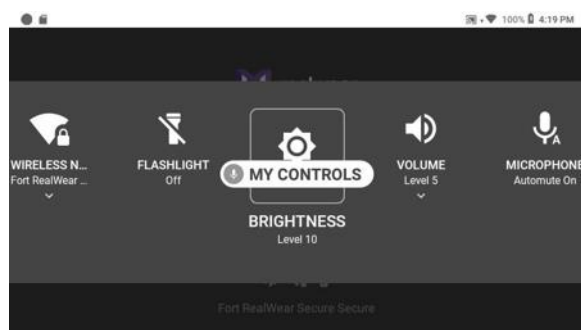


Step 8: Say "MORE SETTINGS"

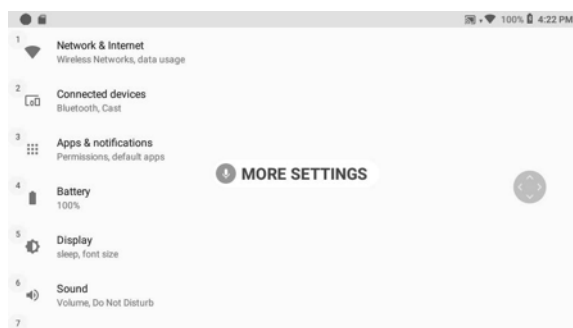

Step 9: Say "PAGE DOWN", then say "REALWEAR"

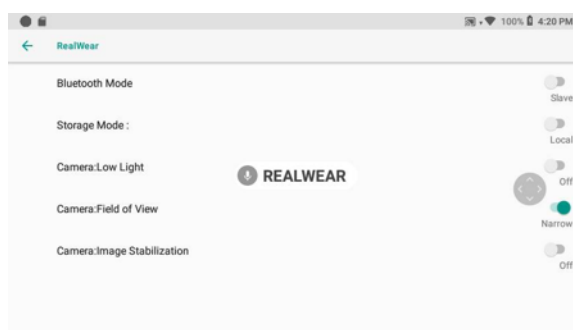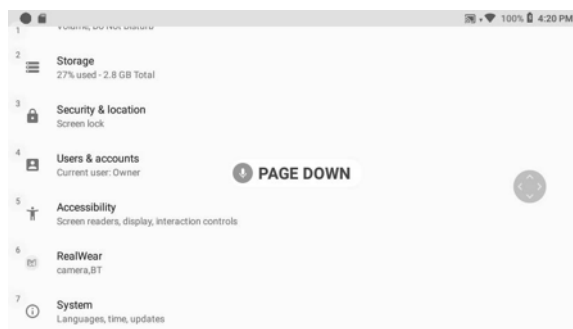

Step 10: Say "STORAGE MODE" to toggle between Local Storage and SD Card. When the Storage Mode toggle shows on and is labeled 'SD Card' you are ready to use your SD Card.

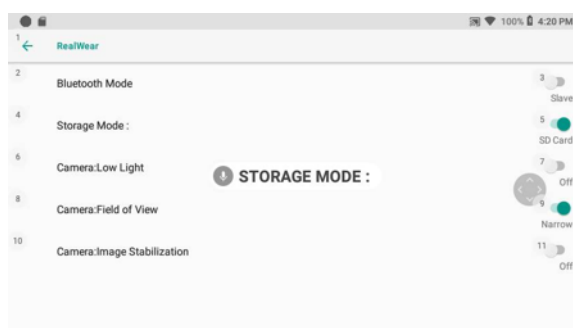

HMT Device Care

Powering Off the HMT

RealWear recommends that you power off your HMT device when not in use to conserve battery and ensure the longevity of the device. You can do so in two ways:

A. Hands Free

1. Say "MY CONTROLS"
2. Say "POWER OPTIONS"
3. Say "POWER DOWN"

B. Manual

1. Simply press and hold the silver power button on the boom-side of the device for three seconds.
2. Release the power button as soon as the tone is heard.
3. A Shutting Down screen will show briefly and then the device will turn off.

Rebooting the HMT

A. Hands Free

1. Say "MY CONTROLS"
2. Say "POWER OPTIONS"
3. Say "REBOOT"

B. Manual

1. Follow steps for turning off device
2. After device is fully off and the power light is off, press and hold the power button for 3 seconds. The device will boot up.

Sleeping/Waking the HMT

A. Hands Free

1. Say "MY CONTROLS"
2. Say "POWER OPTIONS"
3. Say "SLEEP NOW"
4. When asleep, a single, brief press of the Power Button will wake up the HMT-1.

B. Hands On:

- Press the power button briefly (less than one second) and release to sleep or wake up the device.

Storing the HMT

The HMT-1 and HMT-1Z1 are built rugged, but to ensure a long and healthy life:

Power off the device or put to sleep when not in use.

1. Store the HMT device in a cool, dry place.
2. Place the device on a level surface or securely hang it on a wall.
3. If mounted, you can keep the HMT device connected to a hard-hat or bump cap as needed.

HMT Care Continued

Cleaning the HMT device

Follow these instructions for cleaning the different areas of the HMT-1 or HMT-1Z1:

- The HMT is water resistant so cleaning with a damp cloth and mild soap is appropriate. Ensure that all covers are firmly secured when cleaning. The HMT should never be submerged.
- You may also use isopropyl alcohol wipes to clean and lightly sterilize the hard surfaces of the HMT. Dry surfaces or simply allow to air dry.
- Display and Camera glass: Use a standard micro-fiber cloth to wipe off glass parts. You can use screen cleaner to enable the sharpest possible images.
- Fabric parts: Under normal use the Overhead Strap and Rear Head Pad are expected to eventually wear down and need replacement. Replacement straps and pads can be purchased at <http://shop.realwear.com>. They may be cleaned with alcohol wipes, but excessive cleaning may accelerate wear.
- Battery: Should the battery become dirty, clean with a dry cloth alone or in combination with alcohol. If dirty, they may be cleaned with cloth, cotton swaps, toothbrush, and alcohol if needed. The contacts should not corrode. If the battery appears as all damaged, replace the battery immediately.
- Battery: The battery must always be kept dry. An indicator on the battery housing will turn red if exposed to excessive moisture. If the indicator is red, the warranty is voided, and the battery should be immediately disposed of properly.

Cleaning HMT Accessories


- Hardhat Clips: Hardhat mounting clips are made of plastic and can be cleaned with alcohol wipes or water. Tip: Toothpicks can be used to remove dirt in hard-to-reach areas.
- Tri-band Strap: The Tri-band Strap is comprised of plastic and fabric. It can be cleaned with alcohol wipes, but excess cleaning may accelerate wear. Replacement straps can be purchased at <http://shop.realwear.com>.
- Hearing Protection Ear Buds: The RealWear Hearing Protection Ear Buds are an electronic component with a metal connector, and cleaning of the buds themselves is not recommended. A polish with a dry or lightly damp cloth should be sufficient. Too much moisture could cause damage to the speakers.
- Foam Tips for Hearing Protection Ear Buds: The foam tips for the ear buds are comprised of memory foam. You may clean with a dry cloth. Too much moisture could damage the foam. The Foam Tips are considered consumables and are expected to eventually require replacing.
- Replacement parts can be purchased at <http://shop.realwear.com>.

HMT Interaction Modes

Control Using Gestures

Head gesture list control


Some interfaces leverage head movement to browse options.

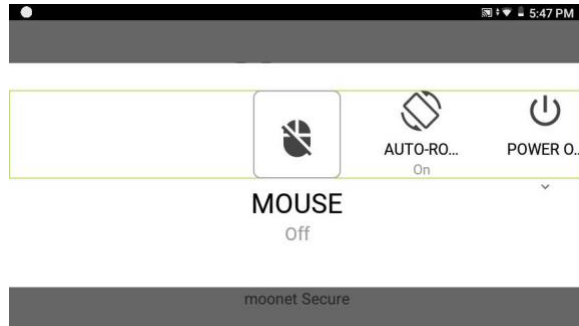

My Controls interface example.

Scroll Enable

From screens with a scroll view, you can say the command "SCROLL ENABLE".

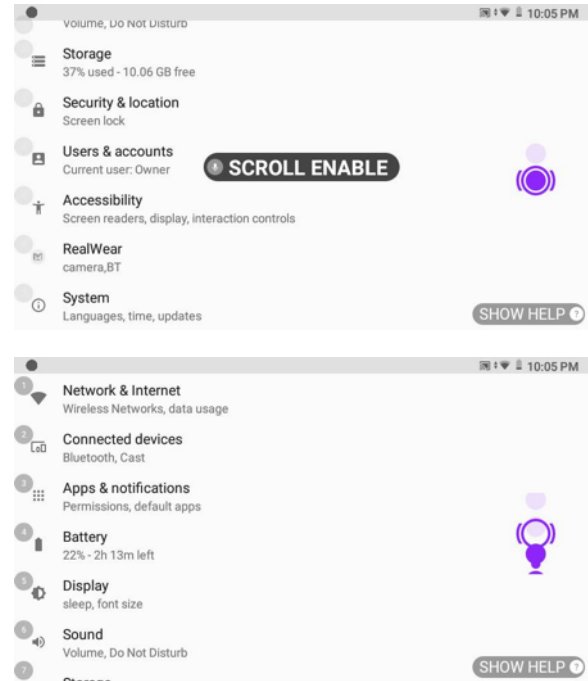

This will enable vertical head scrolling on list user interfaces such as the settings menu and will take the place of the page up and page down commands. To use, look downward and the screen will scroll down one page at a time.

To stop scrolling, bring your head back up to a level position, so that you are looking straight ahead. When you want to stop using this gesture and return to page up/down commands, say "SCROLL DISABLE".


This is extremely useful for quick scrolling to the bottom of a list; when the bottom is reached, quickly say "SCROLL DISABLE".

HMT Interaction Continued

Speech Keyboard

UPDATED FOR RELEASE 10.3.0

Speech Keyboard is the default method by which text may be entered into a text field using the HMT-1 or HMT-1Z1. Whenever a text entry screen is brought into focus or selected, the hands-free keyboard is displayed overlaying part of the application.

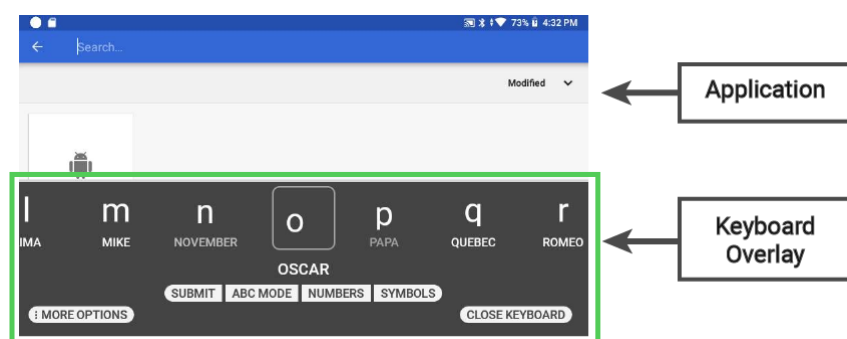

Speech keyboard provides various input methods:

- Normal Entry Keyboard
- Secure Entry Keyboard
- ABC Mode Keyboard
- Scan Code
- Dictation

Normal Entry Keyboard

Using the Normal Entry Keyboard you may enter letters, numbers, or symbols.

The Normal Entry Keyboard opens in the letter list. Scroll left or right to see the code word associated with the character.

To switch to the Numbers keyboard, say "NUMBERS".

To switch to the Symbols keyboard, say "SYMBOLS".

Note, the letter does not have to be in the focus square in order to say each code word. You may speak the phonetic commands for letters either individually or as a group. For instance, you could enter one character at a time by saying "ROMEO", then saying "ECHO" once the "R" character has registered, or you could enter as many letters as is needed with one command.

EXAMPLE: Saying "ROMEO ECHO ALPHA LIMA WHISKEY ECHO ALPHA ROMEO" in one breath without break will enter 'realwear' into the text field.

Remember the command 'SPACEBAR' is part of all three Normal Entry lists; you can say that at any time to add a space.

Secure Entry Keyboard

When a password field is selected, the Secure Entry keyboard appears. This means that phonetic speech commands are disabled, and the user instead uses head movements, left or right, to highlight a character. The user then says "SELECT" to make a selection.

Scan Code

Saying the command "SCAN CODE" opens the barcode reader and allows the user to scan a QR Code for remote keyboard entry using the RealWear Companion app on a mobile phone. This is convenient for passwords and long strings of text. Simply open the RealWear Companion app, select 'Remote Keyboard', enter text and tap on the QR Code. From the HMT keyboard say, "SCAN CODE", then scan the QR Code visible on the screen of your smartphone. You can also access the "SCAN CODE" option by saying "MORE OPTIONS".

Dictation

For Speech-to-Text entry, say "DICTATION", then immediately begin speaking freely. Dictation is cloud-based for all languages, so an internet connection may be required. Some languages support local dictation as well. You can also access the "DICTATION" option by saying "MORE OPTIONS". For more information, please visit www.realwear.com/support.

NOTE: If the keyboard becomes hidden or accidentally closed, use the "SELECT ITEM #" command to select the text field again and the speech keyboard will reappear.


If entering a password for WiFi authentication, simply say "PASSWORD" to activate the speech keyboard.

ABC Mode Keyboard

Introduced as a new feature in Release 10.3.0, ABC Mode for the speech keyboard is an alternative method of entering data into text fields. For longer text entry situations Dictation Mode might be a better, quicker option.

Note: Only English is currently supported in this mode - other languages may work to varying degrees but are not optimized for this mode and could cause user issues.


To enter ABC Mode simply say "ABC MODE" while the text entry field is active.

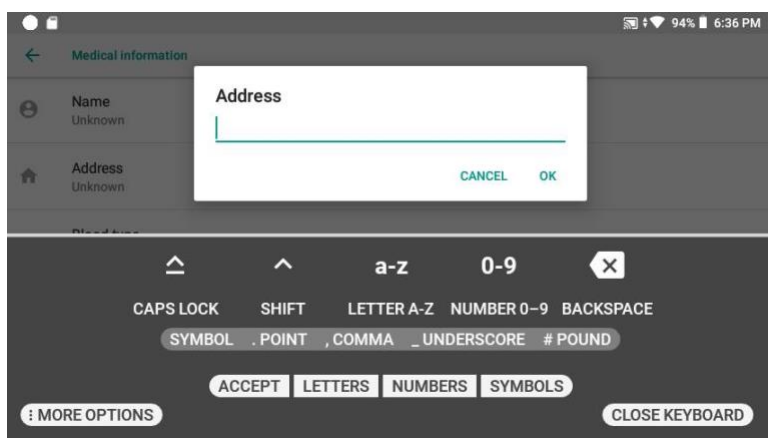

To enter letters say "LETTER (desired letters here)"; for example "LETTER T X T R Y" to enter the string 'txtry'. To enter numbers say "NUMBER (desired numbers here)"; for example "NUMBER NINE FIVE TWO" to enter the number '952'. Changing case, adding spaces, or adding numbers will necessitate a pause in the text string and re-use of the commands as needed.

Extended example:

To enter the text "Sample text 324" the user must say "SHIFT", "LETTER S", "LETTER A M P L E", "SYMBOL SPACEBAR", "LETTER T E X T", "SYMBOL SPACEBAR", "NUMBER THREE TWO FOUR".

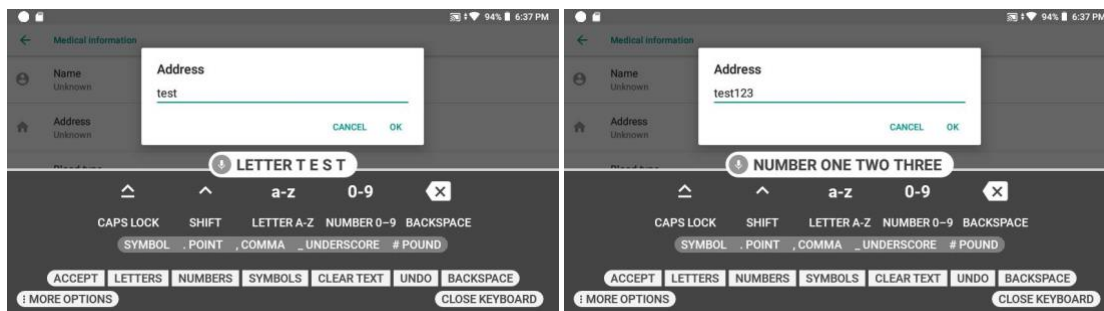

At any time the user may switch to other entry modes by simply saying the appropriate command as displayed. For example, say "LETTERS" to return to scrolling letter entry mode.

Speech Keyboard Continued

Keyboard Voice Commands

Voice Command	Action
"SECURE ENTRY"	Toggles to Secure Entry mode
"NORMAL ENTRY"	Toggles to Normal Entry Mode
"SCAN CODE"	Allows user to scan QR code for text entry To set the zoom level for clear scanning say "Zoom level 1-5". For example, to set the zoom level to 3, say "Zoom level 3".
"DICTATION"	Activates dictation and allows user to enter text based on speech recognition.
"NUMBERS"	Toggles to the Number Keyboard
"SYMBOLS"	Toggles to the Symbol Keyboard
"LETTERS"	Toggles to the Letter Keyboard
"ACCEPT"	Accepts the entered information and navigates to the next screen in sequence.
"SPACEBAR"	Inserts a single space.
"BACKSPACE"	Deletes the last character.
"CLEAR TEXT"	Clears the text in the Input box.
"CAPS LOCK"	Toggles between Uppercase and Lowercase letters
"ABC MODE"	Toggles to the ABC Mode keyboard
"LETTER [a-z]"	Starts a text string as spoken by the user. For example "LETTER X Z Y" will enter the text 'xyz' to the field.
"NUMBER [0-9]"	Starts a number string as spoken by the user. For example "NUMBER 4 7 2" will enter the number '472' to the field.
"SYMBOL [?]"	Starts a symbol string as spoken by the user. For example "SYMBOL UNDERSCORE DOLLAR QUOTE" will enter '_'\$' to the field.
"MORE OPTIONS"	Displays the "NORMAL ENTRY"/"SECURE ENTRY", 'DICTATION' and 'SCAN CODE' commands
"CLOSE KEYBOARD"	Closes the Speech Keyboard
"SHOW HELP"	Displays pop-up window with the help for commands associated with the current screen.

HMT Interaction Continued

Voice Control


Introducing WearHF™

WearHF™ is an innovative software solution that enables you to use your RealWear HMT as a hands-free device. It is easy to use and loaded with intuitive functions.

Speech Recognition — Say What You See


HMT devices operate based on speech recognition. Instead of pressing or tapping a control button on the screen, all you need to do is speak the name of the respective control. HMT devices use the latest technology for advanced noise cancellation and speech recognition which work even in the harshest noisy environments. It can recognize many different languages and accents and can detect the command even if you speak in a low voice.

All the commands associated with the specific screen should be displayed clearly on the screen, usually in ALL CAPITAL LETTERS. You can operate the device by speaking the name of any control. For example, the Home Screen has large icons with respective names such as "MY PROGRAMS" or "MY FILES". To access these applications, you can say the application name and the corresponding screen is launched.

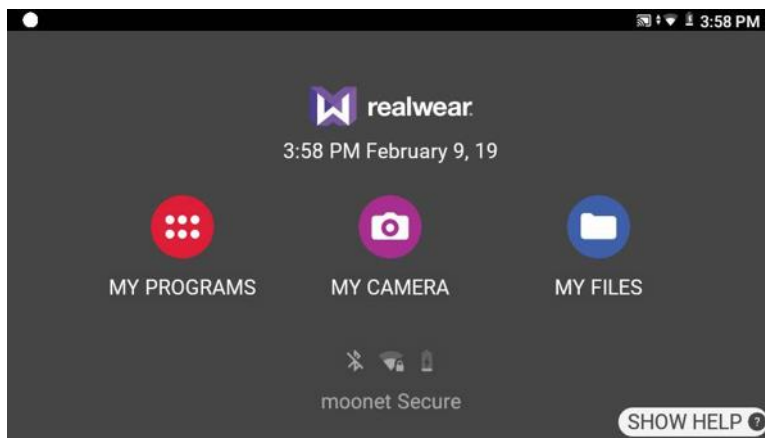

Anytime Access Help

You can access the help information regarding the commands associated with a particular screen, with "SHOW HELP" command. The "SHOW HELP" command is displayed on all the screens. The help screen is displayed as a pop-up window. You can either say the command you desire or say "HIDE HELP" to close the pop-up window. Even when the help window is closed, the HMT-1 will continue to listen for and respond to those commands.

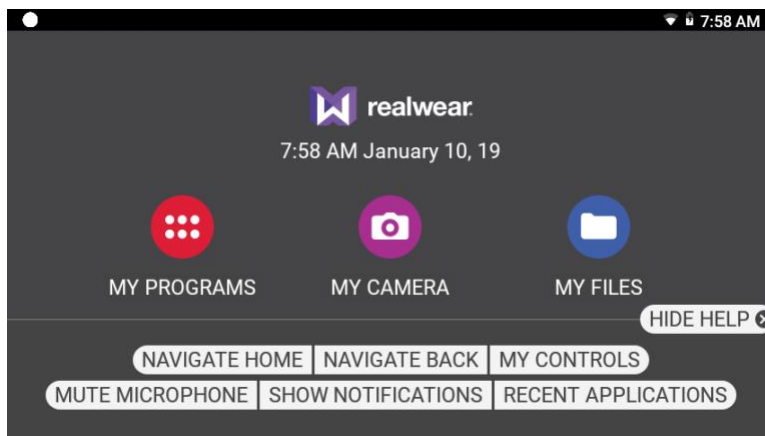


Voice Continued

Alternate Speech Recognition

Sometimes, the control on the screen has no name, is a scroll button without a label, or is a file with an unpronounceable filename such as 3454-x.pdf. WearHF™ automatically proposes an alternative speech command and assigns a number. This number is displayed next to the respective control on the screen. To recall the specific control numbers for that screen, say "SHOW HELP". To select a specific control, use the number assigned to it. For example, you can say "SELECT ITEM 1" to select the item associated with number 1.


Note some command numbers might be hidden by a SHOW HELP command as it may bring up both the command label popup and the alternative speech command numbers. When you say "HIDE HELP" the command numbers will remain on screen for a moment in order to see those items behind the pop-up window.

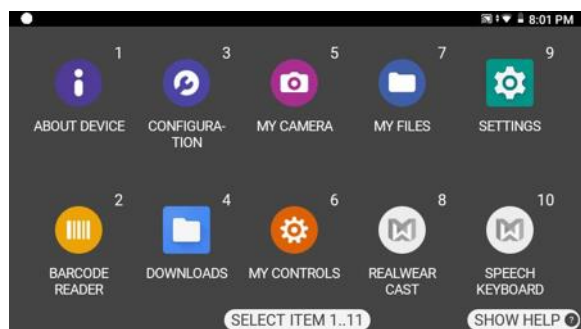

Mute Microphone

To stop the speech recognizer, say "MUTE MICROPHONE". The device will not respond to your voice commands while the microphone is muted, and a red warning sign is displayed on the screen.

To restart the speech recognizer, tap once on the Action button on the side of the device, located just in front of the Power button.

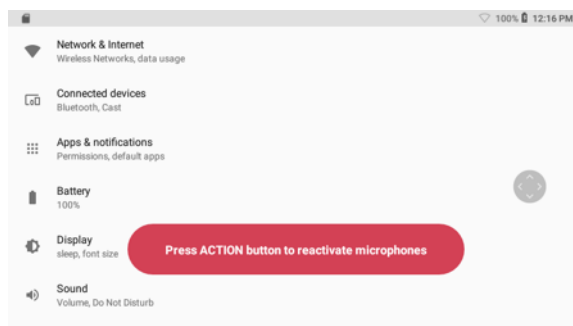

Scroll Up and Down

On screens with scroll views, you can scroll using the following voice commands.

Voice Command	Action
"PAGE UP"	Navigates to 1 page up.
"PAGE DOWN"	Navigates to 1 page down.
"PAGE LEFT"	Navigates to 1 page left.
"PAGE RIGHT"	Navigates to 1 page right.
"SHOW HELP"	Displays pop-up window with the help for commands associated with the current screen.

For example, In Settings page, we can use voice command "PAGE DOWN" to scroll down and "PAGE UP" to scroll up.

 
HMT Release 10 Software Overview

Home Screen


The Home Screen is the primary user interface view and dashboard for the HMT and is where you start when you power on the HMT.

The Home Screen allows HMT users to quickly access files and key applications while providing useful information such as the time, date, WiFi, and battery status.

Jump to primary applications directly from the Home view by simply saying what you see. To launch the apps, simply say the corresponding commands:



"MY PROGRAMS"

 


"MY CAMERA"



"MY FILES"

Tip:

- Quickly return Home at any time using the global speech command "NAVIGATE HOME".
- You can also single tap the Action Button once to return to the Home Screen when needed.
- Note: your organization may have modified the home screen to add or subtract some of the launch icons.

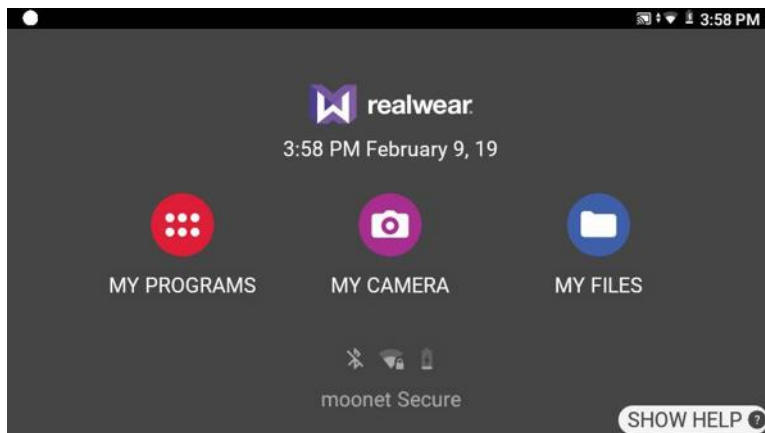

HMT Home Screen

Accessing the Home Screen

To access the Home Screen from anywhere in the system, say "NAVIGATE HOME".


Home Continued

Control Buttons

You can access the various applications by activating the following controls provided in the Home Screen.

Voice Command	Action
"MY PROGRAMS"	Launches application launcher to see and access all the applications installed in the device.
"MY CAMERA"	Launches camera.
"MY FILES"	Launches file manager to easily access documents, videos, photos and other files.
"SHOW HELP"	Opens the help panel.
"MY CONTROLS"	Launches the Control Panel for easy access to some commonly used settings
"SHOW NOTIFICATIONS"	Launches and displays recent notifications.

Home view with Help panel active:

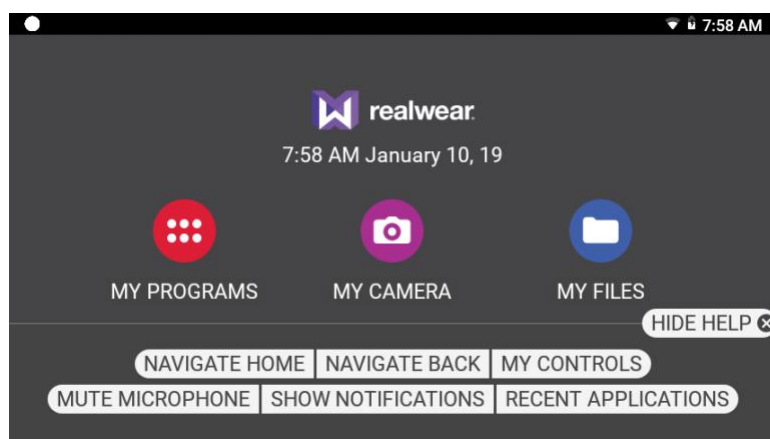

When the Help Panel is open, say "HIDE HELP" to hide.

Software Overview Continued

My Programs




My Programs enables HMT users to access installed applications.

Applications provided by default are:

- About Device
- Barcode Reader
- Configuration
- Downloads
- My Camera
- My Controls
- My Files
- Settings
- Wireless Update


My Programs user interface view.

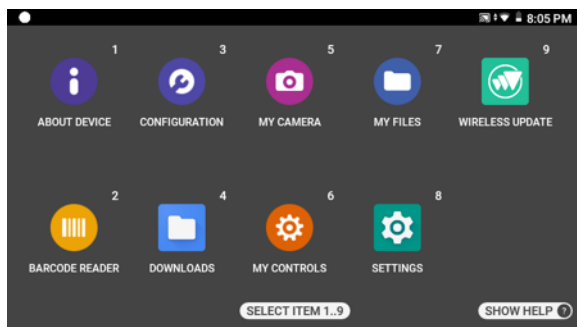

You can activate any application by just saying the application name as written underneath the application icon even if the icon is not fully visible. For example, to start the camera, say "MY CAMERA".

You can also launch an application by saying the number associated with the application. For example, to launch an application with item number 8, you say "SELECT ITEM 8". You can see up to ten applications in a single screen. To scroll and view other applications, move your head to your left or right.

To view contextual voice commands, say, "SHOW HELP HELP."

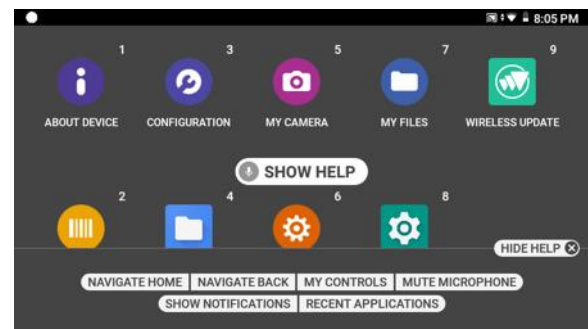


The help menu will stay active until you dismiss it by saying "HIDE HELP".

Software Overview Continued

Recent Applications

To browse recent applications, from any screen, say "RECENT APPLICATIONS". After a moment, numbers will appear in the upper right corner of each open app.

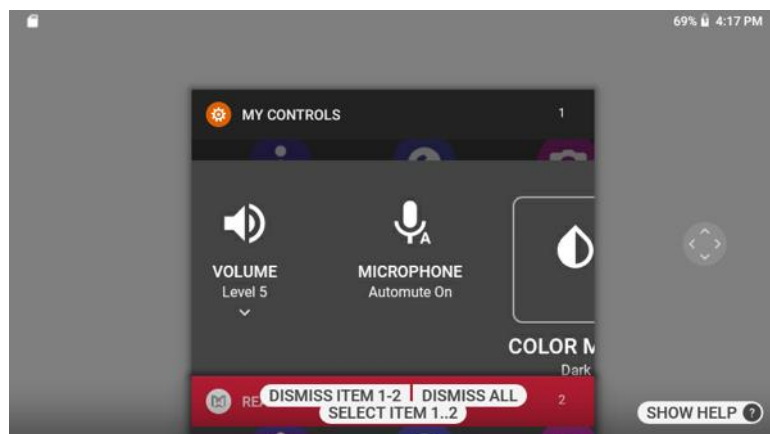

Use the "PAGE DOWN" and "PAGE UP" commands to scroll through open applications.

Select an app to open by speaking the name of the application, or use the "SELECT ITEM #" command, referencing the number in the upper right corner.

To dismiss an app from the list say, "DISMISS ITEM #", or to dismiss all, say "DISMISS ALL"

Recent Applications Voice Commands

Voice Command	Action
"RECENT APPLICATIONS"	Displays the list of all the applications running in the background, along with the item number associated with each application.
"PAGE UP"	Scrolls to the previous page of recent applications list.
"PAGE DOWN"	Scrolls to the next page of recent applications list.
"SELECT ITEM 1" "SELECT ITEM 2" "SELECT ITEM 3" ...	Opens the application associated with the specified item number.
"DISMISS ITEM 1" "DISMISS ITEM 2" "DISMISS ITEM 3"	Stops the application corresponding to the specified item number. For example, to stop the application associated with item number 5, say "DISMISS ITEM 5".
"DISMISS ALL"	Stops all currently running applications.
"SHOW HELP"	Displays extra commands.



Software Overview Continued

My Files




View documents, photos and video files locally stored or stored on an installed MicroSD card using the My Files app. Launch My Files from the Home Screen or My Programs.

The My Files view displays a set of folders for:

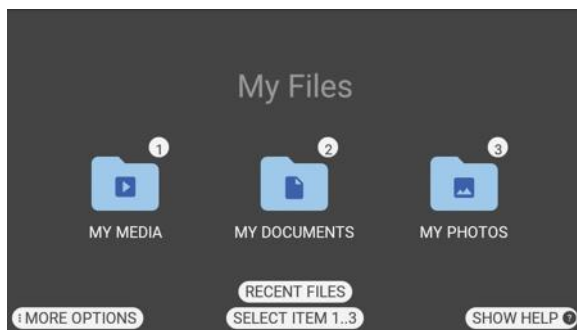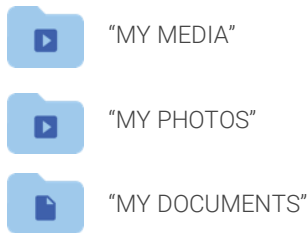

My Files Screen

When on the My Files view, say 'MORE OPTIONS' to open the options panel and access the Scan Bookmark tool.

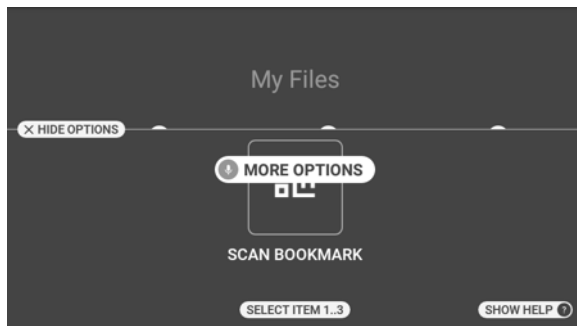


From My Files say "RECENT FILES" for quick reference to any recently opened file.

My Files Continued


My Photos




My Photos contains all still image files organized into folders in supported formats. By default, a folder called Camera will display. It contains images captured in the HMT Camera app.

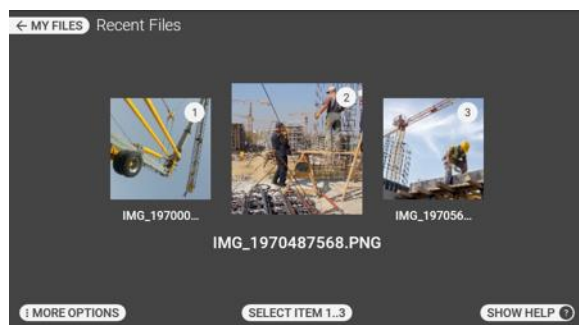


Open My Photos from the My Files view.

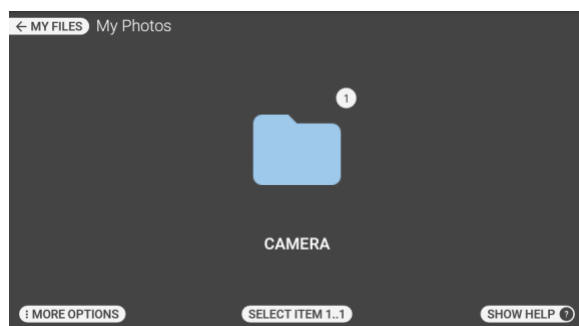

The command "MORE OPTIONS" provides access to a sorting featuring to help manage photo files. Open the options panel from the My Photos view.

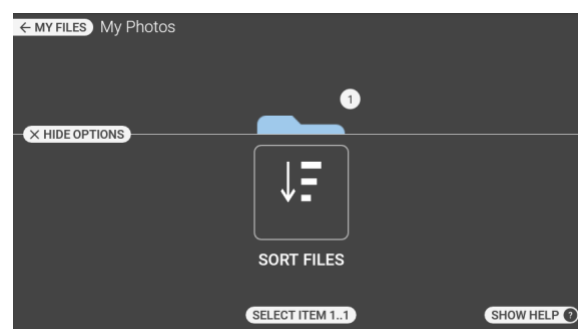

The Camera folder contains a list of photo files. Browse images by looking left or right, then select using the "SELECT ITEM #" command to open the file.


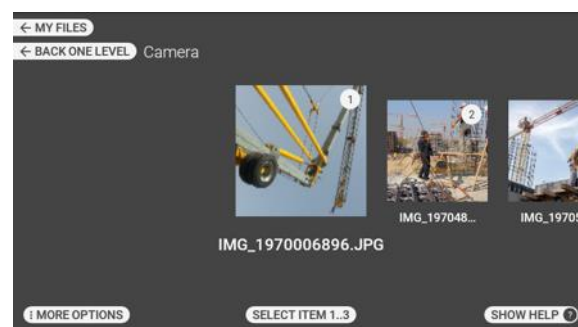


My Files Continued

My Media



The Camera folder contains a list of video files taken using the HMT.

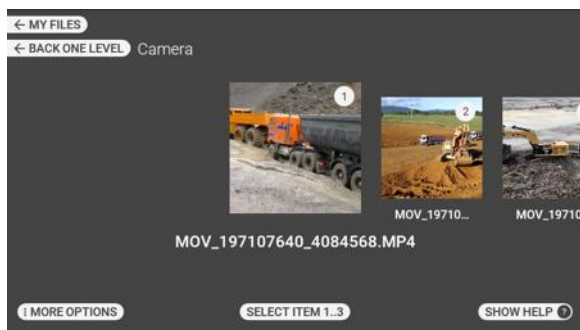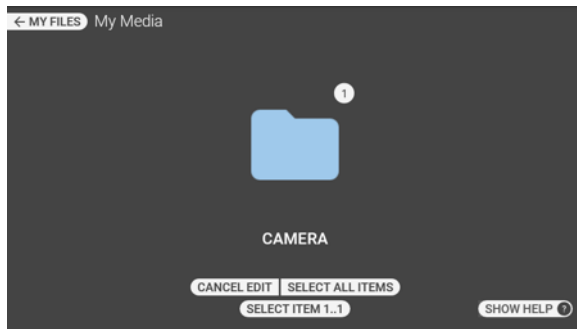

My Documents



Accessing File Browser Functions

Voice Command	Action
"MY MEDIA"	Displays files stored in the Videos folder and videos recorded using the HMT-1 camera and stored in DCIM folder. The supported file formats are: MP3, WAV, AVI, MP4, WEBM.
"MY DOCUMENTS"	Displays files stored in the Document folder. The supported file formats are: PDF
"MY PHOTOS"	Displays files stored in the photos folder and still images captured using the HMT camera.
"RECENT FILES"	Displays recent files.
"BACK ONE LEVEL"	Navigates to the previous folder in the folder tree.
"SHOW HELP"	Displays extra commands.
"MORE OPTIONS"	Displays contextual options for each view.

My Files Continued

My Documents




My Documents



My Photos

You can open PDF files and image files using document viewer with hands-free control. If you select a PDF or image file from My Documents or My Photos, it is opened using the Document Viewer app.


Open a file by using the "SELECT ITEM #" command or by saying the name of the document without the file extension.

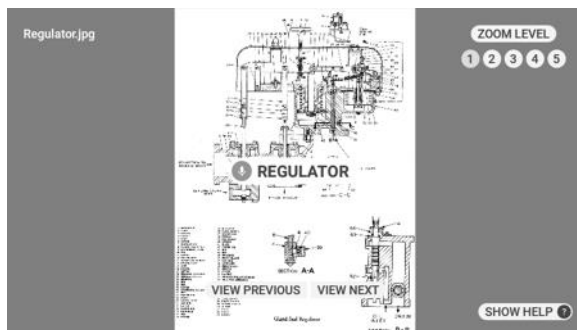

Zooming and Panning

To zoom in say "ZOOM LEVEL 2" or any level from 1 to 5. "ZOOM LEVEL 5" will zoom in furthest. When a document is zoomed in at any level past level 1, you can move your head to view different areas of the document.

A small thumbnail will appear in the upper left part of the screen with a purple rectangle representing the current view.

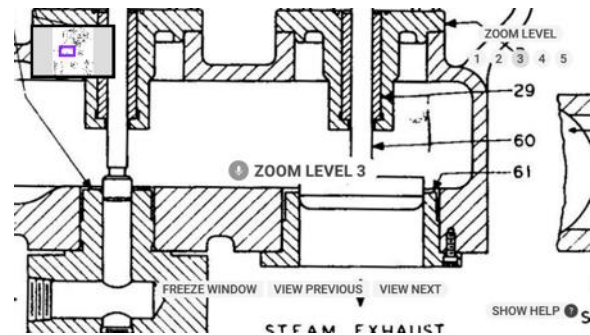

If you want to lock the location of the document say, "FREEZE WINDOW". You can then move your head while the view is frozen.

To return to panning say, "CONTROL WINDOW". Even when frozen, the view can be zoomed in or out. To return a zoomed in window to the exact center say, "RESET WINDOW".

Document Viewer Functions

Voice Command	Action
"ZOOM LEVEL 1-5"	Zooms the document view size by setting the level to specific value — 1 to 5.
"FREEZE WINDOW"	Prevents the document from scrolling in response to head gestures.
"CONTROL WINDOW"	Unfreezes the document and enables document scrolling in response to head gestures.
"RESET WINDOW"	Moves the zoomed in window to the center of the full size image/document.
"VIEW PREVIOUS"	Switches to the previous document.
"VIEW NEXT"	Switches to the next document.

My Documents Continued

Viewing Multiple Page Documents



To view documents with multiple pages, you need to use the following navigations controls.

Voice Command	Action
"GO TO PAGE 1", "GO TO PAGE 2", "GO TO PAGE 3"...	Scrolls to the specified page. For example, to go to page 5, say "Go to page 5".
"NEXT PAGE" "PREVIOUS PAGE"	Scrolls to next/previous page.
"MY BOOKMARKS"	Displays the bookmarks currently saved in the device, for the open document.
"SHOW HELP"	Displays extra commands.

Software Overview Continued


Media Player



My Media

If you select an audio or video file from My Media, it is played using the media player.

View or open files that you've captured using the HMT by navigating into the Camera folder.

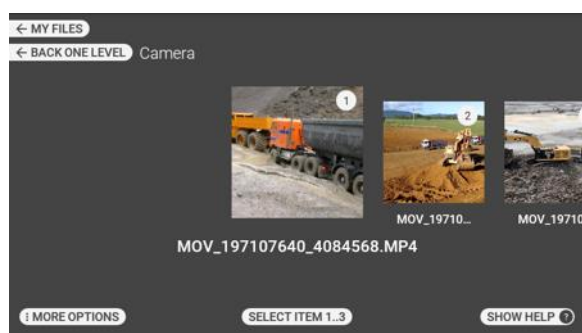

Select a file by using the "SELECT ITEM #" command. For instance, to select the third item, say "SELECT ITEM 3"

Playing a video file in the Media Player:



Media Player Commands for Video Playback:

Voice Command	Action
"VIDEO FORWARD"	Fast forwards the video 30 seconds.
"VIDEO REWIND"	Rewinds the video 30 seconds.
"VIDEO STOP"	Stops the video and goes to My Media screen.
"VIDEO PAUSE"	Pauses video while playing.
"VIDEO PLAY"	Plays paused video.
"SELECT VOLUME 1-10"	Sets the default volume level of the device to specified value. For example, to set the volume to 3, say "SELECT VOLUME 3".
"SHOW HELP"	Displays extra commands.

Media Player Continued

Playing an audio file in the Media Player:



Media Player Commands for Audio Playback:

Voice Command	Action
"AUDIO FORWARD"	Fast forwards the audio 30 seconds.
"AUDIO REWIND"	Rewinds the audio 30 seconds.
"AUDIO STOP"	Stops the audio and goes to My Media screen.
"AUDIO PAUSE"	Pauses audio while playing.
"AUDIO PLAY"	Plays paused audio.
"SELECT VOLUME 1-10"	Sets the default volume level of the device to specified value. For example, to set the volume to 3, say "Select volume 3".
"SHOW HELP"	Displays extra commands.


Software Overview Continued

Deleting Files from File Manager


You can delete the files from My Media, My Documents or My Photos folders.

To delete one or more files,


Step 1: Go to the My Media/My Documents/My Photos folder.

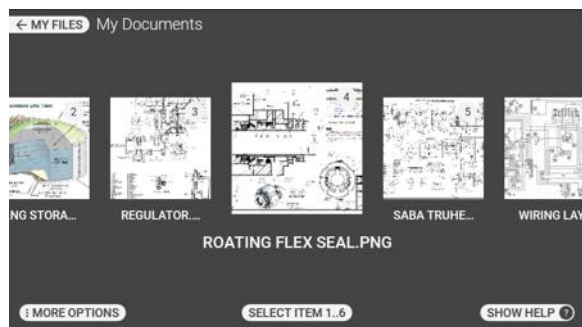

Step 2: Say "MORE OPTIONS"

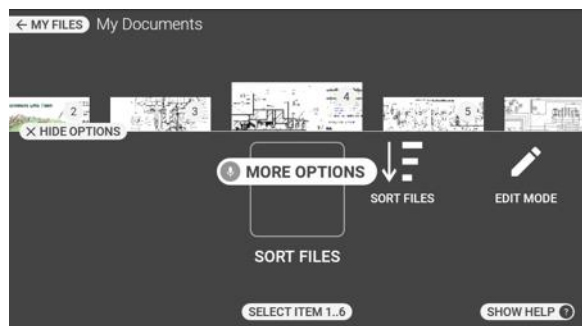


Step 3: Say "EDIT MODE". The Edit screen with option to select one or more files is displayed.

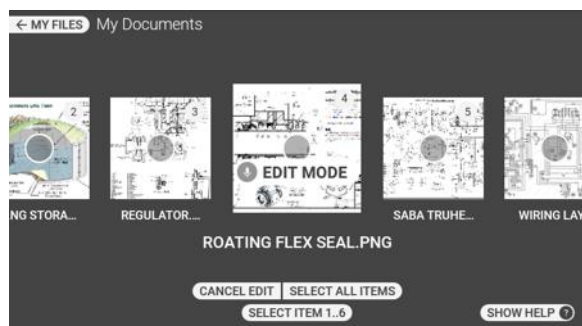

Step 4: To select a specific file, you need to use the number assigned to it. For example, you can say "SELECT ITEM 3", to select the third file, or "SELECT ITEM 5", to select the fifth file.



Step 5: Repeat as needed to select multiple files.

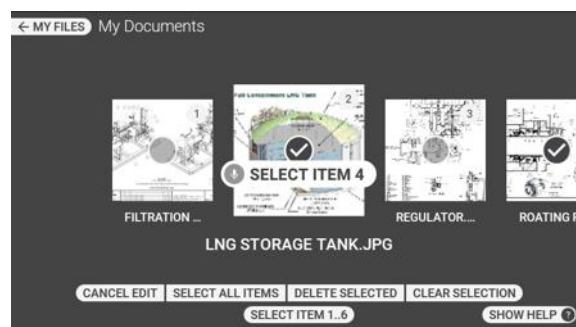


Step 6: To select all files say "SELECT ALL ITEMS".




Deleting Files Continued

Step 7: To delete the selected files, say “DELETE SELECTED” and “CONFIRM DELETION”.

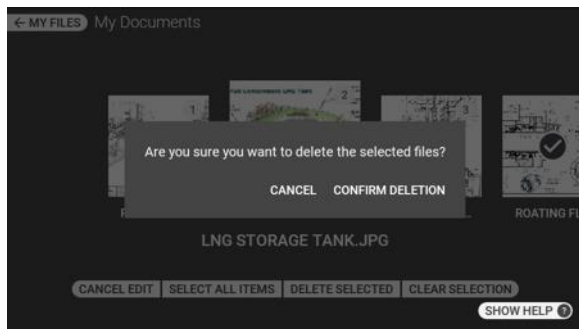

Step 6: To cancel the delete and retain the files, say “CANCEL”.

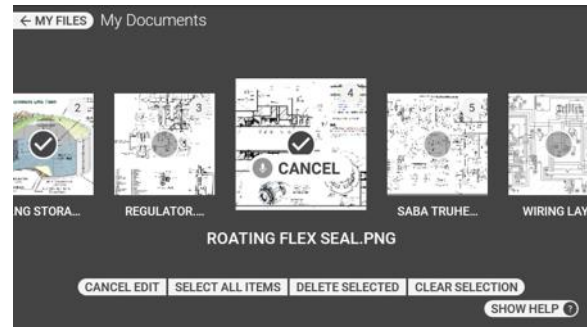

Options Command List

Voice Command	Action
"SORT FILES"	Open file sorting sub menu.
"EDIT MODE"	Open file editing sub menu.

My Documents - Edit Mode Command List

Voice Command	Action
"MORE OPTIONS"	Open the Options panel.
"SELECT ITEM 1", "SELECT ITEM 2" ...	Select an item by number.
"SELECT ALL ITEMS"	Select all items.
"DELETE SELECTED"	Delete selected item.
"CONFIRM DELETION"	Confirm deletion of selected item.


Software Overview Continued

My Camera



My Camera is a hands-free application for taking photographs and videos.

From the Home Screen or from the My Programs screen, say "MY CAMERA" to launch the My Camera application. When My Camera is launched, a live view of the HMT camera's optical input will be visible in the HMT display pod.

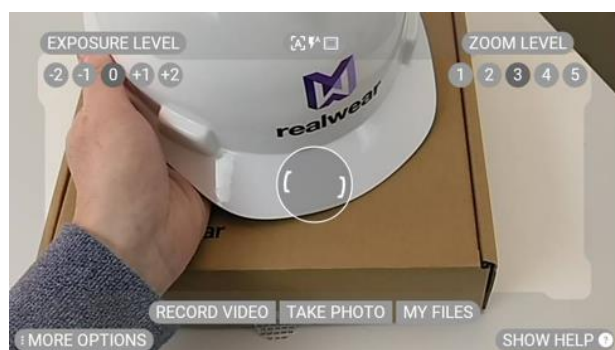

The Camera head-up display provides a full range of camera control and settings.

- Record video
- Take photo
- My Files
- Photo Preview
- Exposure level
- Zoom level
- Aspect ratio
- Image resolution
- Video resolution
- Frame rate
- Video stabilization
- Manual focus
- Field of View
- Camera flash

My Camera Continued

Record Video


Start capturing video by saying "RECORD VIDEO".



Say "STOP RECORDING" to stop recording video.


Take Photo

Take a photo by saying "TAKE PHOTO".

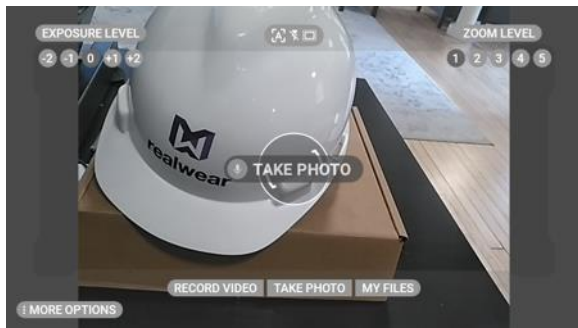

My Files

Say "MY FILES" to access stored files on the device.

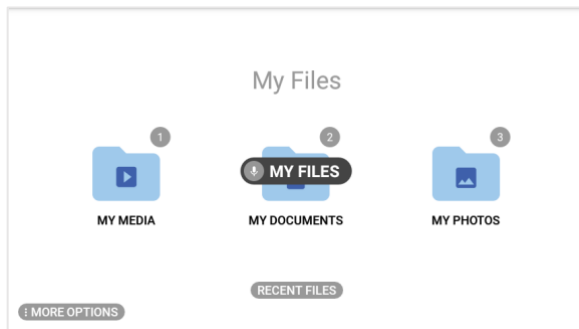

Preview

When a video or photo is captured, a preview will be displayed in the mid to upper right corner of the view.



Open it by saying 'PREVIEW' while the preview pane is displayed.

Preview of Photo:




Preview of Video:



My Camera Continued


Exposure Level

For greater adaptation to more environmental situations, Exposure levels can be adjusted on the fly simply by saying "EXPOSURE LEVEL MINUS TWO."

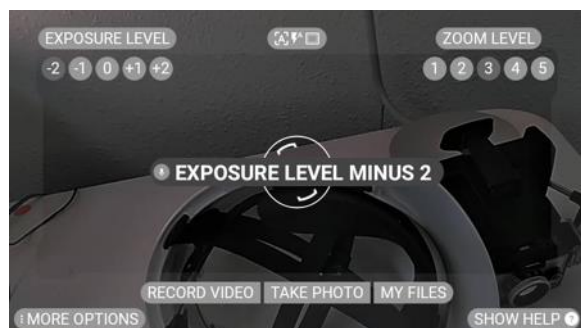

Zoom Level

As in other applications that use the Camera, say "ZOOM LEVEL #" to adjust it as you go.

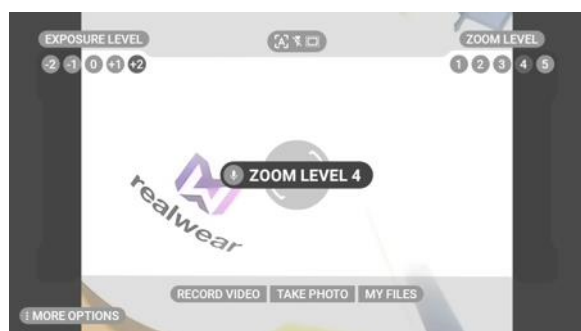

More Options

Saying "MORE OPTIONS" displays more camera settings that are useful for fine adjustments and device adaptation.



More Options in the My Camera app include:

- Aspect ratio
- Field of View
- Image resolution
- Video resolution
- Frame rate
- Video stabilization

Aspect Ratio

Saying "ASPECT RATIO" allows you to toggle between the two capture aspect ratio settings.



Say "SIXTEEN BY NINE" or "FOUR BY THREE" to change the setting.



My Camera Continued

Field of View

Saying "FIELD OF VIEW" toggles between narrow and wide field of view.


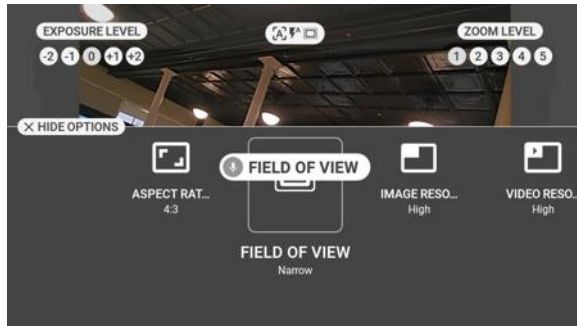


Image Resolution

Saying "IMAGE RESOLUTION" allows you to toggle between image resolution options.




Say "HIGH" or "LOW" to switch modes.

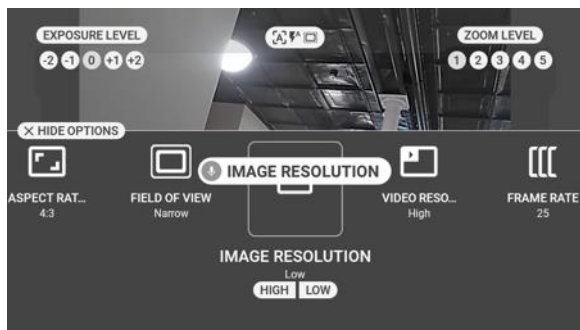


Video Resolution

Saying "VIDEO RESOLUTION" allows you to toggle between video resolution options.

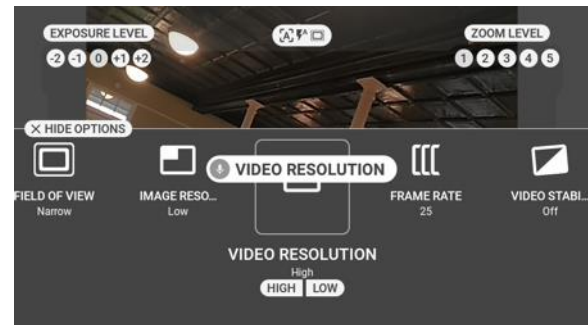


Say "HIGH" or "LOW" to switch modes.

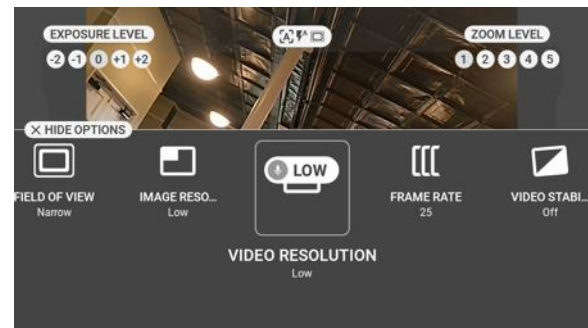


My Camera Continued

Frame Rate

Saying "FRAME RATE" allows you to toggle the frame rate at which video will be captured.

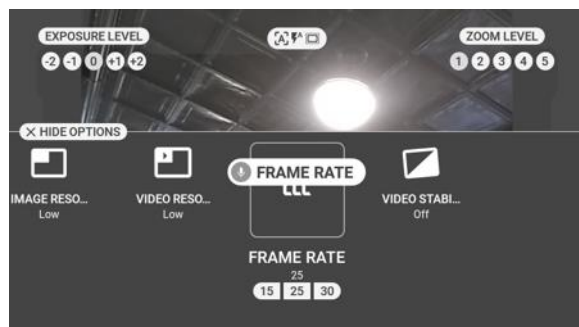


Say "FIFTEEN", "TWENTY-FIVE" or "THIRTY" to select the desired frame rate.

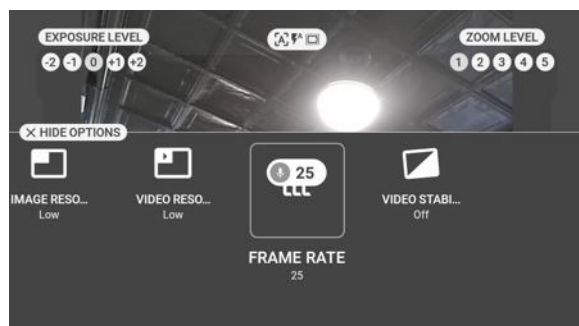

Video Stabilization

Saying "VIDEO STABILIZATION" will toggle on or off the built-in video stabilization function. When enabled, this provides a smoother video compensation for movement.

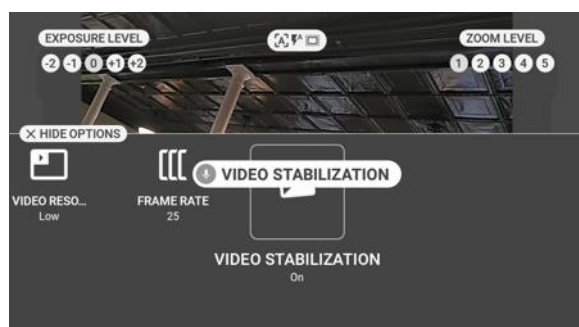

Additional Camera commands can be referenced by opening the Help panel.



- "MANUAL FOCUS"
- "FLASH ON"
- "FLASH OFF"

Manual Focus

Saying "MANUAL FOCUS" toggles on Manual Focus.



Once enabled, you can set a focus point by saying "FOCUS POINT ONE"... "FOCUS POINT NINE". For instance, to focus on point 6, say "FOCUS POINT SIX".



Say "AUTO FOCUS" to return to the Auto-focus function.

My Camera Continued

Flash On / Flash Off / Flash Auto

The default flash setting is off. Flash commands can be found in the SHOW HELP menu.

To turn on the Flash on say "FLASH ON". To turn off say "FLASH OFF".

Auto-Flash will use the camera's light sensor to detect if a flash is needed. To activate say, "FLASH AUTO". To take off of auto-flash, either say "FLASH ON" or "FLASH OFF"


Voice Command	Action
"RECORD VIDEO"	Starts recording video.
"TAKE PHOTO"	Captures a photo.
"MY FILES"	Opens my files.
"PREVIEW"	While preview thumbnail is visible, will open last captured photo or video.
"EXPOSURE LEVEL MINUS TWO", "EXPOSURE LEVEL MINUS ONE", "EXPOSURE LEVEL ZERO", "EXPOSURE LEVEL PLUS ONE", "EXPOSURE LEVEL PLUS TWO"	Adjusts exposure level. The screen will immediately show the results of the exposure level change. Default is Exposure Level 0.
"ZOOM LEVEL ONE", "ZOOM LEVEL TWO", ... , "ZOOM LEVEL FIVE"	Adjusts zoom level.
"MORE OPTIONS"	Opens Camera Options panel.
"MANUAL FOCUS"	Switches focus mode to manual.
"AUTO FOCUS"	Switches focus mode to auto.
"FLASH ON"	Turns flash on.
"FLASH OFF"	Turns flash off.

From My Camera options menu

Voice Command	Action
"ASPECT RATIO"	Opens settings sub menu for Aspect Ratio.
"FIELD OF VIEW"	Opens settings sub menu for Field of View.
"IMAGE RESOLUTION"	Opens settings sub menu for Image Resolution.
"VIDEO RESOLUTION"	Opens settings sub menu for Video Resolution.
"FRAME RATE"	Opens settings sub menu for Frame Rate.
"VIDEO STABILIZATION"	Opens settings sub menu for Video Stabilization.


My Controls

UPDATED FOR RELEASE 10.3.0

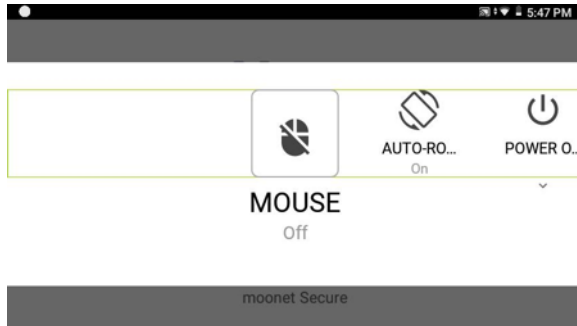

You can access the control panel from any screen. To access the control panel, say "MY CONTROLS".

My Controls is designed with a combination of voice controls and head movements.

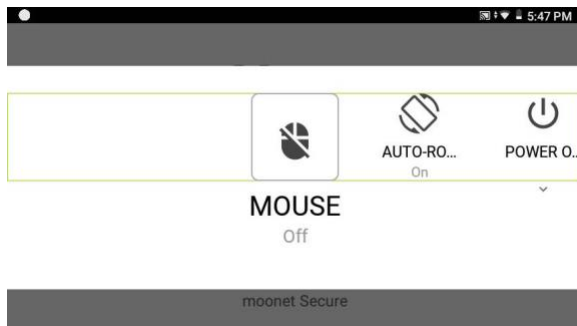

Browse the list of commonly used controls by turning your head left or right, then say the name of the item you want to adjust.

Note that Items are active and can be selected even when not in the viewable area.

My Controls provides device-level control of the following:



-  Mouse
-  Auto-Rotate
-  Action Button
-  Power Options
-  Bluetooth
-  Wireless Network
-  Flashlight
-  Brightness
-  Volume
-  Microphone
-  Color Mode
-  Dictation
-  Help Command

My Controls Continued




Mouse

Saying "MOUSE" toggles the head-tracked mouse on or off. When enabled, use the command "MOUSE CLICK" to make selections.

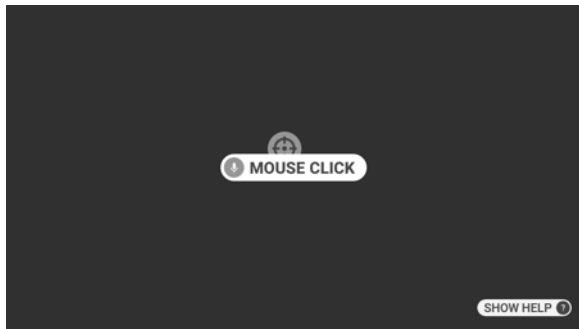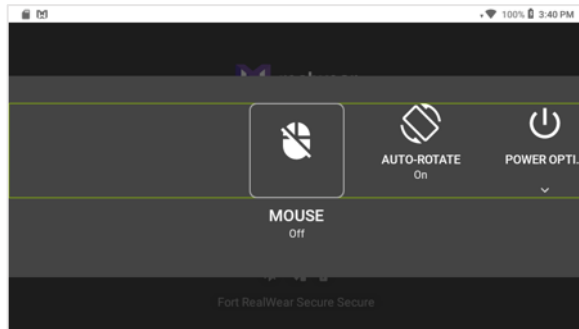


Auto-Rotate

Saying "AUTO ROTATE" toggles on or off screen rotation.

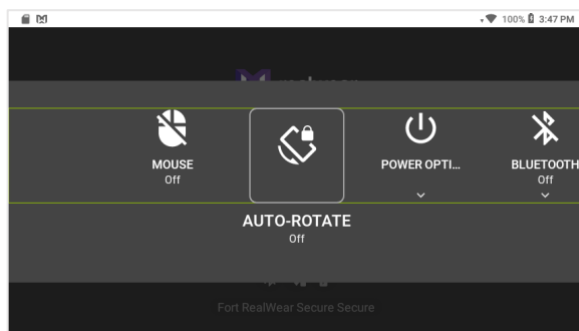


Action Button

Saying "ACTION BUTTON" allows you to toggle the result of pressing the Action Button between "HOMESCREEN" and "NOISE CAPTURE" modes.

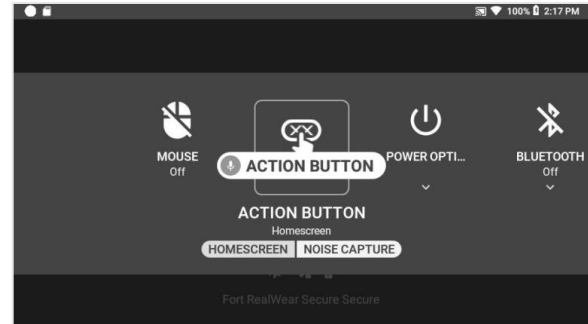


Power Options

Saying "POWER OPTIONS" provides access to power management options "POWER DOWN", "REBOOT", "SLEEP NOW" and "HOTSWAP".

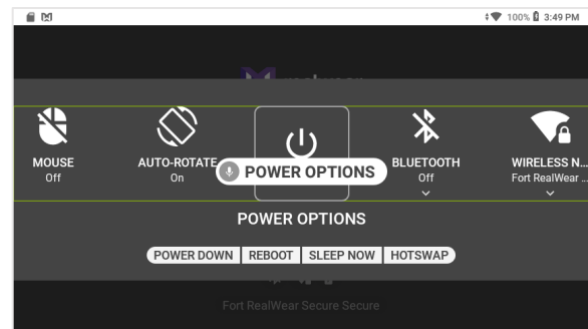

Bluetooth


Saying "BLUETOOTH" allows you to "ENABLE" or "DISABLE" Bluetooth, as well as access the "BLUETOOTH SETTINGS" for pairing to an external Bluetooth enabled device.

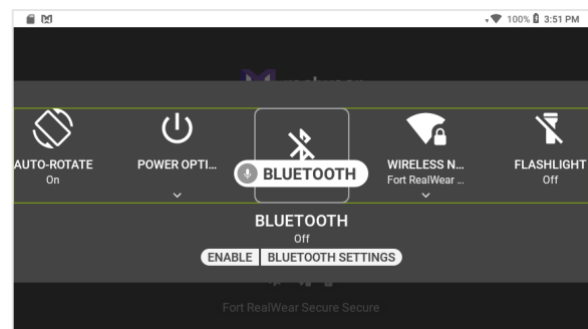




Wireless Network

Saying "WIRELESS NETWORK" allows you to "ENABLE" or "DISABLE" WiFi, as well as access the "WIRELESS NETWORK SETTINGS" for connecting to a WiFi network.

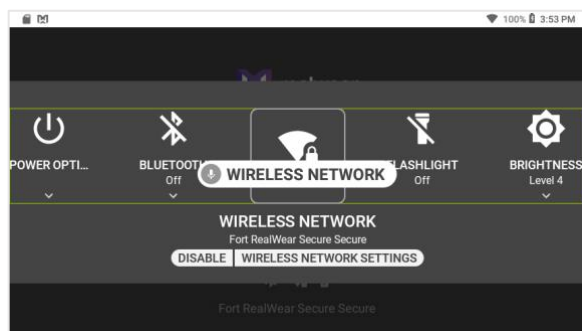


Flashlight

Saying "FLASHLIGHT" toggles on and off the built-in flashlight.

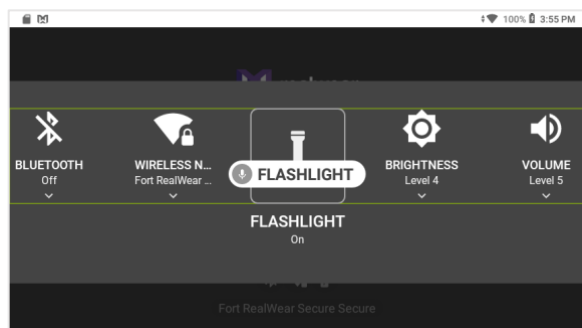


Brightness

Saying "BRIGHTNESS" allows you to change the brightness setting on the system. Say "SET LEVEL 1-10" to change the brightness setting.

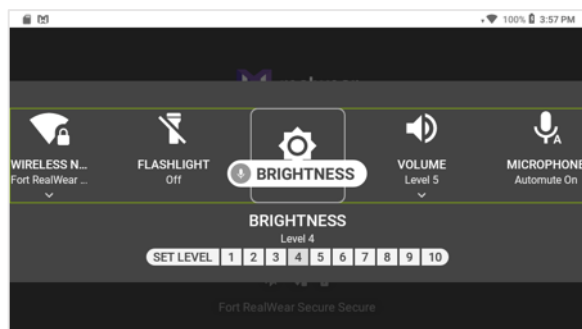


Volume

Saying "VOLUME" allows you to change the volume setting on the system. Say "SET LEVEL 1-10" to change the volume setting.

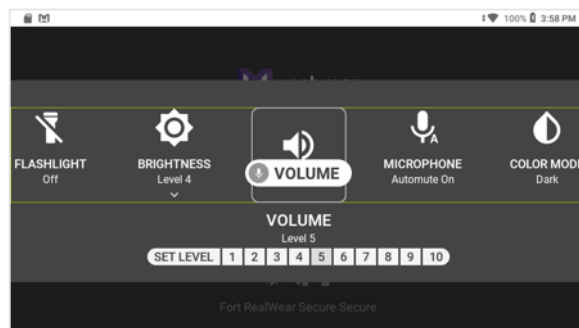


Microphone

Saying "MICROPHONE" toggles on and off the auto-mute function. When enabled, if the device has been sitting idle without movement detected for 30 seconds, the device will stop listening for Speech Commands.

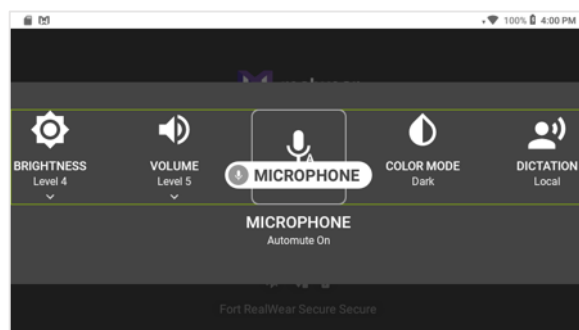

Color Mode

Saying "COLOR MODE" toggles between light and dark modes.

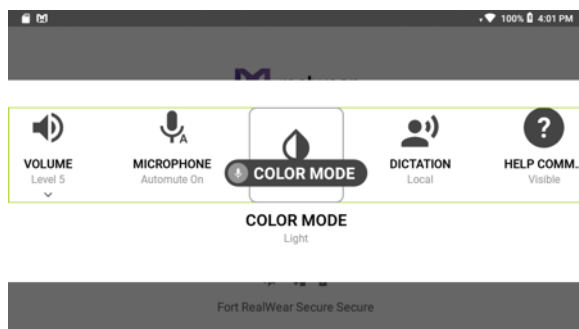


My Controls Continued




Dictation

Saying "DICTATION" toggles between Local and Cloud-based dictation. Note that Local dictation is not available for all system languages, so a WiFi connection may be required.

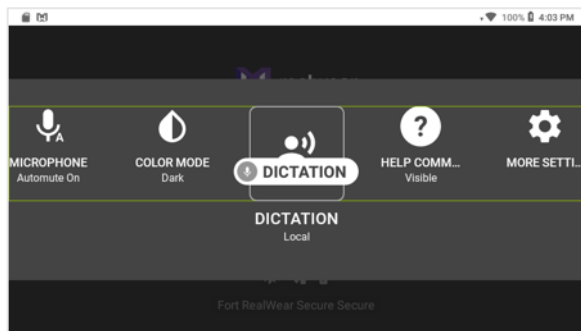

Help Command

Saying "HELP COMMAND" toggles on and off the visibility of the "SHOW HELP" icon that is by default visible across many screens. When disabled, the global "SHOW HELP" command is still active and usable.

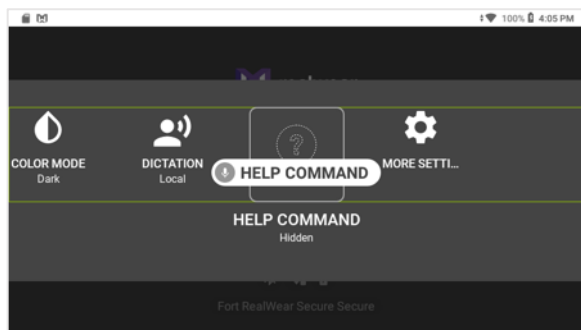

My Controls command list

Voice Command	Action
"MOUSE"	Toggles the head-tracked mouse on or off.
"AUTO ROTATE"	Toggles on or off screen rotation.
"ACTION BUTTON"	Toggles Noise Capture mode.
"POWER OPTIONS"	Provides access to power management options.
"BLUETOOTH"	Enable or disable bluetooth.
"WIRELESS NETWORK"	Enable or disable wifi.
"FLASHLIGHT"	Turn the flashlight on and off.
"BRIGHTNESS"	Change the brightness of the display.
"VOLUME"	Change the volume of the system.
"MICROPHONE"	Toggles on and off the auto-mute function
"COLOR MODE"	Toggle light and dark mode.
"DICTATION"	Toggles between Local and Cloud-based dictation.
"HELP COMMAND"	Toggles the visibility of the "SHOW HELP" icon across all screens where it is visible by default.


My Controls Continued

Action Button

The action button control, found in the My Controls menu, allows an HMT user to change the result of a single press of the Action Button. By default the Action Button control is present in My Controls and set to Home Screen mode, meaning that pressing the Action Button will return the user to the Home Screen. This has been the sole function of the action button since the first release of the HMT-1.

Saying "ACTION BUTTON" while in My Controls will activate a selection for the HMT user. "HOMESCREEN" and "NOISE CAPTURE" are the two options and the text below the ACTION BUTTON command shows the current setting. In the example above, the current state is HOMESCREEN and the command "NOISE CAPTURE" may be selected.

When set to Noise Capture mode pressing the Action Button will alternatively disable or enable the noise cancellation ability of the HMT, allowing external noise to be captured in video/audio transmission and recordings. A single press of the Action Button enters Noise Capture mode (and disables noise cancellation); this displays a warning on the screen while active and voice commands will not be recognized. Another single press of the button reinstates noise cancellation and restores voice command ability. Voice commands are disabled because non-noise captured sound will usually launch unwanted commands.

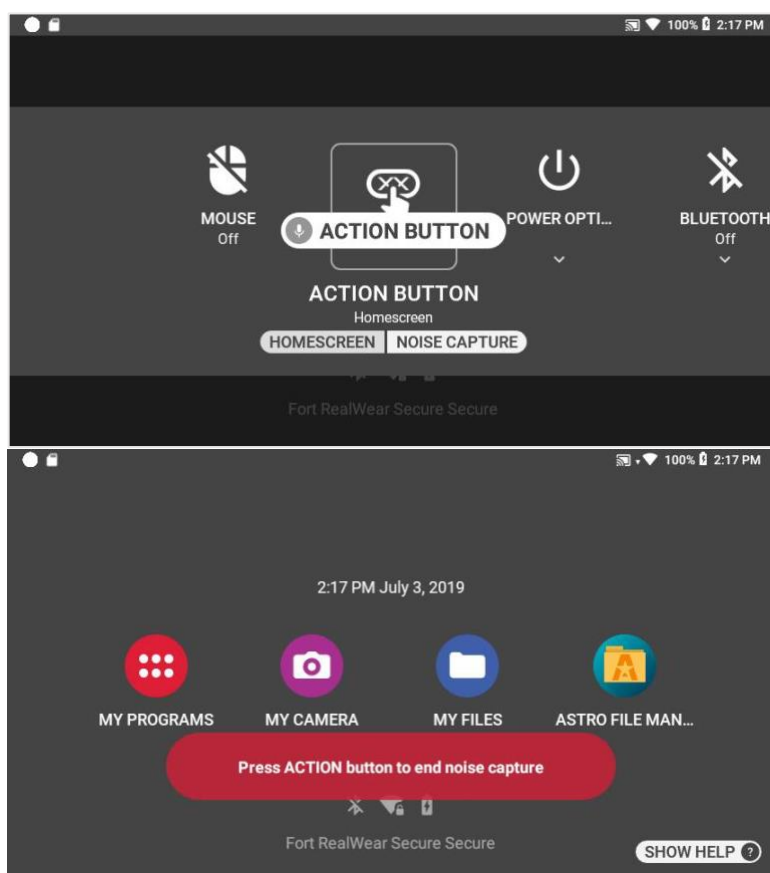

Voice Command	Action
"HOMESCREEN"	Sets the Action Button to go to the Home Screen when pressed
"NOISE CAPTURE"	Sets the Action Button to enable Noise Capture mode when pressed


My Controls Continued

Power Management

Power Options allow you to access power management functions using voice commands.

To access Power Options:

From any screen say, "MY CONTROLS", then say "POWER OPTIONS".

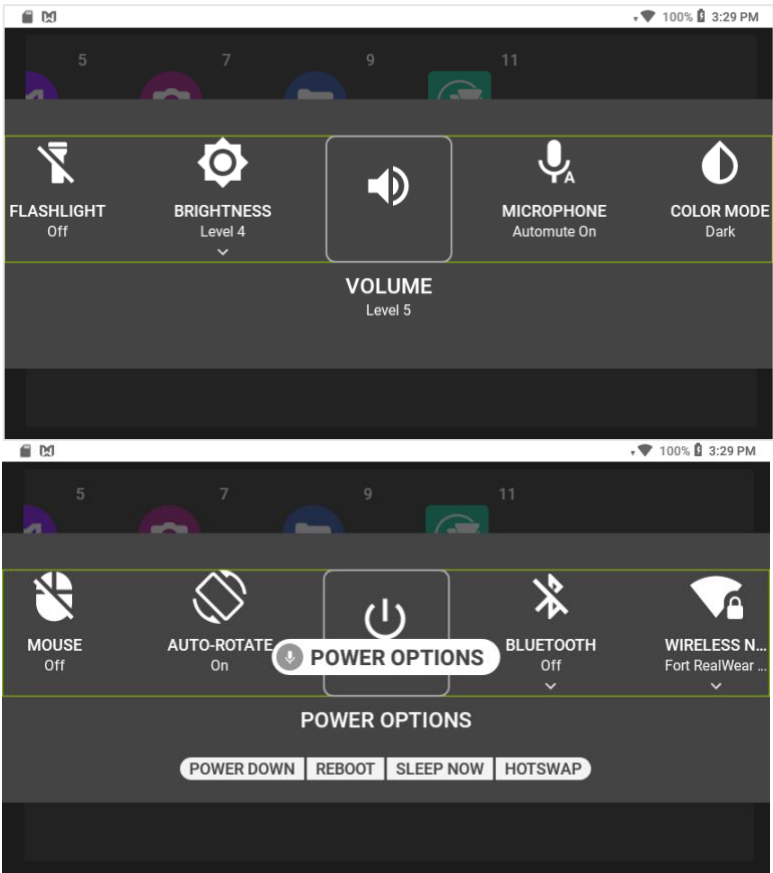

The following voice commands are made available:

Voice Command	Action
"POWER DOWN"	Powers Off HMT device
"REBOOT"	Reboots HMT device
"SLEEP NOW"	Puts the HMT into sleep mode. Press the Power On button to wake up
"HOTSWAP"	Puts the HMT device in Hotswap mode. Say "START SWAP" to initiate. When the battery swap is complete and the battery is secured, tap the power button once to wake up

My Controls Continued

Battery Hot Swap

The Hot Swap feature allows you to place the HMT into very low power consumption mode and swap out the removable battery.

Hot Swap may be launched in one of two ways:

- Choose "HOTSWAP" from Power Options in My Controls.
- Choose "HOTSWAP" from the options in a low battery warning screen.

When selecting hot swap, the HMT will show a message, "Ready for swap?" Say "START SWAP" to start the battery swap process.

The HMT will verbally announce it is preparing for swap, the screen will go dark, and the power button will blink red. Replace the battery within 5 minutes to maintain the current state of the system.

As soon as battery is replaced, press the power button. The HMT will resume operation as if it came out of sleep mode.

Microphone Settings


Switch between Front Microphones and Rear Microphones.

By default, the Front Microphones are enabled.


The front microphones are built into the display pod and provide optimal noise-cancellation. If using the HMT with the display flipped back and out of your line of sight, you can use a second set of microphones that are built into the frame of the HMT. These are called the rear microphones.

Important: To toggle between front and rear microphones, press the Action button three times quickly.

When the rear microphones are active, an audio notification is played, and a message is displayed on the screen.

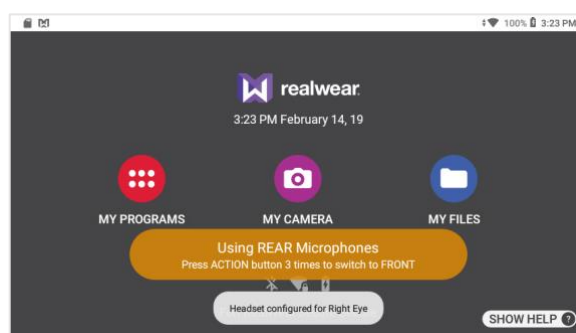

When the front microphones are active, another audio notification is played the message is removed.

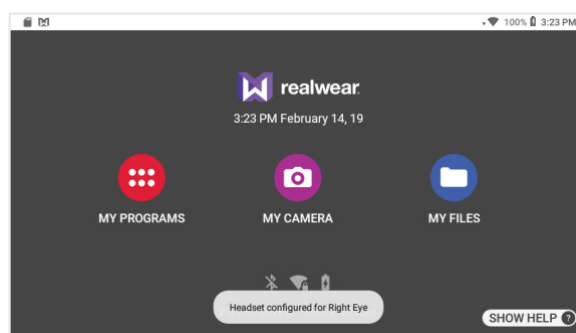


My Controls Continued

Screen Orientation




Screen Rotation

When the HMT device rotates the display will automatically rotate by default. This is important when setting the display position to left eye or right eye.

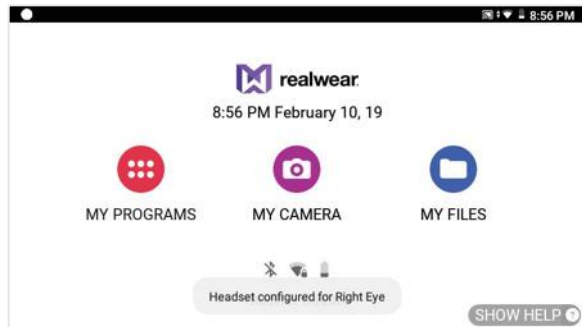

A toast message appears on the screen indicating the change in the orientation.

Auto-rotate can be toggled on or off in My Controls. Say "AUTO ROTATE" to toggle the setting on or off.

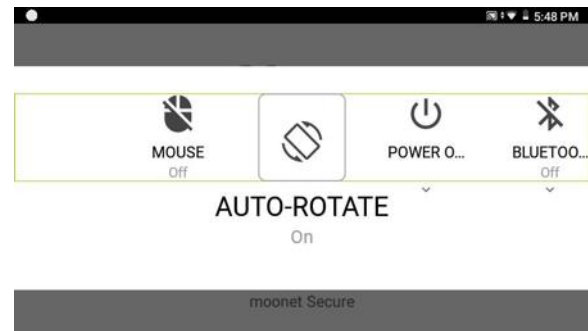


Power Warnings

The HMT will monitor the battery and warn you when it is below 15% remaining charge.

The warning popup will appear when the battery discharges to 15%, 10%, and 5%. At each level, a different color battery warning graphic appears.

Your options are to

- Dismiss the warning and continue operating the device by saying "DISMISS" or
- Launch the hot swap battery change by saying "START SWAP".

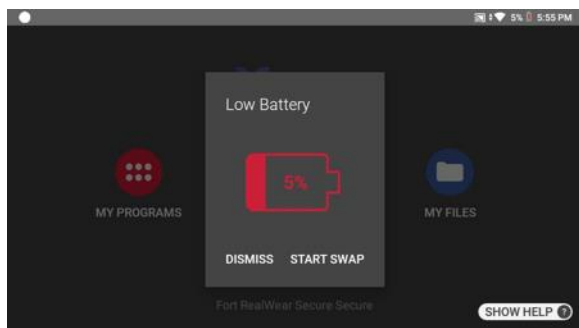

Software Overview Continued

Notifications


Notifications are actionable messages sent from the operating system and applications. They highlight and communicate important information with HMT users.

Notifications on the HMT are easy to access at any time, just say "SHOW NOTIFICATIONS".

The Notifications panel will display above the current UI view (it will darken in the background.)

To close the Notifications panel simply say, "HIDE NOTIFICATIONS".

Recent notifications are presented as items in a list.

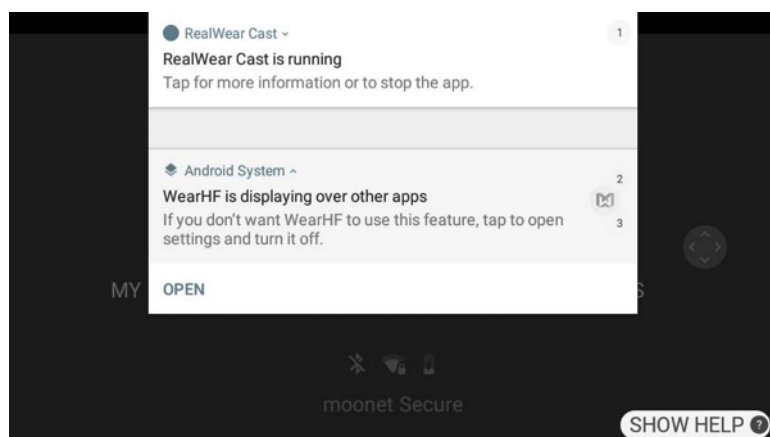

Each notification in the list will include:

- the notification source
- a headline
- a quick summary call to action
- an item #

You can open a notification by first selecting it, say "SELECT ITEM #"

When selected, say "OPEN" to view.

When a notification is opened, a more detailed view is displayed. From this view, specific actions can be taken. As a reminder and quick reference - when on the Home Screen, and you have notifications, the number of notifications will be displayed in the top left corner.

Notifications Voice Commands

Voice Command	Action
"SHOW NOTIFICATIONS"	Opens the list of notifications.
"SELECT ITEM #"	To view a specific notification.

Software Overview Continued

Barcode Reader

You can use the handsfree barcode reader built-in with the HMT to scan barcodes.

Supported Barcode Types are — UPC, EAN, QR Code, Data Matrix, and Code 128.

When launched, the barcode reader automatically scans any supported barcode that is detected and displays the details automatically. Point the camera at the barcode ensuring that the entire barcode is within the white rectangle with rounded edges.



You can also scan QR codes that contain RealWear bookmarks, URLs, and application codes to open the respective items. You can turn on or off the HMT Flashlight by saying “FLASHLIGHT ON” or “FLASHLIGHT OFF” while Barcode Reader is open.

Tip: Use zoom control to more easily frame and read some barcodes.

Barcode Scanner Functions

Voice Command	Action
“Zoom Level 1 to 5”	Zooms the camera view by setting the level to specific value — 1 to 5. For example, to set the zoom level to 4, say “Zoom level 4”.
“Flashlight ON/ OFF”	Switches On/Off flashlight.


Software Overview Continued

Setting Up Bluetooth Master/Slave Switch


You can connect HMT-1 or HMT-1Z1 to other Bluetooth devices, in either Bluetooth master or Bluetooth slave modes.

- In Master mode, HMT can connect to audio devices such as Bluetooth earpieces and Bluetooth speakers.
- In Slave mode, the HMT can connect to mobile phones and act as a Bluetooth microphone/headset for the phone.

To change the Bluetooth mode, go to My Programs and say "SETTINGS".

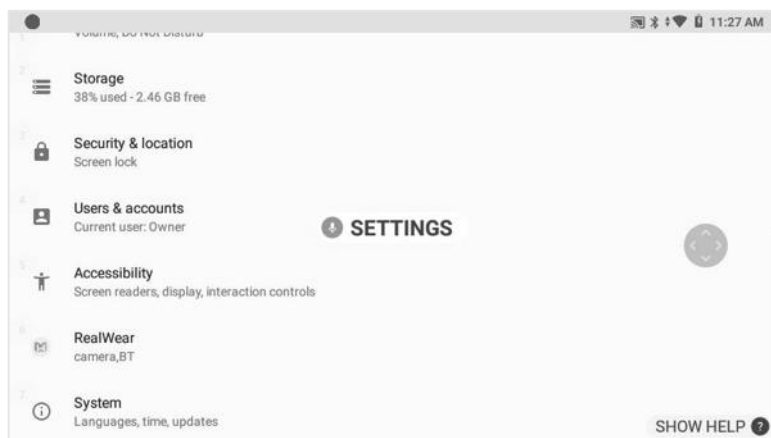

Select the item called "REALWEAR" just by its name or select the item number using "SELECT ITEM #".

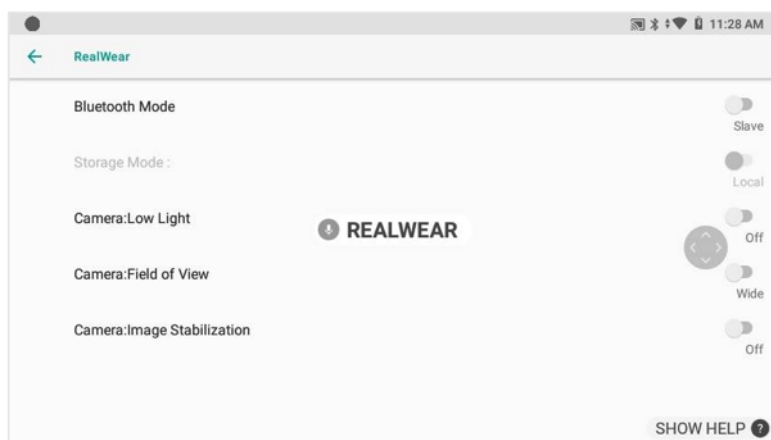

Here you'll see a setting called Bluetooth Mode. By default, this is set to Slave. Say "BLUETOOTH MODE" to toggle between Master and Slave modes.

HMT-1 Ownership Information

All communications, notices and legal agreements have the meaning provided in the English language; translations into other languages are for convenience only. If there is any discrepancy between the translated and English version, the English version will prevail.

Models Covered

The information contained herein covers the following RealWear HMT-1 model(s):
T1200G

You can find the model name on the HMT-1 one of the two device labels on the rear inner band. You must take off the removable pad to see the label. Serial Numbers are 15 characters in length.



Ownership Information Continued

HMT-1 Regulatory and Compliance Statements

WARNING: Changes or modifications made to this equipment not expressly approved by RealWear, Inc. for compliance could void the user's authority to operate the equipment.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

1. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
3. Operations in the 5.15-5.25GHz band are restricted to indoor use only.

IC Statement — English

1. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: • This device may not cause interference, and • This device must accept any interference, including interference that may cause undesired operation of the device.
2. This Class B digital apparatus complies with Canadian ICES-003.
3. This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.
4. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter, except tested built-in radios.
5. The Country Code Selection feature is disabled for products marketed in the US/Canada.

IC Statement - Français

1. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
 - l'appareil ne doit pas produire de brouillage, et
 - l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
2. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
3. Cet appareil est conforme à la norme RSS-310 d'Industrie Canada. L'opération est soumise à la condition que cet appareil ne provoque aucune interférence nuisible.
4. Cet appareil et son antenne ne doivent pas être situés ou fonctionner en conjonction avec une autre antenne ou un autre émetteur, exception faites des radios intégrées qui ont été testées.
5. La fonction de sélection de l'indicatif du pays est désactivée pour les produits commercialisés aux États-Unis et au Canada.

Regulatory and Compliance Continued

IC Statement — FOR WLAN 5GHZ DEVICE

Caution

1. Operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
2. The maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall comply with the e.i.r.p. limit.
3. The maximum antenna gain permitted for devices in the band 5725-5825 MHz shall comply with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate.
4. The worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in Section 6.2.2(3) shall be clearly indicated.
5. Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement 1

1. Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.
2. le gain maximal d'antenne permis pour les dispositifs utilisant les bandes 5250-5350 MHz et 5470-5725 MHz doit se conformer à la limite de p.i.r.e.
3. le gain maximal d'antenne permis (pour les dispositifs utilisant la bande 5725-5825 MHz) doit se conformer à la limite de p.i.r.e. spécifiée pour l'exploitation point à point et non point à point, selon le cas.
4. les pires angles d'inclinaison nécessaires pour rester conforme à l'exigence de la p.i.r.e. applicable au masque d'élévation, et énoncée à la section 6.2.2 3), doivent être clairement indiqués.
5. De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Ownership Information Continued

Declaration of Conformity

EU Regulatory Conformance

Hereby, we RealWear, Inc. declare that the radio equipment type T1200G is in compliance with: Directive 2014/53/EU.



Declaration of Conformity

Certification information pending

Ownership Information Continued

HMT-1 Specific Absorption Rate (SAR) Information

Radiation Exposure Statement — The United States and Canada

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. No minimum separation distance needs to be maintained between the user's body and the device, including the antenna, during body-worn operation to comply with the RF exposure requirements in the United States and Canada. The limit recommended by FCC and IC is 1.6 W/kg averaged over one (1) gram of tissue.

The highest SAR value of the HMT-1 for use:

- By the ear is 1.17 W/kg (1g)

Radiation Exposure Statement — Europe

No minimum separation distance needs to be maintained between the user's body and the device, including the antenna during body-worn operation to comply with the RF Exposure requirements in Europe.

The limit recommended by RED is 2 W/kg average over ten (10) gram of tissue.

The highest SAR value of the HMT-1 for use:

- By the ear is 0.63 W/kg (10g)

Radiation Exposure Statement — Canada

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Déclaration d'exposition aux radiations

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé. Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

Ownership Information Continued

HMT-1 Limited Warranty and Software License

The following terms ("Terms") give you specific legal rights. You may also have other rights that vary depending on local law.

Definitions

As used in this document, "RealWear" means RealWear, Inc., or any of its authorized resellers. "You", "Your", or "Buyer" means the original purchaser from RealWear of a Product covered by these Terms. "Hardware" means the RealWear HMT-1 head-mounted tablets (excluding Software). "Software" means any software, library, utility, tool, or other computer or program code, in object (binary) form embedded in or pre-installed on the Hardware, including any updates made available by RealWear. "Documentation" means the Product related media, printed materials, online and electronic documentation provided by RealWear, including copies. "Product" or "Products" means Hardware, Software, and Documentation collectively. The Products are offered and sold by RealWear exclusively for Buyer's own internal professional, business or commercial use (including government agencies) and are not promoted or marketed for the purpose of resale to third parties or for any consumer, non-professional, or leisure use.

Software and Documentation

The Software and Documentation are licensed not sold, and are provided "AS IS", without any warranty. RealWear and its licensors retain all rights in the Software and Documentation, and grant Buyer only the following limited, personal, non-transferrable licenses:

A. Documentation: Buyer may reproduce a reasonable number of copies of the Documentation for Buyer's internal use.

B. Software: Buyer may run and execute the Software only on the specific Hardware on which it was delivered to Buyer, and Buyer may not copy, extract, or decompile the Software. The Software contains certain open source software components. The applicable open source license (indicated in the header files), and not this license, applies to those open source components.

C. No Other Rights or Licenses: No other rights or licenses are granted or implied, and the licenses expressly granted in this Section are Buyer's only licenses. Except as expressly permitted by applicable law, Buyer may not decompile, attempt to derive source code from, or otherwise reverse engineer any Software. The licenses granted to Buyer by these terms will automatically terminate if Buyer violates or authorizes others to violate any of the license terms.

LIMITED HARDWARE WARRANTY FOR BUSINESS CUSTOMERS

HARDWARE (BUT NOT SOFTWARE OR DOCUMENTATION) IS WARRANTED BY REALWEAR AGAINST DEFECTS IN WORKMANSHIP OR MATERIALS WHICH CAUSE HARDWARE TO MALFUNCTION UNDER NORMAL USE CONDITIONS WHEN USED IN PROFESSIONAL, BUSINESS, OR COMMERCIAL APPLICATIONS (INCLUDING GOVERNMENT AGENCIES) FOR A PERIOD OF ONE (1) YEAR FOR HMT-1Z1, TWO (2) YEARS FOR HMT-1 FROM DATE OF ORIGINAL PURCHASE. AS USED HEREIN, "NORMAL USE CONDITIONS" SHALL MEAN HARDWARE WHICH HAS BEEN USED AND MAINTAINED IN ACCORDANCE WITH THE APPLICABLE REALWEAR INSTRUCTION MANUAL AND ANY UPDATES OR TECHNICAL ADVISORIES PROVIDED BY REALWEAR WITH RESPECT TO THE HARDWARE. THE EXCLUSIVE REMEDY UNDER THIS LIMITED HARDWARE WARRANTY FOR ANY HARDWARE THAT IS DETERMINED TO BE DEFECTIVE IN WORKMANSHIP OR MATERIALS SHALL, AT REALWEAR'S SOLE OPTION, BE REPAIR, REPLACEMENT OR REFUND OF THE PURCHASE PRICE OF THE DEFECTIVE HARDWARE.

WARRANTY DISCLAIMERS AND EXCLUSIONS

NO WARRANTY, PRODUCT DESCRIPTION, OR AFFIRMATION OF FACT, EXPRESS OR IMPLIED, OTHER THAN AS SET FORTH IN THE LIMITED WARRANTY STATEMENT ABOVE, IS MADE OR AUTHORIZED BY REALWEAR AS TO ANY HARDWARE OR PRODUCT. REALWEAR DISCLAIMS ANY LIABILITY FOR CLAIMS ARISING OUT OF HARDWARE OR PRODUCT MISUSE, IMPROPER HARDWARE OR PRODUCT SELECTION, IMPROPER HARDWARE INSTALLATION, OR HARDWARE MODIFICATION, MISREPAIR OR MISAPPLICATION. REALWEAR EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY THAT THE HARDWARE OR ANY PRODUCT: (i) IS MERCHANTABLE; (ii) IS FIT FOR A PARTICULAR PURPOSE; OR (iii) DOES NOT AND WILL NOT INFRINGE UPON OTHERS' INTELLECTUAL PROPERTY RIGHTS. THE LIMITED WARRANTY DOES NOT APPLY TO HARDWARE MALFUNCTIONS WHICH RESULT FROM ABUSE OR MISUSE, AND DOES NOT APPLY TO HARDWARE MALFUNCTIONS CAUSED BY USE OF ACCESSORIES NOT SOLD OR LICENSED BY REALWEAR – INCLUDING BUT NOT LIMITED TO BATTERIES, THIRD PARTY SOFTWARE, CHARGERS, MEMORY CARDS, OR OTHER ACCESSORIES. THE LIMITED WARRANTY ALSO DOES NOT APPLY TO HARDWARE WHICH HAS BEEN OPENED, MODIFIED, DISASSEMBLED OR TAMPERED WITH (INCLUDING CIRCUMVENTION OF ANY ANTI-TAMPERING SYSTEM) OR WHICH HAS BEEN REPAIRED OR MODIFIED BY THIRD PARTIES NOT AUTHORIZED BY REALWEAR, OR TO HARDWARE WHICH HAS BEEN DISGUISED OR DISFIGURED BY REMOVAL OF TRADEMARKS, SERIAL NUMBERS, OR SIMILAR IDENTIFICATION. THIS LIMITED WARRANTY ALSO DOES NOT APPLY TO HARDWARE WHICH HAS BEEN SUBJECTED TO EXTERNAL PHYSICAL DAMAGE INCLUDING WITHOUT LIMITATION BEING DROPPED, BEING SUBJECTED TO INTRUSION OF WATER OR OTHER LIQUIDS, OR AS THE RESULT OF USER'S

Limited Warranty and Software License Continued

FAILURE TO FOLLOW INSTRUCTIONS PROVIDED IN WRITTEN DOCUMENTATION INCLUDED WITH THE HARDWARE OR SUBSEQUENTLY SUPPLIED BY REALWEAR IN THE FORM OF UPDATED MANUALS OR TECHNICAL ADVISORIES. CERTAIN CONSUMABLE OR ACCESSORY SUPPLIES INCLUDED WITH THE HARDWARE OR SOLD SEPARATELY BY REALWEAR (SUCH AS BATTERIES OR SOFT CASES) ARE SUBJECT TO A DIFFERENT WARRANTY TERM AS SET FORTH IN SECTION "C" BELOW.

THE LIMITED WARRANTY IS MADE TO THE ORIGINAL BUYER ONLY AND, EXCEPT WHERE PROHIBITED BY LAW, IS NOT TRANSFERRABLE.

LIMITATION OF LIABILITY AND REMEDIES

REALWEAR EXPRESSLY DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL, INCIDENTAL, SPECIAL, EXEMPLARY, OR PUNITIVE DAMAGES INCLUDING BUT NOT LIMITED TO LOST PROFITS, LOST BUSINESS OPPORTUNITIES, LOST DATA, AND LOSS OF BUSINESS EXPECTATIONS. REALWEAR'S LIABILITY IN ALL CIRCUMSTANCES IS LIMITED TO, AND SHALL NOT EXCEED, THE PURCHASE PRICE PAID FOR THE HARDWARE THAT GIVES RISE TO ANY LIABILITY. IN THE EVENT THAT LOCAL LAWS PROHIBIT DISCLAIMER OF IMPLIED WARRANTIES, THE DURATION OF ANY IMPLIED WARRANTY SHALL NOT EXCEED ONE (1) YEAR FROM THE DATE OF PURCHASE. THE LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS IN THESE TERMS APPLY TO ALL CLAIMS FOR DAMAGES, WHETHER BASED IN CONTRACT, WARRANTY, STRICT LIABILITY, NEGLIGENCE, TORT, OR OTHERWISE. THESE LIMITATIONS OF LIABILITY ARE AGREED ALLOCATIONS OF RISK CONSTITUTING IN PART THE CONSIDERATION FOR REALWEAR'S SALE OF HARDWARE OR PRODUCTS TO A BUYER, AND WILL APPLY NOTWITHSTANDING THE FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY AND EVEN IF REALWEAR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LIABILITIES.

A. How to Get Warranty Service:

i. Before starting the warranty process, please review the "Frequently Asked Questions"

at <https://www.realwear.com/faq>.

ii. If the FAQ's do not resolve your problem, then please submit a "Support Request" online

at <https://www.realwear.com/contact-us>.

iii. Before sending your Hardware to RealWear for service, be sure to keep a copy of any data you want to save, and delete anything you consider confidential. RealWear is not responsible for your data and may erase it.

B. RealWear's Responsibility:

i. After you return your Hardware to RealWear (at your cost, unless RealWear is required by applicable law to pay) RealWear will inspect it.

ii. If RealWear, in its sole discretion, determines that: (a) a defect in materials or workmanship caused the Hardware to malfunction during the Warranty Period under Normal Use Conditions, and (b) none of the Warranty Disclaimers or Exclusions apply, then RealWear will (at its option) repair or replace the Hardware, or refund the purchase price to You. Unless restricted by applicable law, repair may use new or refurbished parts and replacement may be with a new or refurbished unit.

iii. After repair or replacement, your Hardware will be covered by the Limited Hardware Warranty for the longer of (a) the remainder of your original Warranty Period or (b) ninety-five (95) days after RealWear returns the repaired or replaced Hardware to you. Where required by applicable law, the original Limited Warranty Period will be extended for a period of time equal to the time that your Hardware was in RealWear's possession.

iv. If your Hardware malfunctions after one (1) year for the HMT-1Z1 or two (2) years for the HMT-1 Limited Hardware Warranty expires, RealWear provides no warranty of any kind. After the Warranty Period expires, RealWear may charge you a fee for its efforts to diagnose and service any problems with your Hardware.

C. Accessories and Consumable Parts:

i. RealWear branded accessories are covered by the Limited Hardware Warranty, provided that HMT-1 batteries and soft cases are warranted for ninety (90) days only; HMT-1Z1 batteries are warranted for one (1) year; and consumable parts and accessories such as foam pads, straps, hard-hat clips, etc. are not covered by warranty.

Governing Law, Dispute Resolution

A. Arbitration: Any dispute relating to this Agreement including a claim under the Limited Warranty stated above ("Dispute") will be resolved by binding arbitration according to the then-current Commercial Arbitration Rules of the American Arbitration Association (the "AAA Rules"). The existence, content (including all documents and materials submitted to the arbitrators), and results of any arbitration are Confidential Information. The arbitrator will be a neutral practicing attorney or retired judge with experience in similar cases and appointed in accordance with the AAA Rules. The arbitrator must agree in writing to maintain the confidentiality of the arbitration. The arbitration will be governed by the Federal Arbitration Act, 9 U.S.C. §§1 et seq. The prevailing party will be entitled to recovery of arbitration expenses (including reasonable attorney's fees). The arbitrator's award will include provisions for this recovery. The arbitrator's award will be binding and final. Any court having jurisdiction may enter judgment upon the award. The arbitration will be conducted in English and held in Vancouver, WA.

B. Governing Law: This Agreement is governed by, and the arbitrator will apply, the substantive laws of the State of Washington excluding its conflicts of law provisions. The United Nations Convention on Contracts for the International

Limited Warranty and Software License Continued

Sale of Goods does not apply to this Agreement. Claims must be brought within one (1) year of the date the claim arose, otherwise the claim will be permanently barred.

C. Class Action Waiver: All proceedings will be conducted solely on an individual basis. No arbitration will be combined with another without the prior written consent of all parties to all affected arbitrations or proceedings. You will not seek to have any dispute heard as a class action, private attorney general action, or in any other proceeding in which you act or propose to act in a representative capacity.

