

HMD

Wireless Earphone


HMD DUB P60 ANC

PACKAGE CONTENTS

1x Pair of TWS Earbuds	5x Warranty Card
2x Charging Case	6x Pairs of Additional Earmuffs
3x Type-C Charging Cable	
4x User Manual	

OVERVIEW

① CTC (Capacitive Touch Control) / Power Button
② Reset Button

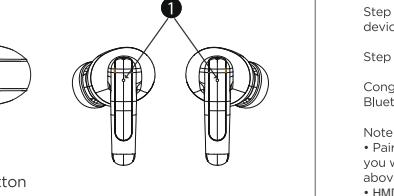

POWER ON (FIRST TIME USER):

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode indicated by blue and red LED flashes

CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'HMD DUB P60 TWS' and pair accordingly.

Congratulations! Your earbuds are now successfully connected via Bluetooth

Note :

- Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above-mentioned procedure
- HMD DUB P60 TWS remembers previously connected devices; once switched on and within optimum range, the ear-buds automatically reconnect to the previously connected devices

SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud

Step 2: The selected earbud will automatically enter the connection mode

Step 3: Turn on Bluetooth on your phone/media device and search for 'HMD DUB P60 TWS' to connect

Note :

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage

QUICK GLANCE ON FUNCTIONALITIES



3 Seconds	Long touch both CTCs for 3 sec to manually power on
3 Seconds	Right Earbud
3 Seconds	Left Earbud
7 Seconds	Long touch the left CTC for 3 seconds to toggle between boAt Signature Sound/ Balanced Mode
10 Seconds	Long touch both CTCs for 7 sec to manually power off
Long press the Reset Button on case for 10 sec to perform factory reset. Case & Earbud LED blinks 5 times to confirm reset	

CHARGING THE EARBUDS

Step: Please insert the earbuds back inside the charging case in correct orientation.

Remaining Earbuds Battery	LED Indication
Low Battery	RED light blinks (3 times) when the Case lid gets opened
Min 30%-100%	BLUE light blinks (3 times) when the Case lid gets opened

Note :

- Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging.

CHARGE THE CASE:

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc. While charging, the Case LED continuously blinks in white. When the case gets fully charged, solid white LED turns on to indicate a 100% battery level.

Case Remaining Battery	LED Indication
Less than 30%	White LED quickly blinks for 3sec when case lid gets opened/closed
30%-70%	White LED normally blinks (3 times) when the Case lid is opened/closed
More than 70%	White LED stays Solid ON for 3 seconds when the Case lid gets opened/closed

Case LED Indication about inserting earbud into the case - This is to indicate TWS is charging from the case (when lid gets closed) Earbuds charging status will be shown after Case charge status

- WHITE LED is Solid ON for 5 seconds
- WHITE LED is OFF when Earbuds are charged fully

Note: The default mode is ANC OFF(Normal Mode).

- Single tap the CTC on either earbud to answer incoming calls
- Hang Up / Reject Calls: Double tap the CTC on either earbud to end / reject calls
- Play/Pause Music: Single tap CTC on either earbud to play or pause a track
- Next Track: When playing music, double tap the right CTC to skip to the next song
- Previous Track: When playing music, double tap the left CTC to return to the previous song
- Dual EQ: Long touch the left CTC for 3 seconds to switch between boAt Signature Sound or Balanced Modes. Default mode is boAt Signature Sound.

SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

Step 3: The earbuds will automatically switch off (and enter into charging mode)

MANUAL POWER OFF

Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

Operating ambient temperature: 0 - 40°C, Storage and transportation ambient temperature: -10 - 50°C, altitude not higher than 2000m (air pressure not less than 80kPa).

WARNING:

- replacement of a battery with an incorrect type may defeat a safeguard;
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

BEAST™ MODE

Triple tap the left CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC once again, to turn it off and return to Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

ENX™ TECH

Our ENX™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENX™ as the mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

CAUTION

Risk of fire or explosion if the battery is replaced by an incorrect type!

FACTORY RESET

Perform the Factory Reset in case you face any difficulty while operating your HMD DUB P60 TWS

***NOTE:** Before performing reset, clear "HMD DUB P60 TWS" from pairing device history by forgetting device

Step 1: Place the earbuds inside the case.

Step 2: While the earbuds are inside the case, keep the case open & long press the Reset Button for 10 seconds.

After successful factory reset:

- White LED blinks quickly 5 times on the Charging Case
- Red LED blinks quickly 5 times on the Earbuds

Step 3: Close the lid and then re-open it again after a few seconds.

Step 4: Perform a fresh connection attempt and enjoy!

Congratulations! Your HMD DUB P60 TWS has been Reset.

TROUBLESHOOTING

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not connecting	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If the Touch Controls don't seem to respond	After long usage, residual stains and perspiration can affect the touch control area, please use a clean cloth to wipe softly
If the Left & Right Earbuds are unpaired to each other due to any anomaly	Perform the Factory Reset. Double touch both left & right CTC simultaneously.

Charging norms & Precautionary Guidelines:-

1) Charger/Brick/Adapter	: 5V 1A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

SPECIFICATIONS

Headphone Type	ANC TWS Earbuds
Bluetooth Version	V5.3
Water Resistance	IPX5
IWP™ Technology	Yes
ANC	Fn ANC (Up to 32dB)
ENx™ Equipped Microphones	4
Latency with BEAST™ Mode	50ms
Music Playtime	Up to 6H per charge, Up to 36H additional Case playtime (Non-ANC mode) Up to 5H per charge, Up to 30H additional Case playtime (ANC mode) at 60% vol
Standby	80H
Charging Technology	ASAP™ Charge
Transmission Range	10m
Driver Size	10mm*2
Codec Support	SBC and AAC
Frequency	20Hz-20kHz
Battery	400mAh (Case) 35mAh*2 (Earbuds)
Charging Time	1.5H
Charging Interface	Type C

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AJOT-HMDDUBP60ANC