

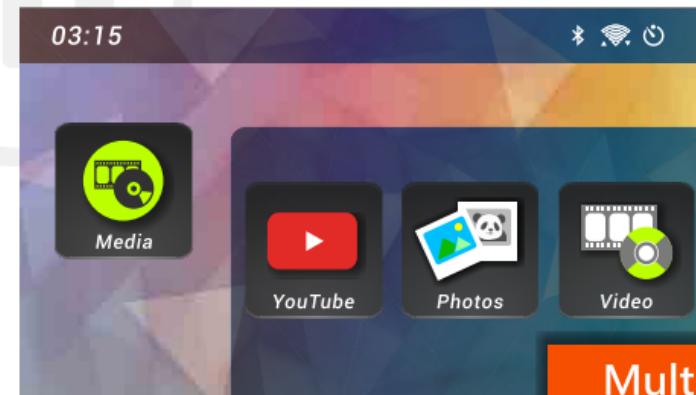
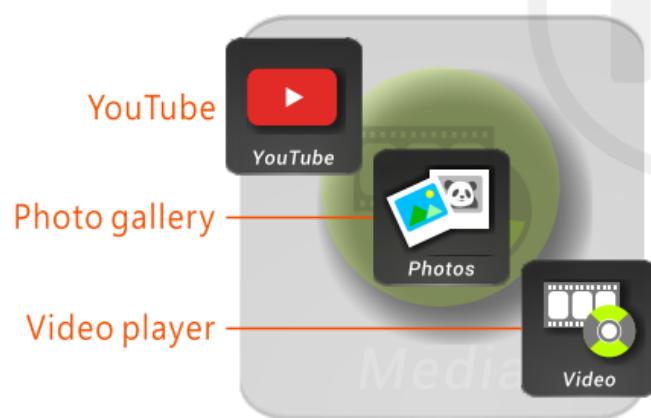


App


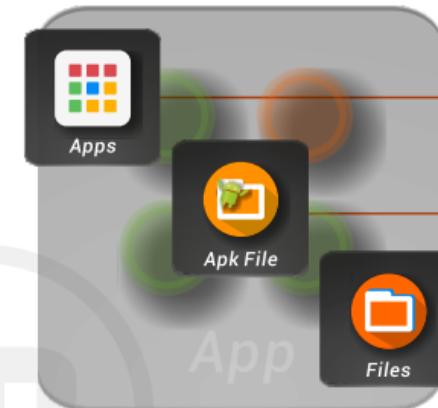


Multimedia

## Social Media



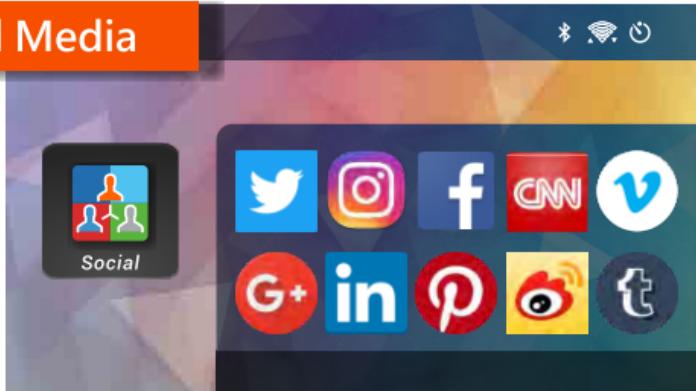


A collection of the most popular social media shortcuts for quick connection

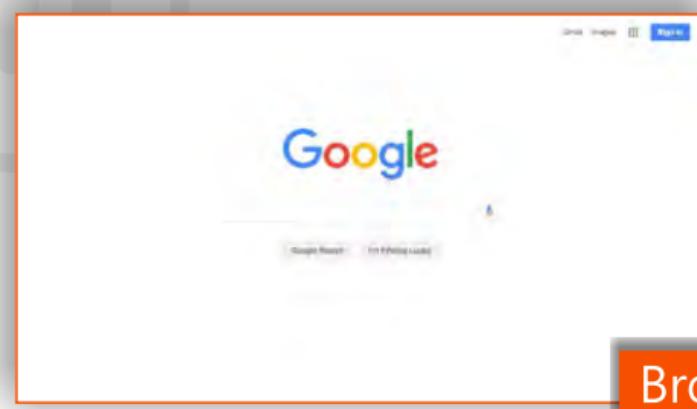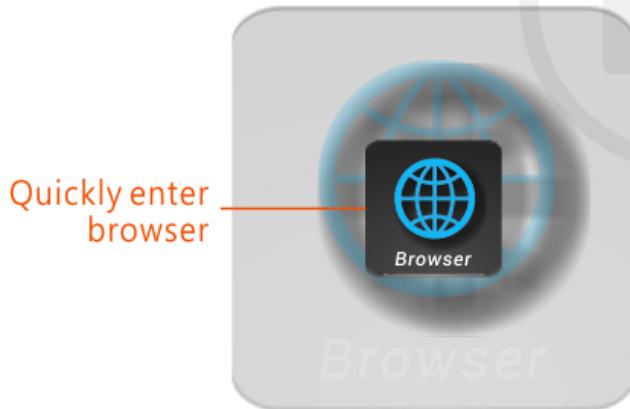


Browser

## Wireless Multimedia Connection

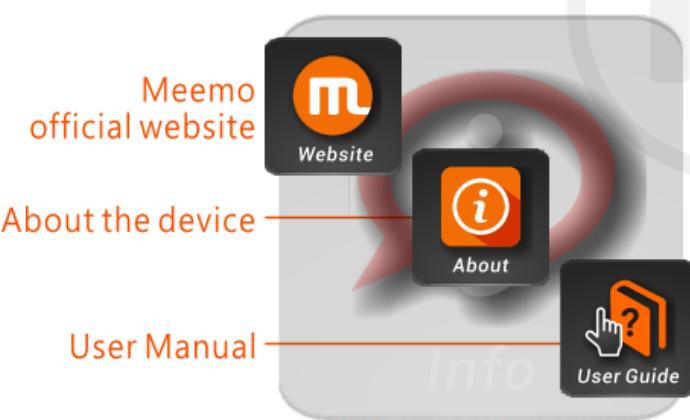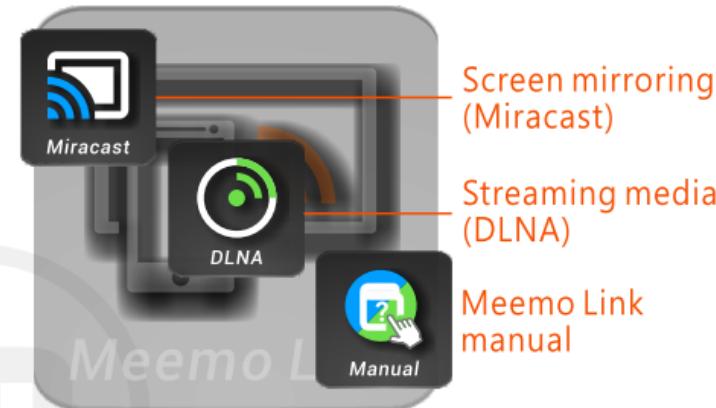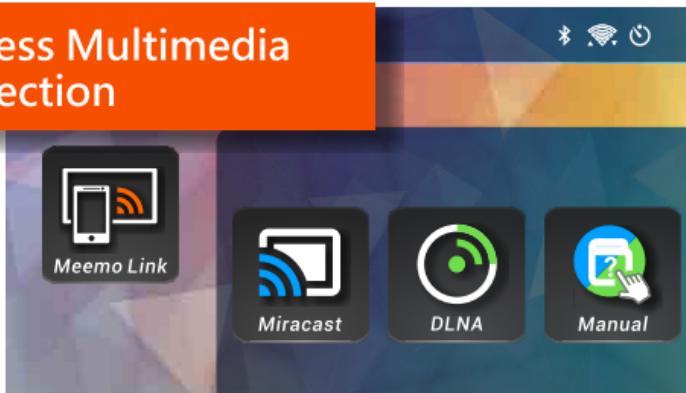

System information

## Tools

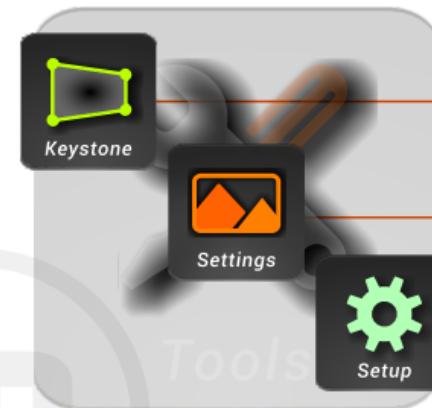


Keystone  
correction

Image settings



Setup

- 1 Wireless network
- 2 Bluetooth setting
- 3 Date and time
- 4 (Reserve) Language
- 5 Device name
- 6 Wallpaper
- 7 Storage space
- 8 Sleep timer
- 9 Optical alignment
- 10 Biphasic alignment
- Advanced laser machine correction settings

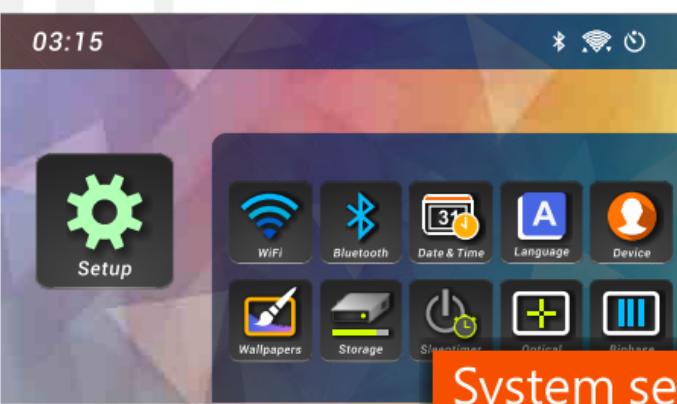

System settings

## Keystone correction

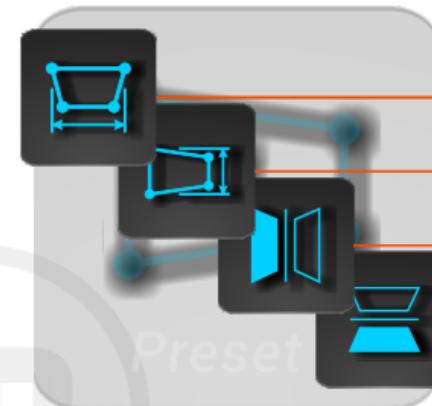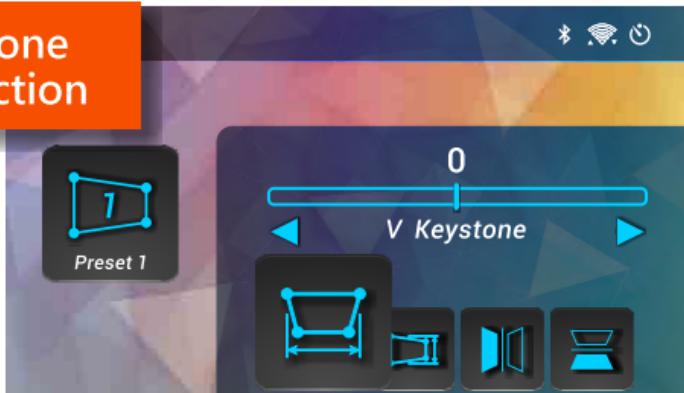

Adjust projection contrast



Adjust color tone

Adjust color density

Reset

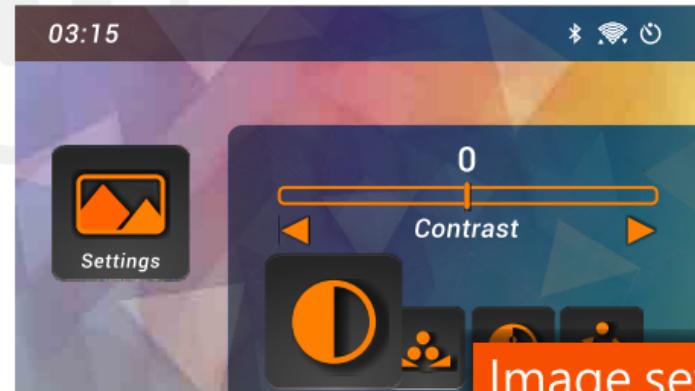


Image settings

## Advanced laser alignment setting

### Optical alignment:

Adjusts the horizontal/vertical calibration of the color item;  
please try this option if the projection is unclear.



### Biphase alignment:

Adjusts the synchronization timing of the input signals;  
please try this option if the projection flickers or is blurry.

# Optical alignment

Adjust the horizontal/vertical alignment of the color items to obtain a clear image.


If colored lines are seen beside the crossed lines in the [Optical alignment] screen, the color items corresponding to those color need to be adjusted.



1. Select [ Tools ] - [ Setup ] - [ Optical alignment ]. The [Optical alignment] screen appears. To select an item in the screen, use air mouse Direction button "up", "down" to + or -, and then press the "OK" with the desired item highlighted.
2. Select [Color] (1) to select the color item(7) to adjust. One of the color items is automatically set as [Basic], which is used to align the other items.  
[Highlight] is shown above the color items that is currently selected for adjustment. To select the next or previous color items, use air mouse Direction button "up", "down" to + or -, and then press the "OK" with the desired item highlighted.
3. Select [Horizontal] (2) or (Vertical) (3) to adjust the horizontal/Vertical position of the selected color items.  
Direction button "up", "down" to + or - to move the position, and then press the Ok when you have finished adjusting. To adjust both horizontal and vertical positions of the same color items, repeat this step.
4. Repeat steps 2 and 3 to adjust other items as necessary.
5. When you have finished adjusting, select [Save] (4) to save the new values.
6. Select [Close] (9). The [Optical alignment] screen closes.

To revert to the most recently saves values, Select [Cancel] (5)

To revert to the default values, Select [Initialize] (8)

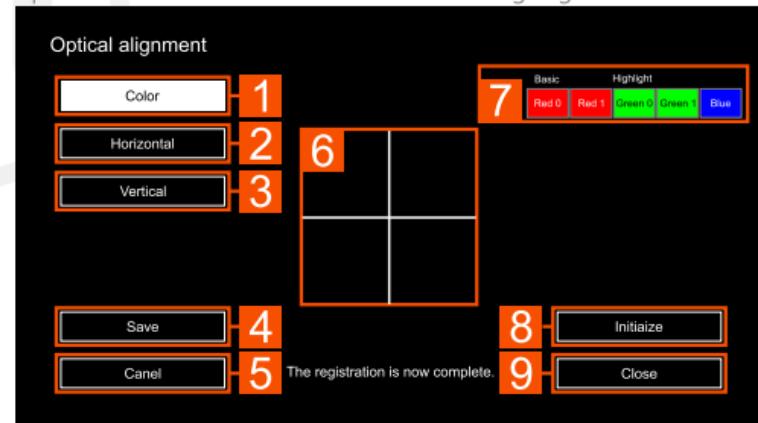

## Biphase alignment

Adjust the synchronization timing of the input signals if the projected image is flickering or blurred. If the three white vertical lines at the center of the [Biphase alignment] screen look blurred, you need to perform the following procedures.

### 1. Select [Setup] - [Biphase alignment].

The [Biphase alignment] screen appears. To select an item on the screen, use air mouse Direction button "up", "down" to + or -, and then press the "OK" with the desired item highlighted.

### 2. Select [Adjust] (1).

3. Use air mouse Direction button "up", "down" to + or - so three line (4) look clear without blur. Press the "OK" when you have finished adjusting.

### 4. Select [Save] (2) to save the new value.

### 5. Select [Close] (6)


The [Biphase alignment] screen closes.

To revert to the most recently saves values.

Select [Cancel] (3)

To revert to the default values

Select [Initialize] (5)

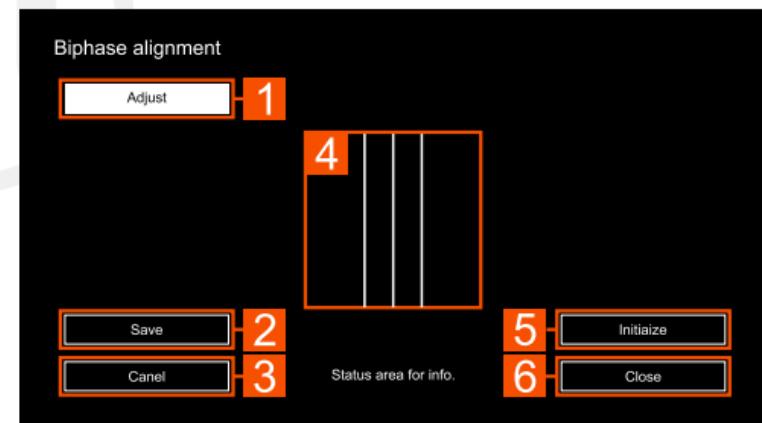

# Maintenance

## Cleaning the projector

Cleaning the dirt and dust on the projector can help unimpeded operation of the projector.

1. The power of the projector must be turned off and the power plug should be unplugged before cleaning, or else it may result in injuries or system damage.
2. Clean only by using a wiping cloth. Do not let water penetrate into the ventilation hole of the projector.
3. If a little bit of water enters inside the projector while cleaning, please unplug the power plug of the projector and then place the projector at a well-ventilated place to let it air-dry for several hours before using the projector again.
4. If large amount of water enters inside the projector while cleaning, please unplug the power plug of the projector and apply for maintenance.
5. Check the connection of the machine regularly to ensure there is no accumulation of dust.



## Cleaning the lens

Optical lens cleansers can be purchased at most camera and other retail stores.

Please use the following steps when cleaning the projector lens:

1. Dip a little bit of optical lens cleanser on a clean, soft cloth. (Do not apply the cleanser directly on the lens).
2. Wipe the lens lightly in a circular motion.



1. Do not use corrosive cleansers or solvents.
2. In order to prevent color-fades, do not let the cleanser come in contact with the projector case.

## Troubleshooting (1/3)

### Operations

#### This product cannot be charged

- Since this machine has no built-in battery, the USB type C jack can only supply power to this product and cannot charge this machine. Please supply power to this product by using the USB power supplier included in the package or other mobile powers that can supply 2.1A or above.

#### Air mouse does not operate

- Is the distance between the remote control and projector too far? The operating distance of the remote control is approximately 7 meters (barrier free environment)
- Check whether batteries are installed.
- Check whether the batteries are dead.
- Check the polarity of the installed batteries.
- If the problem cannot be solved by any of the methods above, connect the mouse to the USB OTG expansion jack to use in place of the remote control.

#### Fan makes noises

- This is not malfunction; when the environmental temperature rises, the sound of the fan will increase in order to enhance the cooling performance.

#### Unable to project

- Check whether the cables, connectors and/or adapters are connected properly.
- Some image formats cannot be used depending on the connected device or connection method.

#### No sound

- Check the volume of this machine and the connected device.

## Troubleshooting (2/3)

### Connection

#### Image cannot be projected smoothly through screen mirroring

- Check whether the Wi-Fi antennas of this machine and the connected device are covered by hands or other objects.
- Remove any barriers between this machine and the connected device and shorten the distance between the two.

#### Connection cannot be established through screen mirroring

- Check whether the Wi-Fi antennas of this machine and the connected device are covered by hands or other objects.
- The Wi-Fi function of devices that have screen mirroring function might have to be turned off while using the screen mirroring function. Please refer to the manual of the smartphone or tablet device for details

#### Connection cannot be established through the HD video transmission cable

- Please connect the HD video transmission cable to the device (smartphone or tablet, or game console etc.) first, and then connect to this machine.

### Picture

#### Image vibrates or blurred

- The synchronization timer of the input signals might have to be adjusted. Select [Setup] – [Biphase] under the [Tools] menu to perform the adjustment

#### Image appears trapezoidal

- Move this machine to adjust the projection angle.
- Correct the distortion manually from the [Keystone] menu.

#### Image reversed or up-side-down

- Select [Flip (Left-Right)] or [Flip (Top-Down)] from the menu to flip the image back to normal. °

## Troubleshooting (3/3)

### Projection is unclear

- Select the [Optical] and/or [Biphase] menu from the [Setup] menu and perform adjustments.

### Image is too dark

- Adjust the [Contrast] and [Saturation] under the [Settings] menu.

### Colors do not look right

- Adjust the [Hue] and [Saturation] under the [Settings] menu.

### Precautions for use

 
- Please use this product in an environmental temperature between 0°C to 35°C.
- The USB Type C power jack of this machine can only be used to input power with specifications 5V /2.1 A or above.
- Do not connect this machine to the USB jack or computers or other devices; doing so may cause damages.
- Please wipe with soft cloth if the lens is dirty, for example eyeglass cloth.
- Do not use or store this machine in wet or dusty places; also unplug the power cable from this machine after usage or when not in use.
- A warning will be displayed when the product overheats, then it will shut down automatically. Please let the machine cool down first before using it again.
- The antenna is built-in this machine; do not cover the location of the antenna with your hands or other objects as doing so may affect communication quality.
- Do not place this machine close to credit cards as doing so may cause loss of recorded data.
- There might be noises from near-by TVs, radios or tuners when using this machine. If this happens, keep this machine far away from these products when in use.
- If projections of this machine are done by connecting the HD transmission cable to a smartphone or tablet device, the remaining battery power of the smartphone or tablet may decrease depending on the usage environment.
- If you have any other usage issues, please contact [support@alpith.com](mailto:support@alpith.com)

# Warranty Certificate


## Warranty Certificate steps:

1. Remove the warranty label from the product package.
2. Attach the warranty label to the specified location inside the packing cover.
3. Complete the warranty certificate.

Step 1

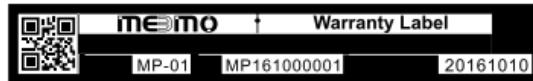

Step 2

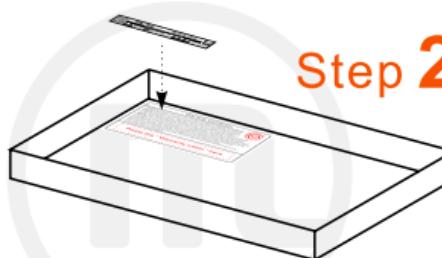

Step 3



## License

**The MIT License (MIT)**

Copyright (c) Sergey Ryazanov (<http://home.onego.ru/~ryazanov>)

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.



Movies



Games



Sports



Camping



Metting

*Play with your imagination*



[www.alpith.com](http://www.alpith.com)  
[support@alpith.com](mailto:support@alpith.com)



Made in TAIWAN