CY-29 Bluetooth speaker user manual


Thank you for choosing our wireless audio player, please read the entire contents of this user manual before operation. It is filled with reference information that will allow you to make the fullest use of the product. We appreciate your kind understanding if there is any misprint or translation error.


Function Introduction

- ·Wireless audio: Stereo sound with MAX 10m liner receiving range
- ·Wireless communication: Provide clear sound by using high fidelity wireless chip, no echo or tiny voice occurred
- •TF function: Power-off memory and loop playback function
- . USB function: Power-off memory and loop playback function
- .USB output: DC 5V/1A
- ·Aux-in: Easy to connect with laptop, mobile phone and other device with a 3.5mm audio cable
- . TWS (true wireless) function: Player A and player B could play same music source by wireless connecting

In the box:

- ·1X audio player
- ·1X Charing adapter
- ·1X Strap
- ·1X user manual

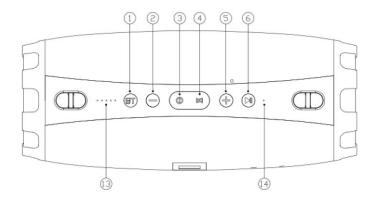

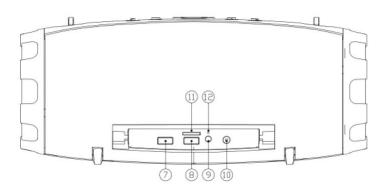

Controls & Functions:

- 1. BT shortcuts
- 2. Previous song/volume down
- 3. Power/Mode button
- 4. TWS button
- 5. Next song/volume up
- 6. Play/pause/phone answering

/hang up/call rejection

- 7. DC 5V output port
- 8. USB port
- 9. AUX-IN
- 10. Charging port
- 11. TF card slot
- 12. Reset button
- 13. Battery indicator light
- 14. MIC

Power on & power off operating instruction

Power on: Press the power button for 2 seconds until blue indicator light displayed, and then the speaker will be in paring mode after voice prompt.

Power off: Just press the power button for 2 seconds no matter which mode the speaker is staying, it will be power off after the voice prompt.

Automatically shut down at low voltage: Please charging the speaker as soon as possible if the product working abnormally or power off at low voltage.

Wireless function introduction: The blue indicator light blinks when the speaker power on, Searching the Bluetooth pairing name "EXPLORER" on your cell phone, then click "EXPLORER" and the Bluetooth device will automatically match successfully after a few seconds, the password is "0000" if necessary. You could play music once successfully paired.

BT shortcuts /disconnection button: It will be jumped into wireless mode after short press of the wireless button; Disconnecting and searching another wireless device after 2 seconds pressing.

buttons function under wireless mode: short press "-" button for previous song, long press "-" button for volume down. short press "+" button for next song, long press "+" button for volume up. Short press "play button" for pause or play function.

Short press "play button" to answer the call or hang up, long press to reject a call; U could control the volume with your fingers pressed on the volume button.

Wireless communication function: you could answer the phone by pressing the corresponding buttons when there is a call coming; the best calling effect is within 1m from the speaker, you could adjust the volume according to your requirement.

TF card function introduction:

TF card playing function: Switching to TF card playing mode by pressing the mode button or put the TF card into the card slot directly, as the speaker with power-off memory and loop playback function.

buttons function under TF card mode: short press "-" button for previous song, long press "-" button for volume down. short press "+" button for next song, long press "+" button for volume up. Short press "play button" for pause or play function.

USB function introduction:

USB function: Switching to USB mode by pressing the mode button or put the USB disk into the USB port directly, as the speaker with power-off memory and loop playback function.

buttons function under USB mode: short press "-" button for previous song, long press "-" button for volume down. short press "+" button for next song, long press "+" button for volume up. Short press "play button" for pause or play function.

AUX-IN function introduction:

AUX-IN mode function introduction: Switching to AUX-IN mode by connecting with an audio cable; If you have already put the audio cable in the speaker before power on, just press the MODE button to select AUX IN mode.

Buttons function under AUX-IN mode: Short press "play button" for pause or play function. long press "-" button for volume down and long press "+" button for volume up.

TWS function

- . Audio player A has already connected with mobile phone, turn on audio player B, long press the TWS button of audio player A for 3-5 seconds, the white indicator light blinks; The white indicator lights keep long bright when audio player B connected successfully with audio player A, then audio player B will play the same music with audio player A.
- . Audio player A is playing music with TF card or AUX input music, turn on audio player B, long press the TWS button of audio player A for 3-5 seconds, the white indicator light blinks; The white indicator lights keep long bright when audio player B connected successfully with audio player A, then audio player B will play the same music with audio player A.
- . Disconnect by long press the TWS button for 3 seconds on either audio player.
- . You could control the volume, songs selection, pause, play, power off by pressing the buttons of either audio player during playing.

Micro USB charging function introduction

The speakers will not normally working when the battery is low, please charge it in time, connect with charging cable and the indicator light up, indicator lights keep long bright when full charged.

Indicator lights under different modes:

- •Wireless mode: The blue light blinks slowly during playing, fast blinking when searching and keep long bright when suspending.
- •TF card mode: The white light keep long bright during playing and blinks slowly when suspending.
- ·AUX-IN mode: The white light keep long bright during playing and blinks slowly when suspending.

Technical Parameter:

•Output power: 10W for bass, 5W for alto and 5W for treble

·Working voltage: DC 7.4V

·Built-in battery: 7.4V / 4000mAh.

•Frequency: 60Hz-18 KHz •Bluetooth version: 2.1+EDR

•BT operating range: 10m (no obstacle distance)

•SNR: >70dB

•Distortion: <10%

·Support MP3: bite rate, 32kbps-320kbps

Cautions

You will need to confirm to comply with the following basic safety instructions to guarantee safe and reliable use of the product.

- •It is not allowed to make the product fall or suffer from thump.
- •It is not allowed to make the product close to high magnetic field.
- •It is not allowed to make the product close to high temperature heat source, or dry or blow the product at high temperature.
- •It is not allowed to disassemble, repair or remake the product.
- •Do not listen music at a high volume for a long time in case a bad effect on hearing.
- •It is not allowed to use clean water to clean the speaker, a slightly wet cleaning cloth is workable.
- •Please charging in time and unplug the charging cable when fully charged to extend the battery lifetime.
- •Please properly handle the waste packaging, battery and waste electronics with corresponding classification.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.