

Federal Communication Commission
Equipment Authorization Division, Application Processing Branch
7435 Oakland Mills Road
Columbia, MD 21048

DATE: 2016-11-3

Attn: Office of Engineering and Technology
Subject: Attestation Letter regarding UNII devices

FCC ID: 2AJPW-10D2AE

Software security questions and answers per KDB 594280 D02:

Software Security description – General Description		
1	Describe how any software/firmware update will be obtained, downloaded, and installed. Software that is accessed through manufacturer's website or device's management system, must describe the different levels of security.	We built a secure server in our company. Any updates release in the future, will upgrade via upgrade application in system automatically. We do not release the firmware on our website for downloading.
2	Describe all the radio frequency parameters that are modified by any software/firmware without any hardware changes. Are these parameters in some way limited, such that, it will not exceed the authorized parameters?	Radio frequency parameters are limited by US regulatory domain and country code to limit frequency and transmit power levels. These limits are stored in non-volatile memory by the module manufacturer at the time of production. They will not exceed the authorized values.
3	Describe in detail the authentication protocols that are in place to ensure that the source of the software/firmware is legitimate. Describe in detail how the software is protected against modification	The firmware is installed on flash memory during manufacturing process. The correct firmware is verified and installed by OEM manufacturer. The firmware binary is encrypted using openSSL encryption.

4	Describe in detail the verification protocols in place to ensure that installed software/firmware is legitimate	The firmware binary is encrypted. The process to flash a new firmware is using a secret key to decrypt the firmware
5	Describe in detail the verification protocols in place to ensure that installed software/firmware is legitimate	Standard openSSL encryption is used
6	For a device that can be configured as a master and client (with active or passive scanning), explain how the device ensures compliance for each mode? In particular if the device acts as master in some band of operation and client in another; how is compliance ensured in each band of operation?	Our Device is client mode only . The device ensures the compliance by checking theconfigured parameter and operation values according to theregulatory domain and country code in each band.
Software Security description – Third-Party Access Control		
1	How is unauthorized software/firmware changes prevented?	Unauthorized firmware is not accepted by the firmware update process.
2	Is it possible for third parties to load device drivers that could modify the RF parameters, country of operation or other parameters which impact device compliance? If so, describe procedures to ensure that only approved drivers are loaded.	Not support to load third parties device.
3	Explain if any third parties have the capability to operate a US sold device on any other regulatory domain, frequencies, or in any manner that is in violation of the certification.	Not support third parties devices. third parties don't have the capability to access and change radio parameters. US sold modules are factory configured to US
4	What prevents third parties from loading non-US versions of the software/firmware on the device?	Only encrypted and verified firmware is applied and stored in the non-volatile memory.
5	For modular devices, describe how authentication is achieved when used with different hosts.	The module is not available for sale or installation outside of company licensing agreements. Modules are always installed in host systems in a factory by end

		integrators(OEM) responsible for loading authorized software.
Software Security description – USER CONFIGURATION GUID		
1	To whom is the UI accessible? (Professional installer, end user, other.)	The UI is accessible to Professional installer using the device.
	<p>a. What parameters are view able to the professional installer/end user?</p>	Various device status information is made available like connection status, operation mode, operation frequency, etc. Radio parameters are described in c.i
	<p>b. What parameters are accessible or modifiable to the professional installer?</p> <p>i. Are the parameters in some way limited, so that the installers will not enter parameters that exceed those authorized?</p> <p>ii. What controls exist that the user cannot operate the device outside its authorization in the U.S.?</p>	This device is not subject to professional installation
	<p>c. What configuration options are available to the end-user?</p> <p>i. Are the parameters in some way limited, so that the installers will not enter parameters that exceed those authorized?</p> <p>ii. What controls exist that the user cannot operate the device outside its authorization in the U.S.?</p>	<p>The end user is able to enable switch or disable wifi switch, choose which wifi SSID to use. The end user cannot change the antenna again and country code, parameters, frequency, those settings are programmed at factory production time.</p> <p>Yes, the parameters can only be changed within the limits of country code US.</p> <p>The country code and regulatory domain control do limit all the parameters set by UI</p>
	d. Is the country code factory set? Can it	The country code is

	<p>bechanged in the UI?</p> <p>i. If so, what controls exist to ensure that thedevice can only operate within its authorizationin the U.S.?</p>	factory set and is never changed by UI. The country code is factory set and is neverchanged by UI
	e. What are the default parameters when the device is restarted?	At each boot up the country code and the antenna again are read from the non-volatile memory, those values are configured during module production.
2	Can the radio be configured in bridge or meshmode? If yes, an attestation may be required.Further information is available in KDBPublication 905462 D02.	Not supported
3	For a device that can be configured as a masterand client (with active or passive scanning), ifthis is user configurable, describe what controlsexist, within the UI, to ensure compliance foreach mode. If the device acts as a master insome bands and client in others, how is thisconfigured to ensure compliance?	No end user controls or user interface operation to change client operation. Our device is client mode only.
4	For a device that can be configured as differenttypes of access points, such as point-to-point orpoint-to-multipoint, and use different types ofantennas, describe what controls exist to ensurecompliance with applicable limits and the properantenna is used for each mode of operation.See Section 15.407(a).	The device does not support these modes/features.

Sincerely



Name: Kyriakos Sarantakos
Company: Electric Objects Inc
Address: 95 Avenue B, 2nd FL
New York, NY 10009, United States
Phone: (914) 316-1711
Email: kyri@electricobjects.com