



USER MANUAL

©Disney
www.disney.com

- Remove the back cover. Take out the USB receiver inside the battery compartment.
- Install 2 AAA battery (not included).
- Close the battery cover.
- Plug the USB receiver to your computer's USB port, the wireless mouse will connect automatically.

- 1X Wireless 2.4g Keyboard
- 1X Manual
- 1X USB Receiver
- BATTERIES NOT INCLUDED

- Power Supply: 2 AAA battery(not included)

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

1. Keep the device away from fire, water and avoid submerging the product in water to avoid explosion, leakage.
2. No one except professional technicians should attempt to disassemble the device in order to avoid damaging the product

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Always confirm the temperature is 41 °Fahrenheit before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

Wireless 2.4g keyboard
Material: ABS
Size: 12.2" x 5.3" x 0.66" (310x135x17mm)
Weight: 400g±5g



© GOIJOY & IJOY ARE REGISTERED TRADEMARKS OF QUEST USA CORP. ALL OTHER TRADEMARKS AND TRADE NAMES ARE PROPERTY OF THEIR RESPECTIVE OWNERS. DESIGNED BY GOIJOY & IJOY IN NEW YORK. ALL RIGHTS RESERVED QUEST USA CORP.

ijoy

MADE IN CHINA

正面

反面