


PRINT ARTWORK ON DIRECTLY ON PAPER.


**DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 9.8" W x 5.5" H**

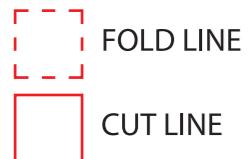

## Front

**iJOY**

**BLUETOOTH WIRELESS EARBUDS**  
**ECHO**  
FCC ID: 2AJQ7ECHO  
MODEL: IJ10159-AMZN

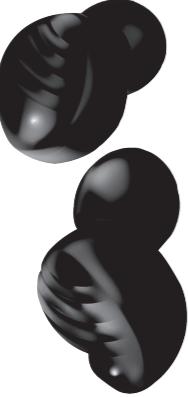

**USER MANUAL**

for use with  enabled devices

**• YOUR IJOY PRODUCT**

Thank you for purchasing and using the "IJOY ECHO" BLUETOOTH WIRELESS EARBUDS listening experience while staying active. Before using this product, carefully read this manual to in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

IJOY ECHO BLUETOOTH WIRELESS EARBUDS x1  
Charging Cable x1  
User Manual x1

**• PRODUCT SPECIFICATIONS**

- DRIVER DIAMETER: Ø8mm
- IMPEDANCE: 32Ω±15%
- BATTERY CAPACITY: Charging case for 300mAh, Earbud for 40mAh
- BLUETOOTH VERSION: V5.3
- BLUETOOTH RANGE: >10m
- CHARGING TIME: 1.5h
- PLAY TIME: 5-6h

**• PRODUCT FEATURES**

- Up to 20 hours Playtime
- Hands-Free Calls
- LED Indication
- Bluetooth
- Touch Controls
- LED Light Indicator
- Charging case holds 3-3.5 charges

**• FCC ID STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.  
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Back

**• BLUETOOTH**

- Charge earbuds in the charging case.
- Remove earbuds from the case.  
Earbuds will automatically turn on and sync to one another.
- Connect to Bluetooth  
Find "IJOY ECHO" in your device's Bluetooth menu and select pair.
- Turn Off Earbuds.  
Place earbuds back in their case to turn off earbuds.


**• BATTERY CAUTION**

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

**• BATTERY DISPOSAL**

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

**• FUNCTIONS**

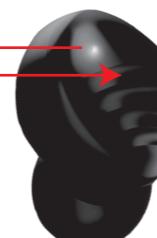

- LED Indicator
- Tap Here

**PAUSE/PLAY**  
Double tap the left or right earbud consecutively

**NEXT/PREVIOUS TRACK**  
Hold left or right earbud for 3 seconds

**VOICE ASSISTANT**  
Triple tap the left earbud consecutively

**VOLUME CONTROL**  
One tap the right earbud for Voice +  
One tap the left earbud for Voice -

**• OTHER IMPORTANT SAFETY INFORMATION**

Disposal of old electronic & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems) The trash can symbol (seen on the bottom) on the production indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

**IMPORTANT REMINDERS**

This device can ONLY be charged by 5V adapters/USB ports only. Quick charging devices over 5V may cause heat and fire.

