

DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 9.8"W x 5.5" H



Front



USER MANUAL



- IJOY FIREFLY x 1
- Charging Case x 1
- User Manual x 1
- Charging Cable x 1

- DRIVER DIAMETER: 10MM
- IMPEDANCE: 32OHM
- EARBUDS BATTERY CAPACITY: 30MAH
- CASE BATTERY CAPACITY: 200MAH
- BLUETOOTH VERSION: V5.0
- BLUETOOTH RANGE: 30FT
- CHARGING TIME: 1-2 HRS
- PLAY TIME: 2-4 HRS FOR EARBUDS EACH TIME.
- THE CASE CAN SUPPORT THE EARBUDS UP TO 2 TIMES CHARGES.

- Up to 12 hours Playtime
- Hands-Free Calls
- LED Lights
- Charging Case Holds 2 Times Charges
- Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Back

iJoy Firefly charging case charges earbuds 2 times faster for the ultimate listening experience. Leave in for 1-2 hours of charging for best results. Just place left and right earbuds inside the charging case sockets.



The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

- **Charging:**
- Earbuds LED lights will turn RED when charging and turn BLUE when full charged.
- Case will flash the RED lights when charging and turn solid RED when full charged.

Disposal of old electronic & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems) The trash can symbol (seen on the bottom) on the production indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



This device can ONLY be charged by 5V adapters/
USB ports only. Quick charging devices over 5V
may cause heat and fire.

