


# FRONT

Disney  
TIM BURTON'S  
THE NIGHTMARE BEFORE CHRISTMAS


## WIRELESS MOUSE

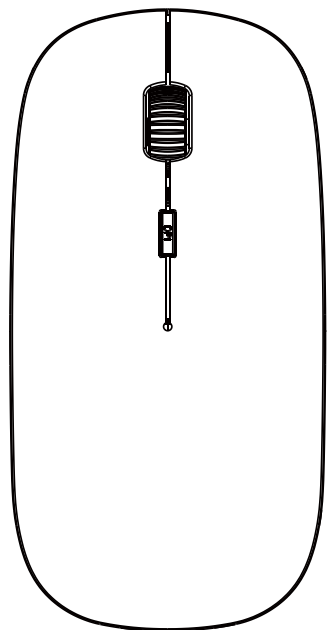

©Disney  
www.disney.com

## USER MANUAL

### •DEVICE FUNCTIONS

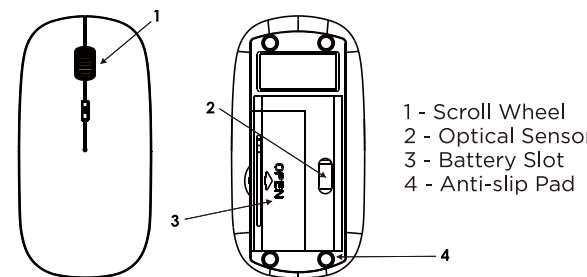

- 1 - Scroll Wheel
- 2 - Optical Sensor
- 3 - Battery Slot
- 4 - Anti-slip Pad

### •INSTALLATION

- Requires 2 AAA batteries (not included)
- Remove the battery cover; Insert two AAA batteries in the mouse battery slot. Put the battery cover into place.
- Insert the USB Plug-and Nano-receiver into a USB port.
- Use ON/OFF switch on the bottom of the mouse to power unit on. The unit will be powered on if the LED sensor is lit.

### •PACKAGE INCLUDES

- 1X Wireless Mouse
- 1X Manual
- 1X USB A Receiver

### •FEATURES

- Press on the DPI switch to change the dpi between 800/1000/1600 dpi
- Includes a three-phase power saving mode:
  - When mouse has been inactive, the mouse LED will dim and it will automatically transition into dormant power mode.
  - After no movement or activity for five seconds, the mouse LED will flash.
  - After no movement or activity for more than 8 seconds, the mouse enters it's strongest power saving setting and reduces it's power consumption to no less than 1mA.

### • SPECIFICATIONS

- Connectivity: 2.4GHz
- Frequency: 2402-2480Mhz.
- Resolution: 800/1000/1600 dpi
- Rate current: 15mA.
- Operating Range: 8-10 Meters effective operating distance
- Requires 2 AAA Batteries (not included)
- Compatible with: Windows XP, Vista, 7. Mac OS etc.

# BACK

### •PAIRING ISSUES

If the connection code disappears, the device will need to be repaired.

Please follow these steps:

- A - Re-plug the receiver.
- B - Press the right and middle keys of mouse synchronously within 15 seconds, this will allow the code of mouse and receiver to identify each other successfully.

### NOTICE

If the mouse does not function as needed, please check the status of the batteries. It is recommended that the mouse be used on a white surface to improve power consumption.

### •OTHER SAFETY INFORMATION

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

### • FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.  
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

### •BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Always confirm the temperature is 41°Fahrenheit before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

### • WARNING

1. Keep the device away from fire, water and avoid submerging the product in water to avoid explosion, leakage.
2. No one except professional technicians should attempt to disassemble the device in order to avoid damaging the product

MOUSE : FCC ID: 2AJQ7MOUSE

DONGLE: FCC ID: 2AJQ7-DONGLE



**ijoy** © GOIJOY & IJOY ARE REGISTERED TRADEMARKS OF QUEST USA CORP. ALL OTHER TRADEMARKS AND TRADE NAMES ARE PROPERTY OF THEIR RESPECTIVE OWNERS. DESIGNED BY GOIJOY & IJOY IN NEW YORK. ALL RIGHTS RESERVED QUEST USA CORP.

MADE IN CHINA.

PLEASE FOLD ON THE GREEN LINES  
DO NOT PRINT GREEN LINES