

FRONT



USER MANUAL

•YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY TIKI" wireless LED speaker. This product can provide a high quality listening experience through phones, computers, and other multimedia devices. Before using this product, carefully read this manual in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

•PACKAGE CONTENTS

IJOY TIKI wireless speaker x 1 Micro USB charging cable x 1 Extension pole x 1 User Manual x 1

•PAIRING YOUR PRODUCT

1. Once you have turned the speaker on, the speaker will automatically enter into "Wireless Mode".
2. Turn on the bluetooth on your media device and search for "IJOY TIKI".
3. Click to connect. While the speaker is searching and connecting, the white indicator light will begin to flash.
4. Once successfully connected, the speaker will produce a "jingle" sound and the white indicator light will stop flashing and hold a solid light.
5. You can then control the music using the control buttons on the speaker or on your media device.

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Always confirm that the temperature is 5 degrees Celsius before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered. Always keep the battery out of reach of infants and small children.

•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

BACK


FOLD

•DEVICE FUNCTIONS

- ON/OFF
- Decrease Volume/Previous Track
- Increase Volume/Next Track
- Play/Pause

•INSTRUCTIONS

1. Press and hold ON/OFF button for approximately 2 seconds to turn "ON" the speaker. Press and hold again to power off.
2. Press and hold PLUS button to increase the volume. Press this button once to skip to next track.
3. Press and hold MINUS button to decrease the volume. Press this button once to skip to previous track.
4. When the music is playing, press the **PAUSE** button once to pause the music, and once more to play.
5. Press the **LIGHT BULB** button once to turn "ON" the flame light. Press the **LIGHT BULB** button again to turn "OFF" the flame light.

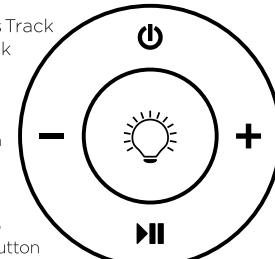

•SPECIFICATIONS

Wireless Version	V5.0
Transmission Distance	≤10M
Output Power	5W
Power Supply	DC 5V 1A
Built-in Li-ion	3.7V 1200mAh
Product Dimensions	D9.5 x 16.5cm

•OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of suffocation, keep plastic bag away from babies and children. Do not use this bag in cribs, beds, carriages or playpens. This bag is not a toy. Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol (seen on bottom right) on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over the the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



•FCC ID STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**ATTENTION VENDOR: PLEASE FOLD ON GREEN LINES AND PRINT DOUBLE SIDED
DO NOT PRINT GREEN LINES WITH MANUAL**