


iJOY**UFO**

FLOATING WATERPROOF SPEAKER

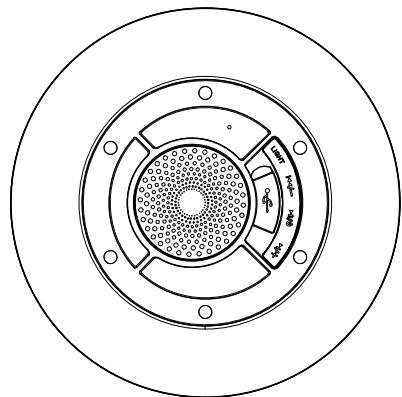

USER MANUAL

for use with
 Bluetooth®
enabled devices

•YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY UFO" Floating Waterproof Speaker. Before using this product, carefully read this manual in order to operate this device. Please ask your local dealer if you have any questions.

CONTENTS:

1x Floating Waterproof Speaker
1x Charging Cable
1x User Manual

SPECIFICATIONS**Playtime:** 100% volume, 1-2 Hrs / 50% up to 5Hrs**Charge Time:** 2H**Battery Capacity:** 1200MAH**IPX Rating:** IPX 7**Features:** BT, LED, FM**Output Power:** 3W*1**Input:** DC 5V 1A**Bluetooth Version:** 5.0**Bluetooth Range:** 10M**iJOY**Distributed by
Quest USA Corp.
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved Quest USA Corp.

Made in China.


The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of reach of infants and small children.

•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

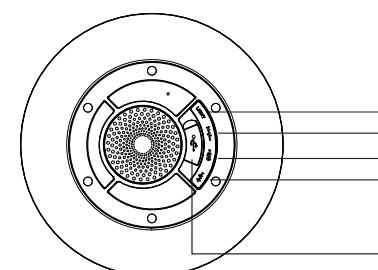•DEVICE FUNCTION

- ① **LIGHT:** Short press to switch 8 light modes, Long press to FM mode.
- ② **PREV/-:** Short press to play the previous song, long press to decrease the volume.
- ③ **PAUSE/POWER:** Long press to switch the machine, short press to pause. When an incoming call comes, click to answer the phone and double-click to hang up.
- ④ **NEXT/+:** Short press to play the next song, long press to increase the volume.
- ⑤ 5V charging port.

•OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol (seen on bottom right) on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

Tip: The formal manufacturer certified charger must be chosen, output voltage of 5v. If the product is not in use for a long time, please charge it.

**•INSTRUCTION****Pairing**

Open the Bluetooth list of the input device, select "IJOY UFO" in the list to pair and connect. When the connection is successful, the music can be played.

How to Achieve TWS Function(Requires 2 UFO)

Turn on both UFO, make sure neither UFO are connected to any device. Pick one of the UFO and double click NEXT/+ button quickly. A "beep" sound will be heard. Now both speakers are in TWS mode. Open your device and choose "IJOY UFO" to pair two speakers.

Precautions

1. Avoid heavy objects squeezing the product;
2. When cleaning the surface of the product, it needs to be wiped with a soft cotton cloth, and it cannot be cleaned with corrosive solutions.
3. Avoid placing the product near heat sources, such as air conditioning outlets, heating outlets, etc., and avoid placing them in a location where the humidity changes drastically, avoid placing it in a location exposed to strong light.
4. The light source in this lamp should be changed by the manufacturer or its service agent or a similarly qualified person;
5. Can only be used indoors.
6. The supplied USB cable is only for this product, and should not be used for other products .

FCC ID: 2AJQ7UFO

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**ATTENTION VENDOR: PLEASE FOLD ON GREEN LINES AND PRINT DOUBLE SIDED
DO NOT PRINT GREEN LINES WITH MANUAL**