

**WELCOME
TO TORCH**

Ready to upgrade your internet?


Let's get started!

Please go to **mytorch.com/pages/guide**
for the latest version of this manual.

IN THE BOX:



TORCH ROUTER

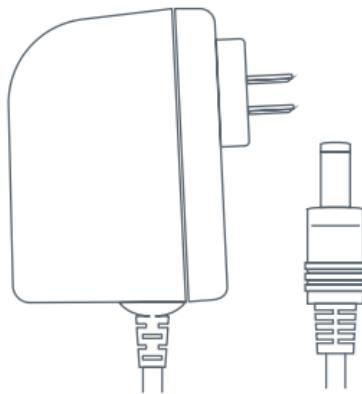

POWER SUPPLY




ETHERNET CABLE

STEP 1: DISCONNECT YOUR CURRENT ROUTER

Unplug the ethernet cable currently connecting the router and the modem.*

Unplug the router from its power source.

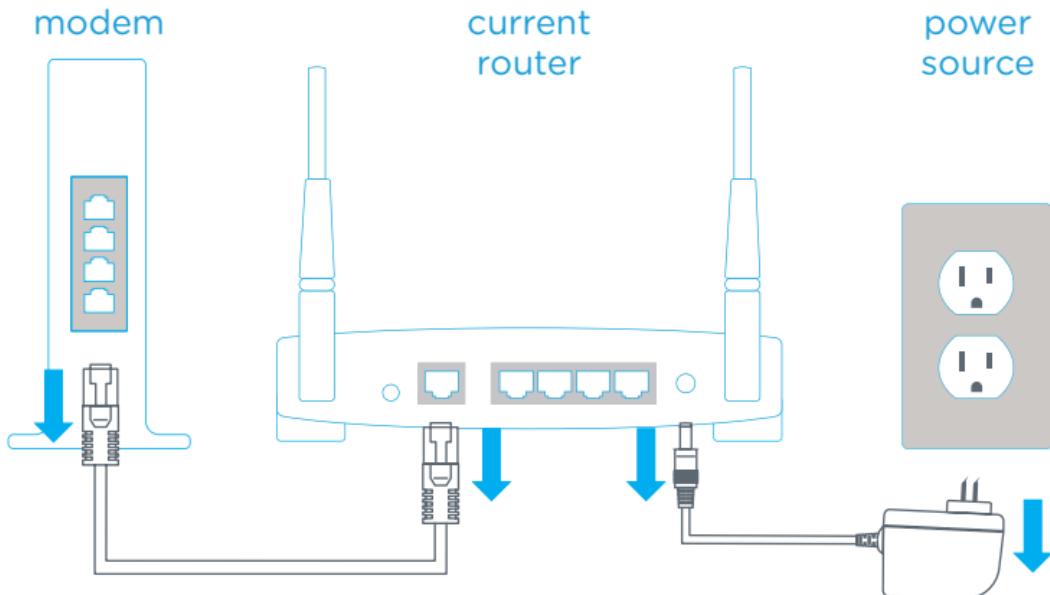

*If you don't have a modem, as some internet service providers don't necessitate one, the ethernet cable will plug into the wall ethernet plug.



STEP 2: CONNECT YOUR TORCH ROUTER

CONNECT TO THE MODEM.*

Plug the Ethernet cable that came with your Torch into the Ethernet port () on the back of the router.

Plug the other end of the cable into the Ethernet port on the modem.

Torch router

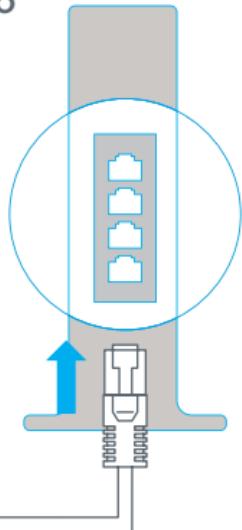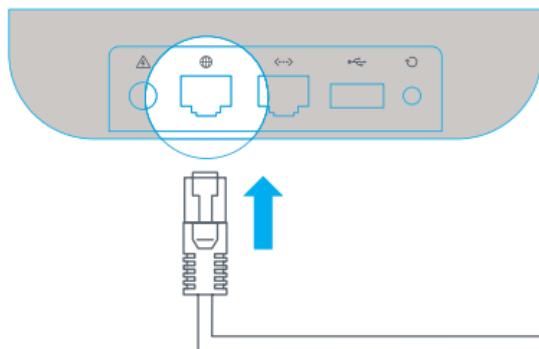


*If you don't have a modem, as some internet service providers don't necessitate one, the ethernet cable will plug into the wall ethernet plug.

STEP 2: CONNECT YOUR TORCH ROUTER

CONNECT TO POWER.

Plug the small end of the power adapter that came with your Torch into the first port () on the back of the router.

Plug the other end into a power outlet.

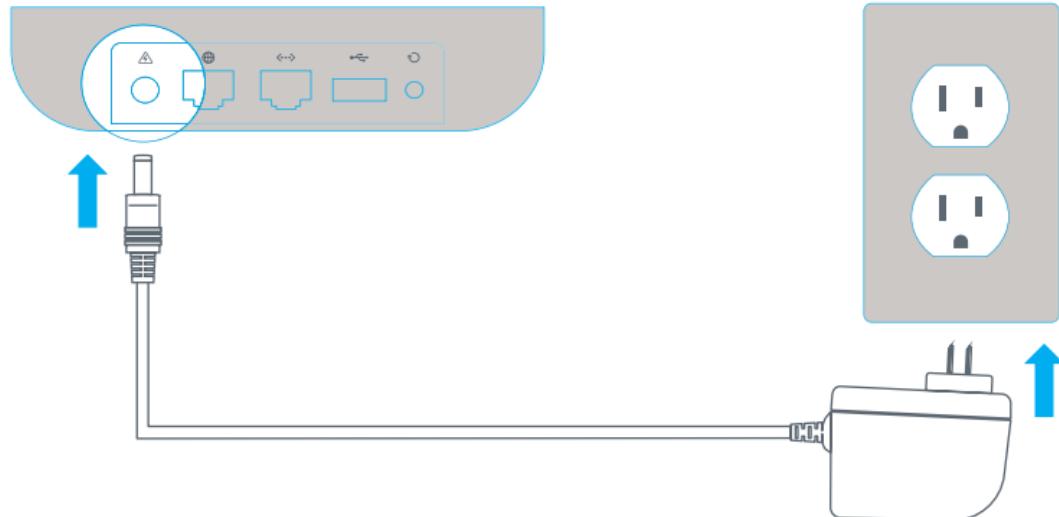

STEP 3: JOIN AND RENAME THE NETWORK

RESTART YOUR MODEM*



Unplug and replug your modem from its power supply.



The lights on the modem will turn off and then back on.



Wait three minutes while Torch checks for updates.

*If you don't have a modem, as some internet service providers don't necessitate one, the ethernet cable will plug into the wall ethernet plug.

STEP 3: JOIN AND RENAME THE NETWORK


JOIN THE NETWORK.

Go to your list of available wireless networks



MAC

(located top right)

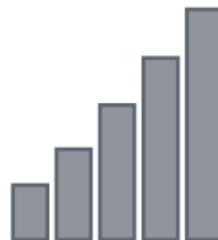

WINDOWS

(located bottom right)

Join the network labeled **Torch-XYZ-123**. The letters and numbers in the network name will correspond with the last 6 digits of your serial number. (The serial number can be found on the sticker on the bottom of your router, formatted as **ABC-XYZ-123**.) The password is **letitshine**.

STEP 3: JOIN AND RENAME THE NETWORK

RENAME THE NETWORK & CREATE A PASSWORD.

Once you select the network labeled **Torch-XYZ-123**, open an internet browser and you will be asked to:



Rename your network



Create a password



Set your timezone

STEP 3: JOIN AND RENAME THE NETWORK



*Torch will reboot
once the network is renamed.
This takes about 45-60 seconds.*

STEP 3: JOIN AND RENAME THE NETWORK


JOIN YOUR NEW NETWORK.

Go to your list of available wireless networks



MAC

(located top right)

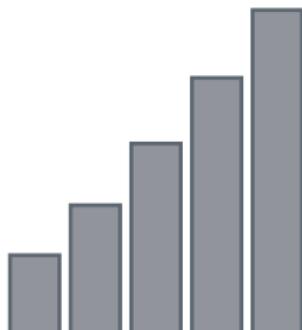

WINDOWS

(located bottom right)



Join your newly named network



Put in the password you created

WELCOME TO THE TORCH FAMILY!

QUESTIONS?

Call us at **844-333-3677**
or chat us at mytorch.com.

A Full downloadable PDF of these instructions
is available at mytorch.com/pages/guide.

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received,
including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

For operation within 5.15 ~ 5.25GHz frequency range, it is restricted to indoor environment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 26cm between the radiator & your body.

TERMS AND CONDITIONS

Use of Torch constitutes acceptance of the Terms and Conditions found on mytorch.com/pages/termsandconditions.



