


Wireless Controller

For Nintendo™ SNES

USER MANUAL

Package Content:

- SNES Wireless Controller x 1
- Wireless Dongle x 1
- D-Pad Cover x 1
- User Manual x 1


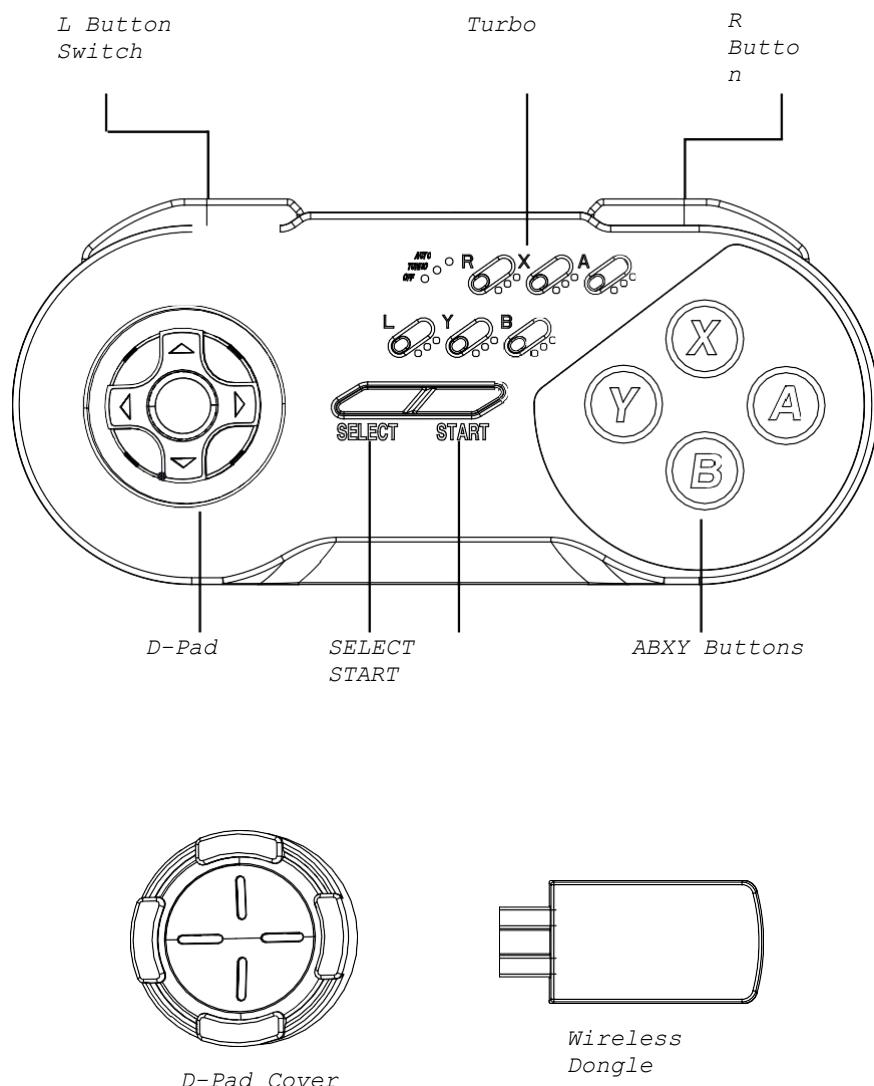


Specification:


- Wireless controller (2.4GHz) with range up to 20 ft
- Works with Nintendo SNES Classic Edition
- Turbo feature for 6 buttons
- Includes All-direction D-pad cover

Instructions:

1. Slide down the battery cover at the back of the controller

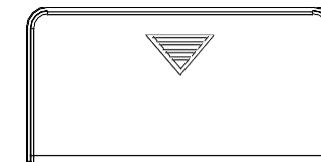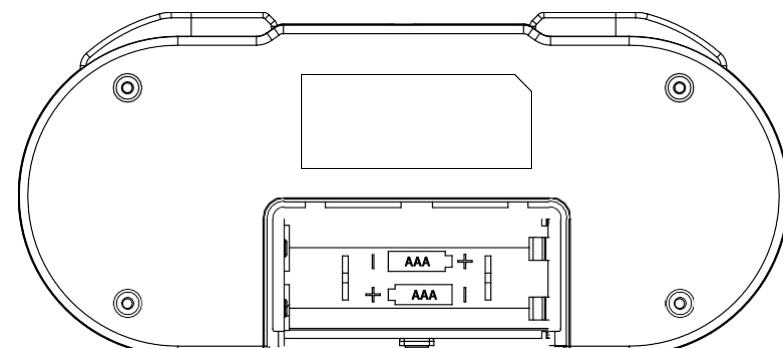


2. Insert two AAA batteries as indicated.

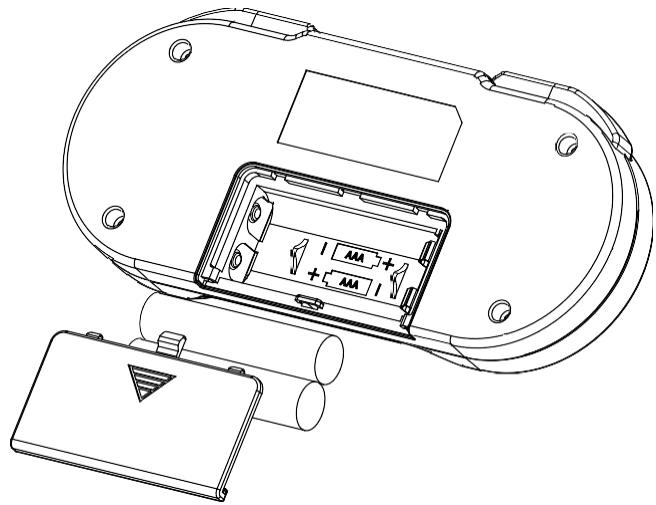

TURBO function:

This controller includes 6 TURBO switch for 6 buttons Each Switch has 3 options:

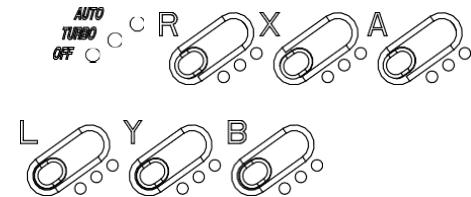

3. Close the battery cover. The LED at the top of controller will start slowly flashing if the battery has been properly connected.
4. Connect the Wireless Dongle to the front port of console
5. Holding both "A" and "B" button at the same time, until the LED starts flashing quickly, will put the controller into pairing mode. The LED will remain on when pairing is successful.
6. Controller is now paired and ready to play.


Power Saving Mode:

This controller will enter into sleep mode after 3 minutes of no use. Press any button to wake the controller.

- AUTO: Turbo function always on
- TURBO: Turbo function on only with button press
- OFF: No Turbo function

D-Pad Cover:

Install the D-Pad cover to get all direction control.

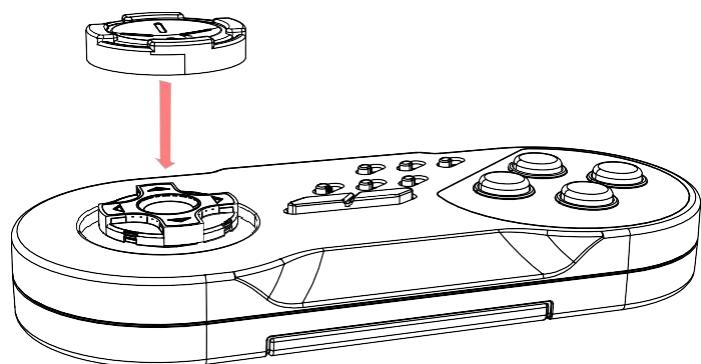

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRECAUTION AND MAINTENANCE

1. Please make sure there is no extreme pressure put on this product.
2. Don't dismantle this product without permission.
3. This product should be situated away from heat sources such as radiators and heaters.
4. Keep this product dry and avoid any contact with damp or wet areas.



Nintendo™ SNES is registered trademark or trademarks of Nintendo Inc. All Rights reserved; All other trademarks are property of their respective owners. Photos and illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under official license from or approved, sponsored or endorsed by Nintendo Inc.

This product is not manufactured for
Nintendo Inc.