



PS4 Chatpad

LBP-268

USER MANUAL

 

Dashine Electronics Co,Ltd

**Address:Building D3,Xingtang Industrial park, Baishisha East Area,
Fuyong Town, Baoan District, ShenZhen,China**


Package Content:

- Bluetooth Chatpad x 1
- Micro USB Charging Cable x 1
- User Manual x 1

3.5mm Audio Connector (Connect to PS4™ Controller)

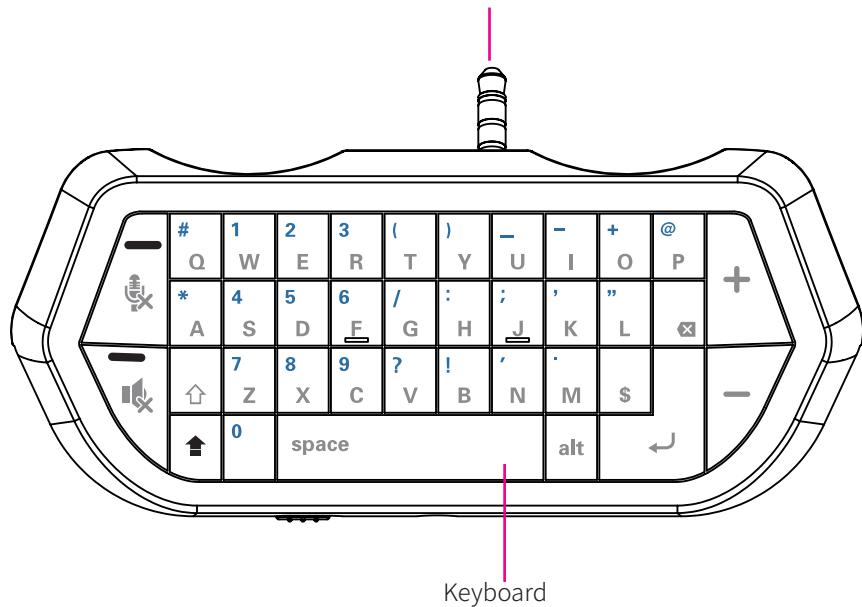

USB Charing Cable

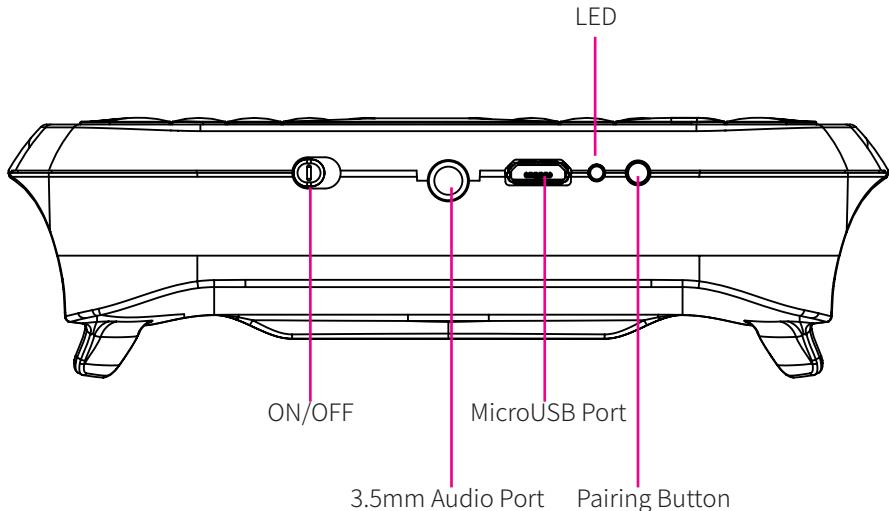

Specification:

- Bluetooth Keyboard easily connects to the PS4 Console
- Enables most wired stereo headsets to work with your PS4 Controller
- Easily adjust audio without taking your hands off the controller
- Controls include volume up/down, microphone mute, and speaker mute
- Connects to the bottom of the PS4 Wireless Controller and features a 3.5mm audio jack for your wired headset to plug into
- Microphone mute, and speaker mute LED indication
- Powered by Rechargeable Battery

Install to PS4™ Controller:

1. Following this illustration, make the 3.5mm Audio connector of the chatpad face to the audio port at the bottom of PS4™ Controller first.



2. Vertical insert the 3.5mm audio connector to the audio port of PS4™ Controller.



Remove from PS4™ Controller:

1. Following this illustration, pull the chatpad out from the PS4™ controller.



Charge the Chatpad:


1. Please charge the chatpad first before the first use.
2. Set the following at the PS4™ console:
“Settings” - “Power Save Settings” - “Set Functions Available in Rest Mode” - “Supply Power to USB Ports” - “Always”
3. Connect the Micro USB connector of the Micro USB cable to the Micro USB port of the Chatpad, then connect the USB connector to the USB port of PS4™ console. The PS4™ console could charge the Chatpad at the Power On and Rest Mode.
4. The Chatpad LED keeps BLUE when charge to the battery. The LED will turn OFF then back to normal working mode-when battery been fully charged.

Pairing the Chatpad to Console:

1. Turn the ON/OFF switch to ON mode. The LED will turn ON for 4 seconds, please wait it slow flash to connect to previously connected device or continue to step 2 to pairing mode.
2. Hold the pairing button 3-5 seconds until the LED turn to quick flash, it indicate the Chatpad into the pairing mode.
3. Follow this sets at the PS4™ console:
“Settings” - “Devices” - “Bluetooth Devices”
The console will auto search and display the Chatpad which in the pairing mode, choose “ChatPad for PlayStation 4” to connect to Chatpad
4. The LED will flash once 30s indicating the Chatpad is success connect to the PS4™ Console and in the working

Keyboard Function:


1. After success connect to console, the Chatpad could input as a normaly keyboard.
2. Direct tap each button to input the lowercase lettes.
3. Holding the Shift button, then tap other button to input with capital letters.
4. Tap the Function button  once, the function button LED will turn ON, then you could tap button to input the numbers and symbols (at the top left part of each button). Tap the Function button again to turn it OFF.

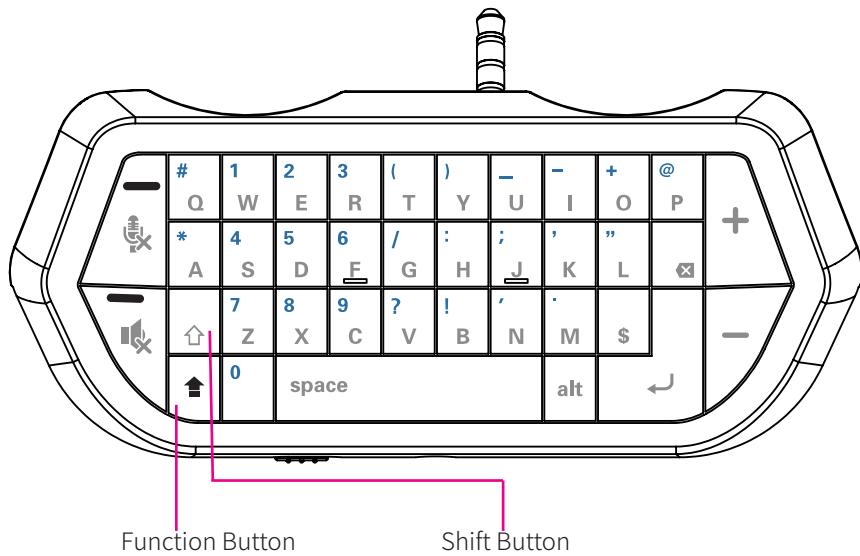

Audio Function:

1. Connect your headset (4pin 3.5mm connector) to the audio port of Chatpad. (The microphone function will be not available If the headset only got 3pin connector)
2. Set the following on the PS4™ console:
Holding the PS button for 3-5sec to access the quick menu, “Adjust Sound and Devices” - “Output to Headphones” - “All Audio”.
3. Make sure the Chatpad have been turn ON.
4. Volume UP and DOWN button for adjust the output volume.
5. If you want your team member not hear your voice, tap the Microphone Mute button to Mute the player Microphone, the LED under the button will turn ON indicate the Mute status. Tap again to turn OFF.

6. If you don't want to hear any sound from the headset, tap the Speaker Mute button to Mute the player headphone speaker, the LED under the button will turn ON indicate the Mute status. Tap again to turn OFF.

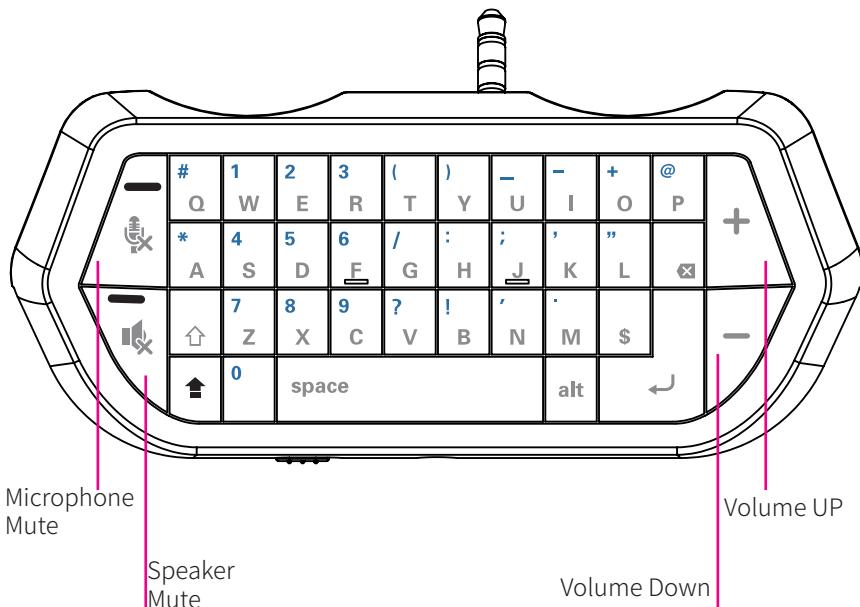

Bluetooth Connection:

1. Turn the ON/OFF switch to ON mode. The Chatpad LED will turn ON for 2 seconds, then slow flash (flash at every one sec) to auto connect to previously connected device.
2. If you want the Chatpad to connect to a new console, Please follow the step at the Pairing section.

Sleep Mode:

1. The Chatpad will enter sleep mode to save power if no action in 5 mins. (not connect with any headset)
2. If the Audio function is ON (connect with headset), the Chatpad won't enter the sleep mode.

Low Battery:

1. The Chatpad LED will slowly flash (flash at every five sec) when the battery is low.
2. Please follow the steps at charging section to charge the Chatpad.

PRECAUTION AND MAINTENANCE

1. Please make sure there is no extreme pressure put on this product.
2. Don't dismantle this product without permission.
3. This product should be situated away from heat sources such as radiators and heaters.
4. Keep this product dry and avoid any contact with damp or wet areas.
5. Please turn off the Chatpad if not in use.
6. Please remove the headset from Chatpad if not in use the audio function.



PlayStation4™ is registered trademark or trademarks of Sony Computer Entertainment Inc. All Rights reserved; All other trademarks are property of their respective owners. Photos and illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under official license from or approved, sponsored or endorsed by Sony Computer Entertainment Inc. This product is not manufactured for Sony Computer Entertainment Inc.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.