


# eonego

## EWG-108 Intelligent Robot Sweeper

### User Manual

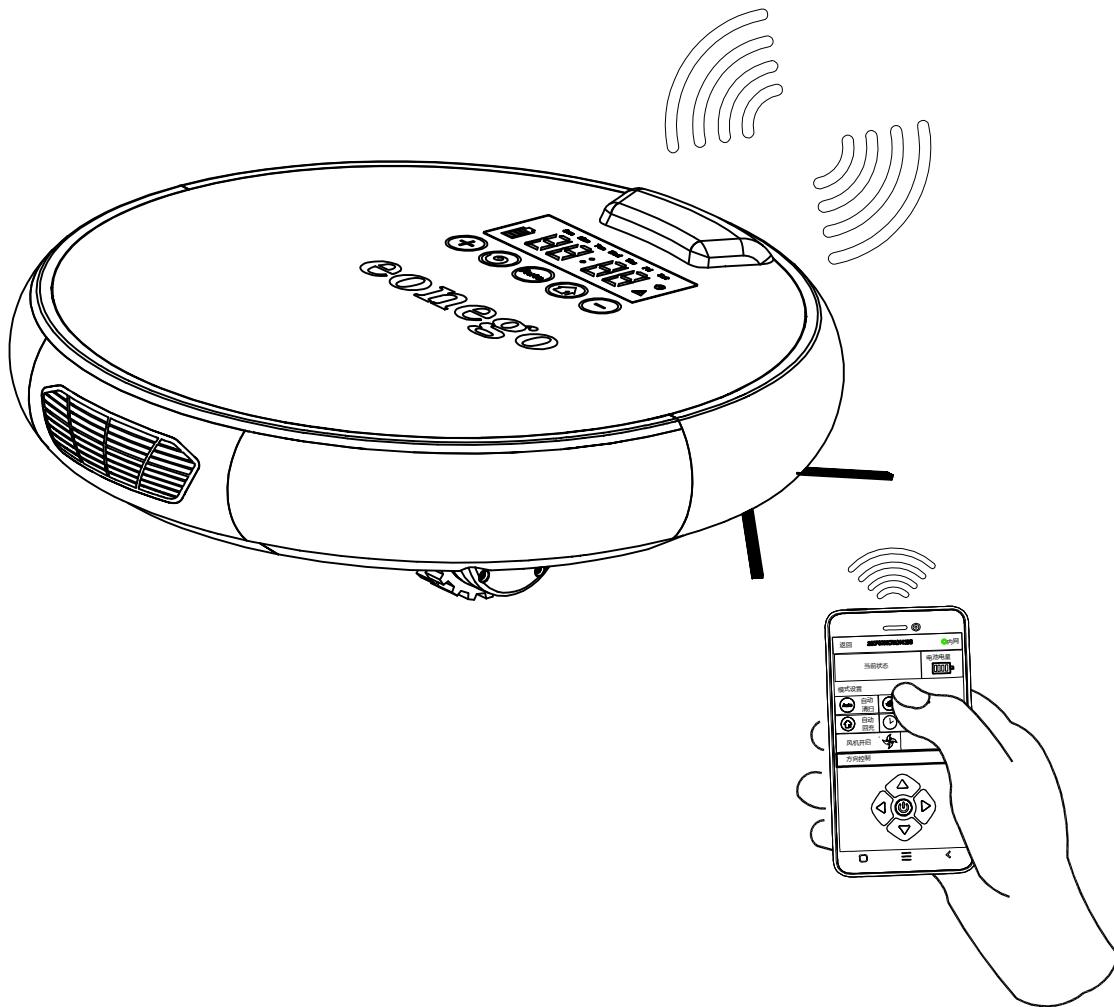

Thanks for choosing eonego intelligent household product, before using, please read this manual.

# Catalogue

1. Safety instruction	01
1-1. About the user manual	01
1-2. The power supply	01
1-3. Suitable usage environment	01, 02
2. Attention before useage	02
2-1. Attention before useage	02
2-2. Safety standards	03
2-3. About Package	03
2-4. Deal with problem	03
3. Product introduction	04
3-1. Structure	04
3-2. Performance	05
3-3. (APP) Install , Login in,(WIFI)Restore	06-09
4. Operation Instruction	10
4-1. Side brush assembly	10
4-2. Battery Recharge	10
4-3. Turn On/Off	10
4-4. Key Function	11
5. Charging base	11, 12
6. Remote control	13
7. Maintenance	14
7-1. Dust box	14
7-2. Primary filter	15
7-3. HEPA filter	15
7-4. Mop	15
7-5. Middle Brush	16
8. Packing List	17
9. Product Specifications	17
10. Install、Replacing the remote control battery	18
11. Failure checking	19, 20
12. Others Questions	21

## To Respected customers :

Thank you for choosing our intelligent robot cleaner ,this is really a meaningful intelligent cleaner,It could easily help you sweep your room and offer a comfortable, healthy enviroment even though you were not at home .

### 1. Safety instruction

#### 1-1 About the user manual:

Before using the cleaner please follow the below basic safety precautions:

- >>> Carefully read all the contents of this manual, using the machine according the man nul.
- >>> Properly keep the instructions, if you will use this product transfer to the third party, please send the instruction attached along with the product.
- >>> Any wrong operateion against the user manual may result in personal injury or damage the product,please take care when use it.

#### Attention:



Please don't try to tear-down this cleaner by yourself.there's no part that user can repair by themself<including the romote control>.And its only suitable family environment to use .Both industrial or outdoor is not suitable. more cannot be used on the surface of a liquid.

#### 1-2. The power supply:

- >>> A set of rechargeable batteries was used inside of the cleaner, charge with specialized device.
- >>> Please check and confirm the marked brand of the power supply voltage, ensure the cleaner working in the suitable status .
- >>> If the adapter's power cord or plug is damaged, please stop using it. Contact with our company's after-sales service department or the authorized person to replace or repair.
- >>> Don't use the power cord to drag or move the charging base, nor use the power cord as a handle .
- >>> Do not twist the power cord, and don't hold the power cord at the closing or place heavy objects on the power cord.
- >>> Don't let the power cord in contact with hot surfaces or sharp surfaces.
- >>> Be sure to remove the water tank when you are charging, so as not to cause leakage .
- >>> Don't drag out the power cord from the socket by the way of pull the code directly.
- >>> Don't use wet hand contact power plug or cleaner.
- >>> Long time not to use the charging base, please drag out the power plug from the socket.
- >>> Use dry cloth to clean the dust on the plug oftently .

#### 1-3. Suitable usage environment:

- >>>The cleaner is only working in indoor environment suitably, including wood , rubber floor, ceramic tile, wool carpet shortly , etc., not suitable for the long-haired carpet.

#### >>>Cannot be used for cleaning below conditions:

- Water ground (including flammable liquid), for example: wetland board, bathroom, shower room and other moist environment.
- The stairs.
- Furnace with open fire.

- >>> When the ground have the following material,The cleaner is prohibited to use :

- The objects may cause a fire ,such as cigarette ash that not put out, burning cigarette butts, or a match.
- Water or other liquid, especially detergent, kerosene, gasoline, paint, alcohol, perfume,carpet cleaning, floor cleaning solution. Internal moisture or water may cause short circuit machine.
- The laser printer, copier toner, toner. These objects may cause fire or explosion.
- >>> When use the cleaner,please don't make it near the Hot source such as oven or fireplace,since this may result in Deformation and aging .
- .>>> Do not use machine in a potentially dangerous environment. For example, gas station, oil depot, inflammable and explosive chemical plant.
- >>> Don't use machine in outdoor. As,its will casuse the cleaner damage because of the rain or mud, dust get into the internal space.
- >>> Don't try to repair or change its performance by yourself.
- >>> Don't fall, throw or extrusion the cleaner.
- >>> Don't get body wet, otherwise a short-circuit that make a damage will occur.
- >>> A daily maintenance is necessary.Please placing it in a clean place.
- >>> Don't expose the cleaner to extremely high or low temperature environment. It's not suitable for long-term in lower than 0 °C or higher than 40 °C environment to use and preservation.
- >>> Don't put it in liquid.
- >>> Don't put it in lighted cigarettes or near open flame.

## 2. Attention before use:

### 2.1 Attention before use

- >>> Please pay attention to its working space when the first time to use this cleaner, To avoid it stop working ,please remove its barrier .
- >>> For the foreseeable problems that may occur in the cleaning, should be ruled out as soon as possible. Such as:
  - will easily upset aside the objects in a safe place.
  - whiskers on the edge of the carpet to turn over to a safe place.
  - vertical to the ground of the tablecloth, the curtain should try to make it not to touch the ground.
  - objects to cut off the power supply with open flame.
  - the power cord of the winding on the ground and the mobile obstacles.
 Before cleaning,please make sure whether the brush,side brush has been installed inside the product successfully or not .
- >>> Ensure the dust container is empty, and installed in the suitable place.
- >>> Before cleaning, need to check if the prosecutor sensors has been wiped clean.
- >>> If you only need to clean a single room, please leave this room 's door close.

### Attention:



If their is a reflective ground whose height of the steps drop more than 8 centimeters(e.g., glass), the cleaner have the potential to fall down the steps. we are suggest that place with a layer of no reflection characteristics of cloth or carpet in low order.and If your home is a complex Structure or with stairs, To avoid accident occur,please pay attention to added a protective bar on the edge of the stairs.

## 2.2 safety standards

- >>> This product can't be used by the people of the mentally disabled or lack of common sense, unless there is the one responsible for their safety in their supervision or guidance when using this product.
- >>> Properly keep the product, in children and people can reach the outside without judgment, products work, especially need to be careful.
- >>> This product is in working status, so as to prevent down others, please let everyone in the room know this product is working.
- >>> Please do not use this product as a toy to play, when children or pet near here, please pay close attention to.
- >>> If you want to change the rechargeable battery inside the host, please contact the service department. If you use the wrong type of battery replacement, likely to cause explosion.
- >>> If you use the my company make the host of original battery and charge, there may be a potential danger, therefore cause damage to the host is not in the warranty.
- >>> Reasonable processing this product, please old batteries, batteries contain dangerous environment of harmful substances, please do not arbitrarily discarded, please follow the local environmental protection regulations, throw it to the prescribed recovery site.

## 2.3. About the package

- >>> Do not use this product packaging materials as household garbage discarded. Please send packing material to a proper collection points in order to use these resources again.
- >>> This product packaging bags and plastic bags have led to the danger of suffocation, should avoid to children to play, do not where children can touch.

## 2.4. Deal with problem

- >>> If the power adapter, host and other accessories fails, please do not repair or disassemble machines. Otherwise may cause personal injury. Please contact me or my company after-sales service department of professional maintenance organization is designated, By professional maintenance staff to provide after-sales service and maintenance.

### 3. Product introduction

#### 3-1. Structure :

3-1.1 Control Buttons as the figure(1) shown.

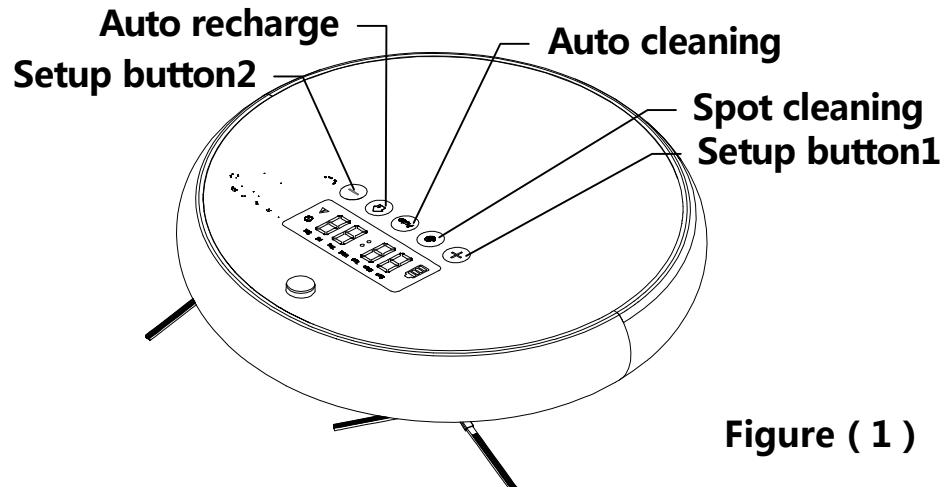


Figure ( 1 )

3-1.2 Bottom structure as shown in figure (2).

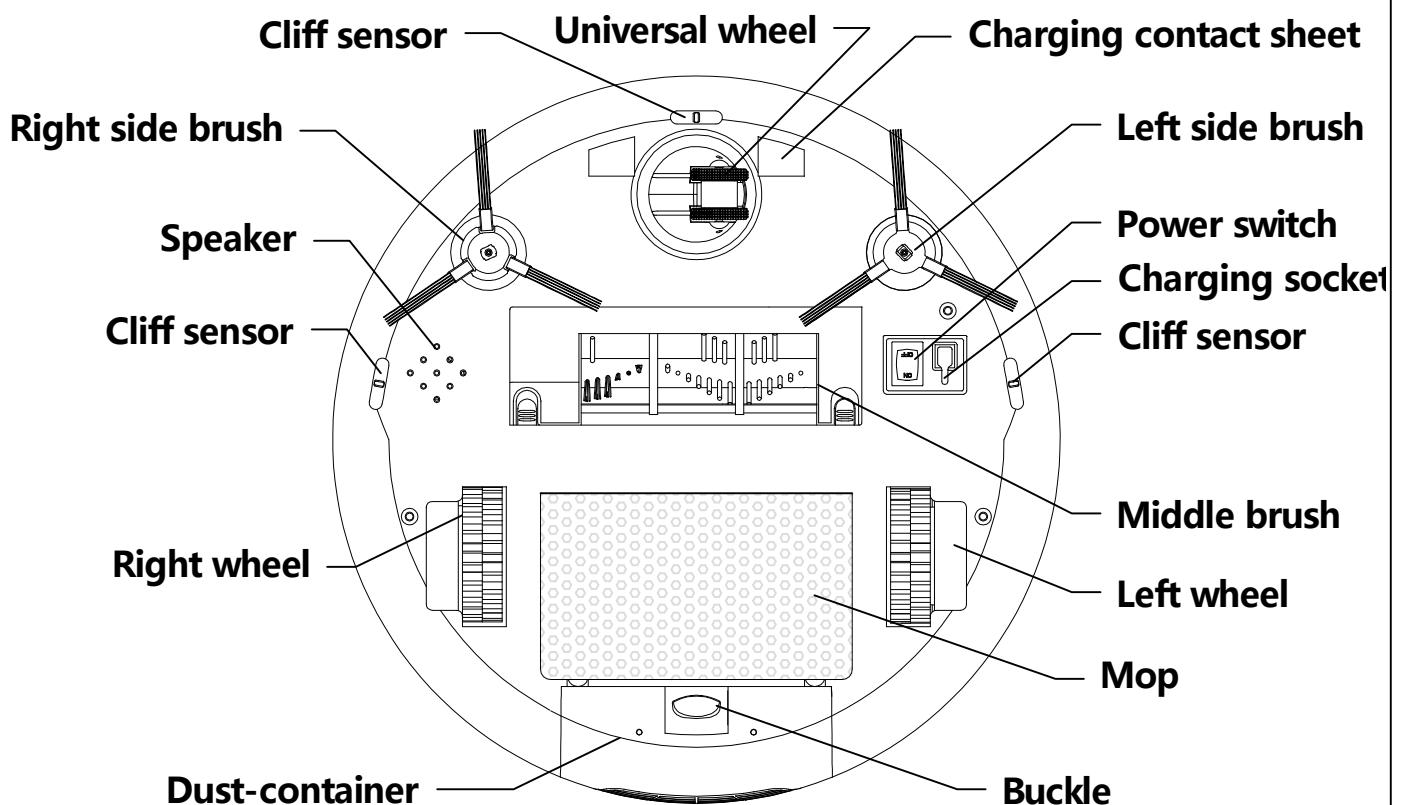



Figure ( 2 )

## 3-2 Performance




### **The Intelligence Function**

Cleaning the room just need click one button, without need monitoring.

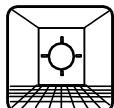

### **Navigation function**

Automatic route planning, sweep every place of the room .

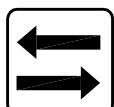

### **Automatic charging (can also choose to manually)**

The cleaner can automatically search for the charging base when it is low power .

Note: use this function must be equipped with the charging base.



### **Spot cleaning**

After set this function, cleaner will sweep the garbage areas with strong power.



### **Make an appointment to clean (optional)**

According to your appointment time to start work.

Note: use this function must be equipped with the charging base.



### **Fall prevention function**

Can prevent the cleaner from the table or tumbled down to the stairs.



### **A whirlwind brush**

cleaning efficiency is high because of this structure.



### **Thinly body**

can be easily cleaned into the bottom of the bed or sofa.



### **Softly tire design**

Wheels with soft materials, will not scratch the floor or carpet.



### **Low noise design**

far below the ordinary vacuum cleaner



### **Environmental protection function**

The built-in Primary filter、HEPA filter, effectively filter dust, purify the air.



### **Safety and energy saving**

24 w ultra-low power.

### 3-3. (APP) Install 、 Login in,(WIFI)Restore

### 3-3.1 (APP) Install

### >>>Support remote operation by mobilephone with"APP"

**<First: ensure your phone is connect with your home WIFI network>**

**<Second: ensure the cleaner is power-on, and entered the standby mode>**


>>> The "APP" symbol as shown in figure (3).



**Figure (3)**

## **For Android Mobile-phone:**

1. Unicom a WIFI network with your mobilephone.
2. Scan the QR code as shown in figure (4).
3. Install the "APP"

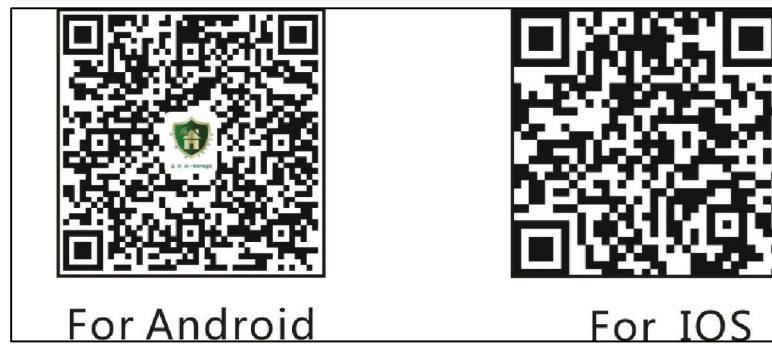

## Figure (4)


## IOS Mobile-phone:

1. Unicom a WIFI network with your mobilephone.
2. Scan the QR code shown in figure (4).
3. Install the "APP"

## Another way to Install the "APP":

**Search "EONEGO Micro Home" in APP store, and then click install.**

### 3-3.2 <APP> Login in

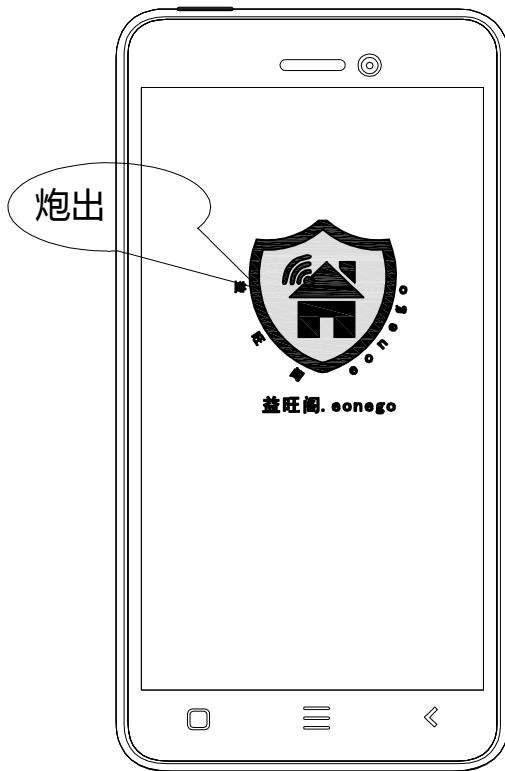

Step1 : Click "EONEGO Micro Home" APP




Step2: click "Configure WIFI"




Step3 : SSID will connect to your service , Enter your Password , and then click "Start" .



Step4: Start Configure(A little time you should be waiting ralate to your network speed).When it's finish,Click "I have know",and then,click "Returrr".

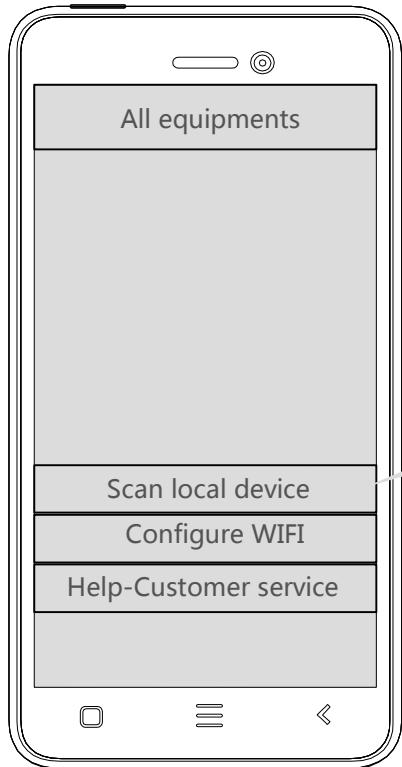


Note:Device number will be subject to actual display.

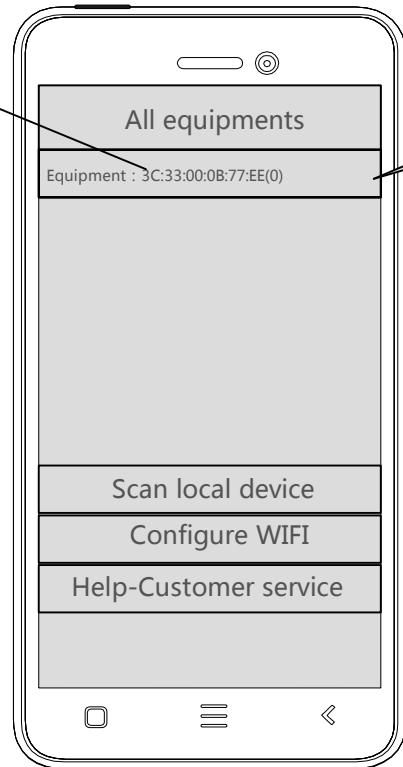

Step5: click"Scan Local Device"

Step6 : Click "Equipment"Code

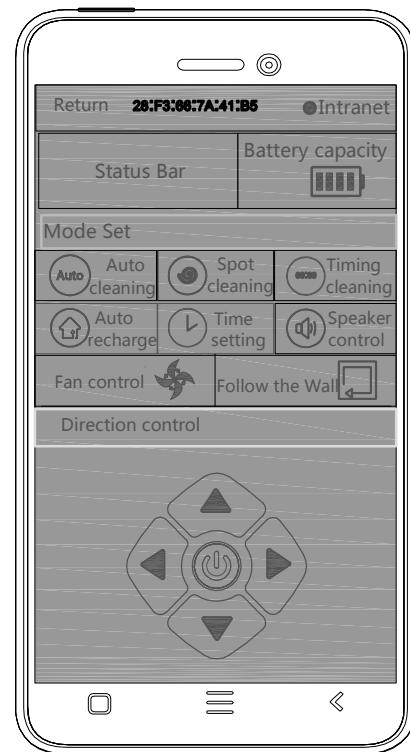

Step7:Please enter the password  
<The default password:8888> , and  
then click"Next step".

Step 8 : Entry "APP" User Operation  
Interface

### 3-3-3 <WIFI> Restore the factory Settings (as shown in figure (5). )

( Warm prompt: After the success configuration, It's will save the current information. When the router replacement or in the home wireless SSID is changed, you need to reset the WIFI module to restore factory Settings . )

- (1) Press the "setup key 1" and "spot cleaning" key at the same time. you will hear three "di、di、di" sounds at about three seconds later. then, fingers left, "week" symbols will continue to flashing.
- (2) About 10 seconds later when you hear two sounds, Cleaner enter into standby mode, WIFI module will be restore to factory Settings.
- (3) Enter the APP UI, click "configuration WIFI" .


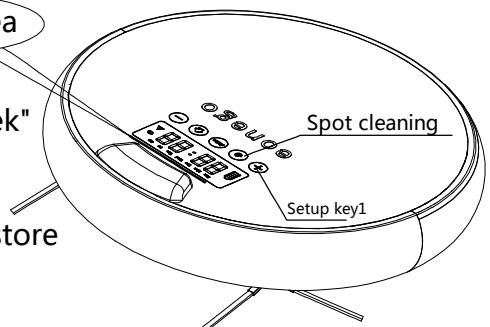


Figure (5)

### 3-3-4 "APP" UI

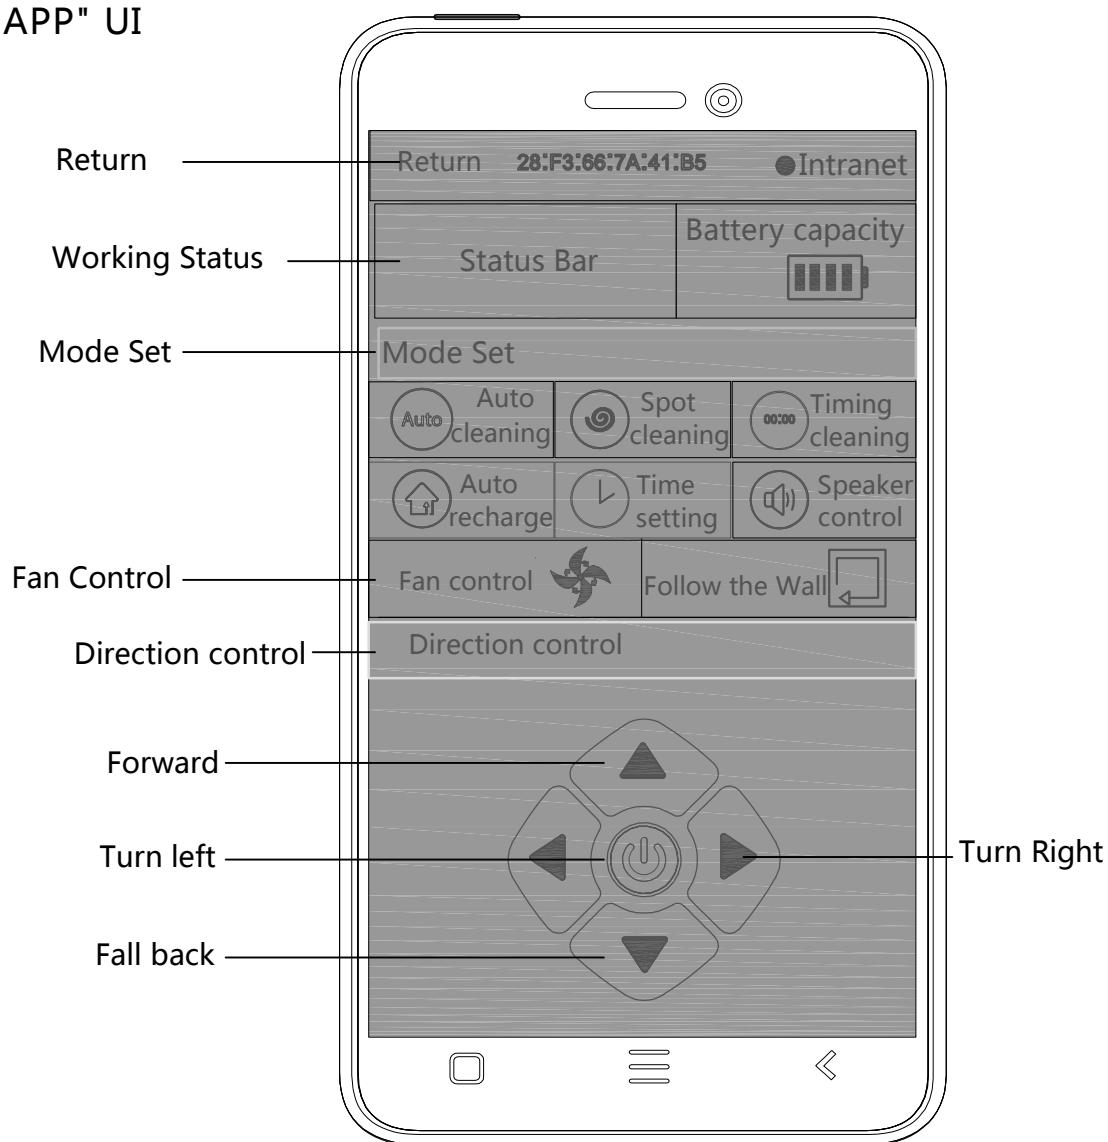

Step 8 : Entry "APP" operation interface

Figure (6)

## 4. The usage of product:

### 4-1 The installation of sweeping brush:

Get the side brush from the package, push in deep force directly to the side brush Mounting holey, as shown in figure (7).

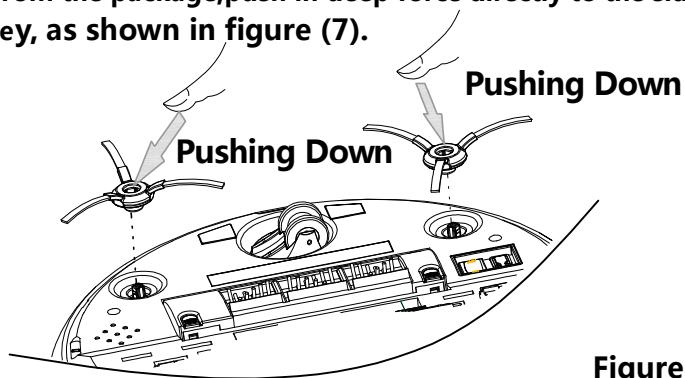


Figure (7)

### 4-2 Battery Charging

Before using the product, please recharge machine 4 hours, confirm the battery in a saturated state, as shown in figure (8).

The charging machine has two ways: can use charge back any seat, also can charge directly. Insert as picture(2) the machine charging hole soft gel gently poke, and then connect the power adapter charging hole for charging machine.

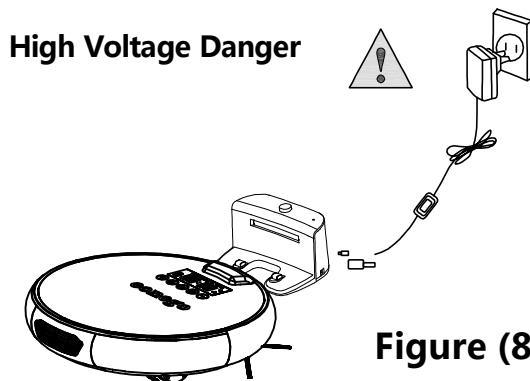


Figure (8)

Note:

1. Do not use this machine for a long time, please do good to save the machine and its accessories (machine power switch "O" word press).
2. Often do not use the machine, timing charging is necessary (intervals of no more than 15 days is the best).

### 4-3. Power On/off

Open the power switch to "I" word press at one end (press the "O" words said shutdown), as shown in figure (9).

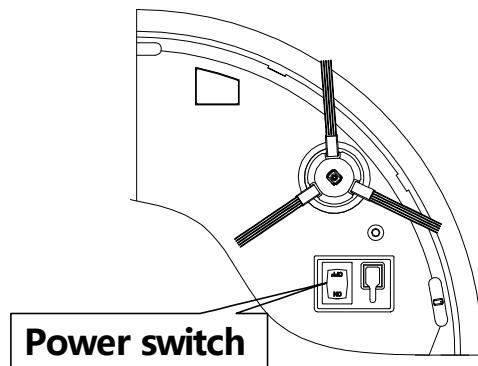


Figure (9)

## 4-4 Control Panel

4-4.1 . Set time: in the case of standby press the "+" key (" + "key lights), enter the time setting, in set mode according to the local clearing key or recharge key, switch around four Numbers and the week, press the" + "key or" - "button to adjust number or a week, Press the "auto" button to confirm the current Settings and make sure after the completion of the machine into standby mode, the button lights on.

4-4.2 . According to the local clearing, machine start cleaning within a certain scope.

4-4.3 . According to the automatic cleaning, automatic cleaning the key

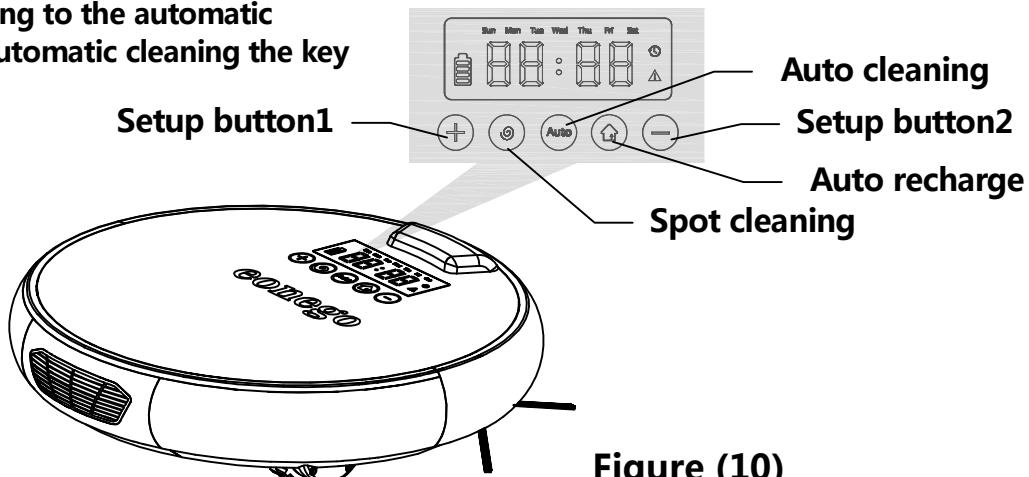


Figure (10)

under the light machine start, according to the actual terrain as intelligent switch cleaning mode, such as bow type cleaning, spiral, along the wall cleaning, around the pillar.

4-4.4. The automatic recharge: when press the "recharge" back to the key under the light, machine into looking for automatically recharge mode, find back filling machine entered the stage of charging, increasing power indicator light cycle, said in charge. After a full charge into standby mode automatically.

4-4.5. Set the reservation methods: under the condition of standby press "-" button to enter setup time mode, press "local" cleaning or "recharge" key switch around four Numbers (press the "+" or "-" key to change the time or weeks), adjust good reservation time and after one week According to "automatic" confirm Settings, and then the machine into standby mode, key light full on. To make an appointment time to, machine immediately activate automatic cleaning function. (such as: set up the appointments until ten o 'clock, selected week 1 and press automatic cleaning, then choose 2 weeks according to the automatic cleaning, then automatic cleaning out and save the reservation mode, every week 1, week 2 of the 10 o 'clock sweeping machine automatic cleaning the room.) Note: this working mode must be equipped with recharge, just can use.

4-4.6. Border cleaning: standby, please press " " and" - "key at the same time, the machine into border cleaning mode. If you need to other models, please press the other relevant key and exit border cleaning mode.

## 5. Charging base

5-1. The structure, as shown in figure (11).

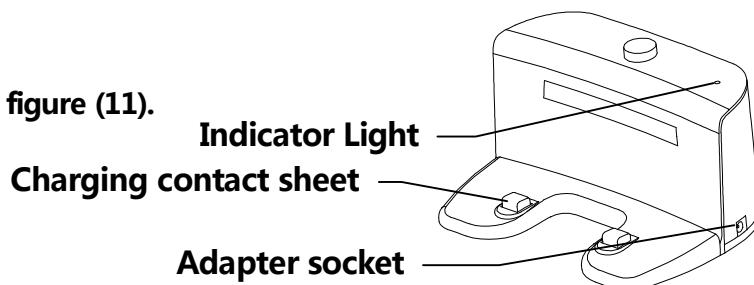


Figure (11)

## 5-2. How to use the Charging Base

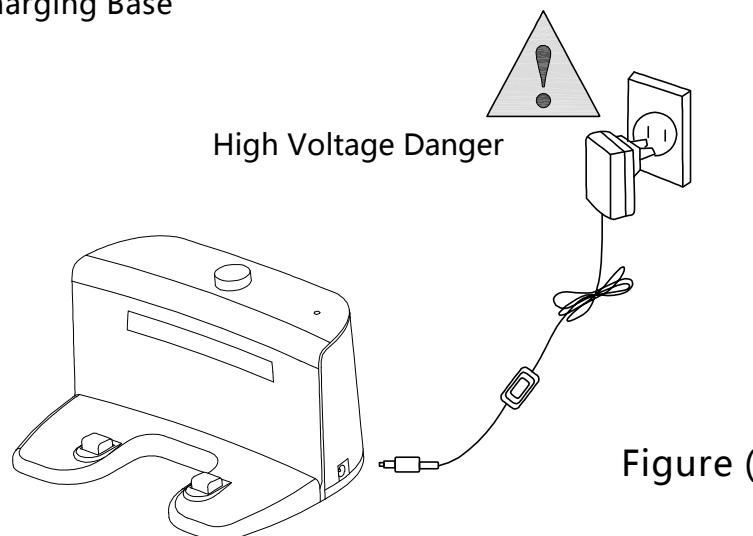


Figure (12)

### Attention:

- ◊ Automatically search for Charging Base when the battery is about to run out, and the power indicator on the panel will be go out.
- ◊ To seat the Charging Base in the room of a open place, Don't place obstacles that affect the movement of the Robot within 3-5 meters radius.
- ◊ If room area is too big, can't find Charging Base, you can put the machine on the base about 1.5 metres before, or with the remote control command machine near the recharge seat (remote controlMethod of use, please reference manual on page 9.)
- ◊ Often use dry cloth to wipe the shell of charging contact and contact patches on the Charging Base, to prevent dust and lead to poor contact.
- ◊ The Robot must use the random matching chargers, the use of other charger and battery, will cause the damage of the machine.
- ◊ For the first time use or reoccupy after long time need not, 8-9 hours charge is necessary before use, must charge battery only after 2-3 times full charge discharge cycles, can achieve the best performance.



## 6. Remote control <as shown in figure (13) >

### 6-1. Performance introduce

Press the < button : Turn Left ;

Press the > button : Turn Right ;

Press the ^ button : Forward ;

Press the v button : Fall back .

On/Off : Turn on/off <Turn off by default>

Recharge : automatic looking for recharge.

Spot : sweep the garbage areas with strong power.

Auto : automatic cleaning with the planning route.

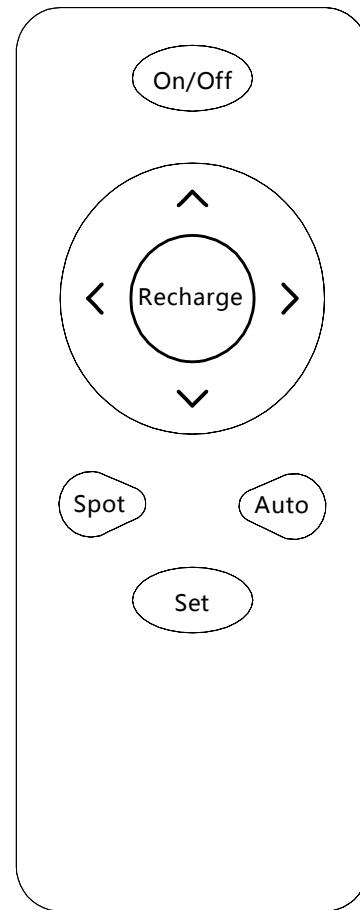


Figure (13)

### 6-2. How to use the remote control to set time and week :

Press "set" button to enter the time setting mode, and the first number will be flashing, said into the figures to be set at the time (in 24 hours).

By " | < "button to time to set the current position and the" > "button to switch to the next one to set the digital bits (according to the < button to switch to a digital bits). Repeat the " > "button to set the position to the week. Set time press automatic charge back after confirmation, then automatic cleaning button to enter standby mode.



Attention:

Using remote control distance as far as possible within 5 meters, otherwise, It's may lead to failure or not sensitive.

## 7. Maintenance

### 7-1. Dust box

7-1.1 Pull the buckle of the dust on the bottom of the cleaner. As shown in figure (14)

7-1.2 The Dust container will bounce off. As shown in figure (15)

7-1.3 Take out the container. As shown in figure (16) .

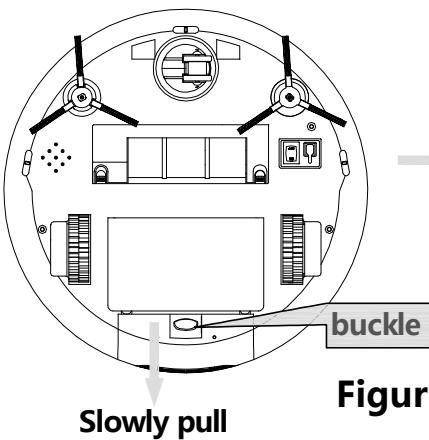


Figure (14)

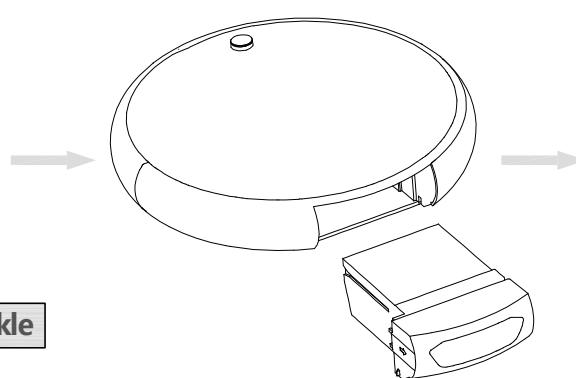


Figure (15)

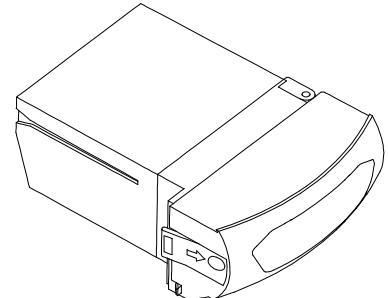


Figure (16)

7-1.4 Press the buckle on the side of the container box, open it with outward force.

As shown in figure(17)

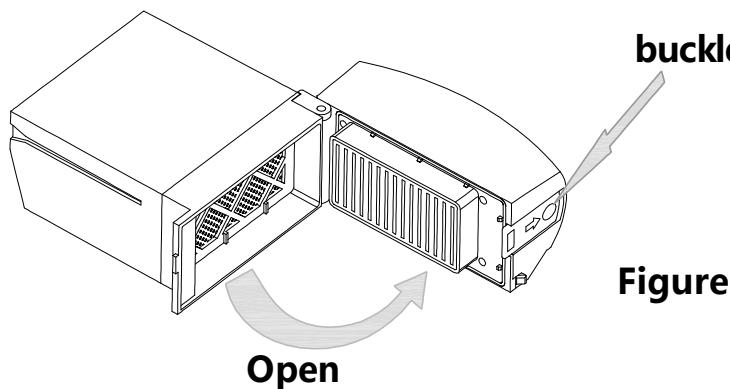


Figure (17)

7-1.5 Open the lid, sweep the container with the brush. As shown in figure(17) . then, taking out the trash, As shown in figure(18) .

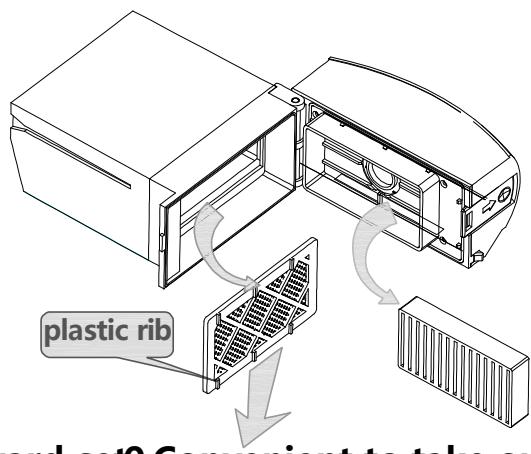


figure (17)

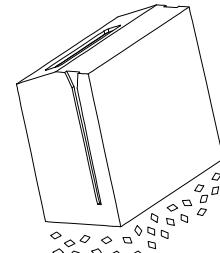


Figure (18)

**Outward set Convenient to take out**

## 7.2. Primary filter

Take out the Primary-filter from the container box, and clean it with a Hairdryer or cleaning usually. As shown in figure(19)

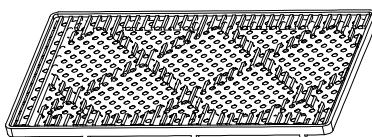


Figure (19)

## 7-3. HEPA filter

Take out the HEPA-filter from the container box, and clean it with a Hairdryer or cleaning usually. (oftenly, It's need to be replaced three months later). As shown in figure(20).

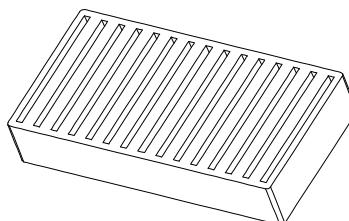


Figure (20)

### Attention:




Don't forget to put the Primary-filter 、HEPA-filter into the container box again after you clean up all of them. otherwise, build in motor's failure will occur to the container box.

**Tip:** The garbage will not be able to enter the dust box if not install dust container or nor intall at the right position.


## 7-4. Mop (optional)

7-4.1 Two kinds of mops <dry、wet> is contained by the cleaner. Not only can clean the stuff on the floor, more can effectively clean the hair and dirt from the rug.

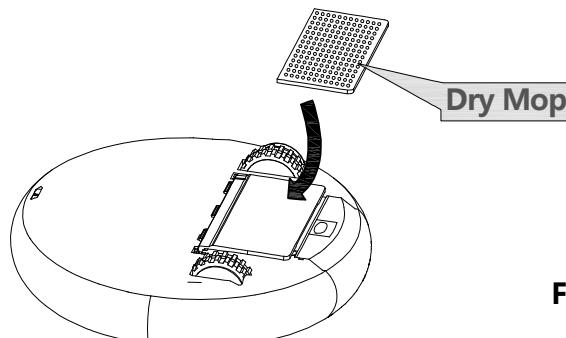

Figure(21)

7-4.2 The wet mop , with a capacity of 180 ml of water tank, ooze water through three holes on the bottom. It can timely supply water, keep the mop wetly, Deeply clean the ground .

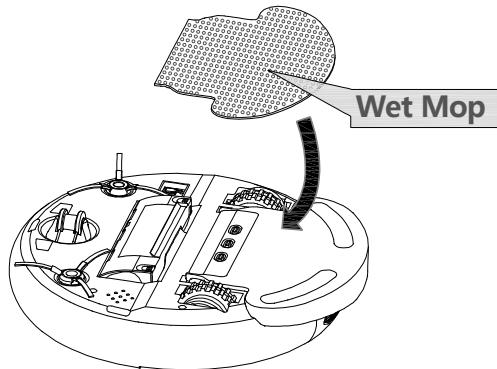

### Attention

- >>Do not use on the carpet!
- >>It's easily to be jams when mopping the floor, Clean up the mop in time is necessary.
- >>Please remove the water tank when you need to add water.
- >>After cleaning, please clean UP the mop timely
- >>Aviod leakage to the floor, don't forget to pour out the water in the tank.

Figure(22)

## 7-5 Middle Brush

7-5.1 Both hands push back the buttons on each side of the frame at the same time as shown in figure (20).

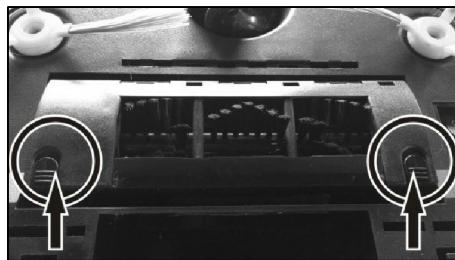


Figure , 20 -

7-5.2 And then pull up the frame as shown in figure(21) .



Figure , 21 -

7-5.3 Taken out the middle brush as shown in figure(22)

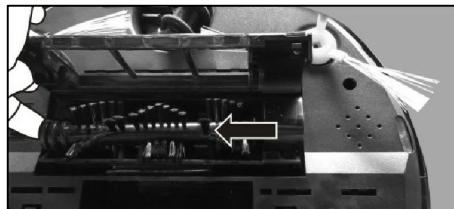


Figure , 22 -

7-5.4 Middle Brush Module.


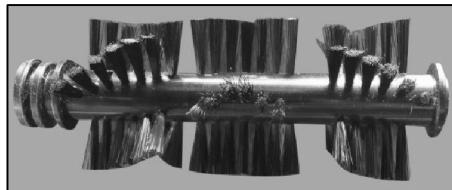



Figure , 23 -

7-5.5 Clean the rubbish with clean brush .At the same time, please use dry cloth to clean up middle brush is placed in the groove of bottom case. as shown in figure (24)

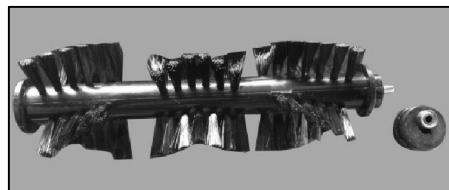


圆 , 24 -


## 8. Packing List

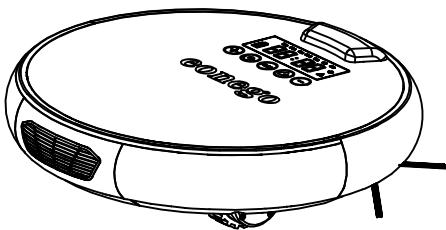


Robot Cleaner

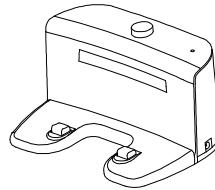


Charging Base

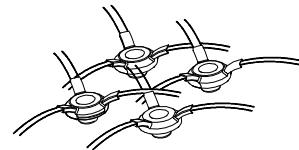


Side Brush

 


Cleaning Brush

 


HEPA Filter  
<A Primary filter Built-in>

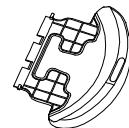


Water Tank  
<With a Wet Mop>

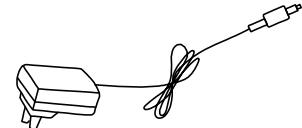


Adaptor

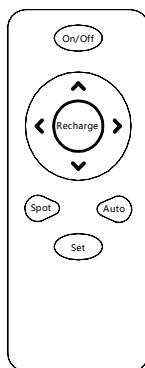


Remote Control

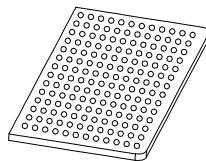

Dry Mop

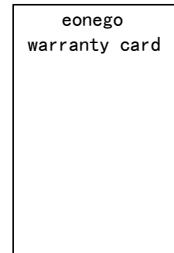

warranty card

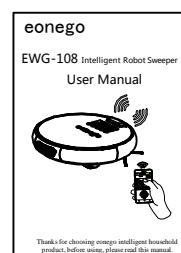

User Manual

## 9. Product Specification:

>>>Power: 24 w  
>>>Noise: < 60 db  
>>>Battery type: lithium-ion battery  
>>>Battery capacity: 2600 mah  
>>>Battery life: 800 times  
>>>Voltage: 14.8 V DC  
>>>Charging time for the first time: 4 H  
>>>Normal charging time: 2 -3H  
>>>Battery work time: 90 - 120 Minutes  
>>>Dust box capacity: 600 ml  
>>>Net weight: 3.3 kg  
>>>Dimension:34 cm diameter:  
>>>Thickness: 8.5 cm

Power Adapter Specification:  
Input voltage: AC 100 - 240 v  
Input current 0.8 A  
Input frequency: 50/60 hz  
Output voltage: DC 19 v  
Output current rating: 1.0 A

Note:  
The best distance tou use Remote Control  
is less than 5 meters.

## 10. Install、Replacing the Remote Control Battery

10.1. get the remote control out of the box, as picture (18)



10.2. Open the remote control battery door, as picture (19)



10.3. Put 2 batteries (battery model: AAA1.5 V) into the remote control, pay attention to the battery is negative direction, as shown in figure (20)



Note:

Processing of waste battery, please follow the local environmental protection regulations, throw it to the prescribed recovery site.

Please don't put the old and new, mixed type of different batteries. Long-term need not when, please take out the battery, in order to prevent battery leakage damage the remote controller

When installing the battery, be sure to pay attention to the battery is negative direction.

That the battery is not enough, please replace the battery in time.

For a long time not to use the remote control, please remove the battery, prevent the battery electrolyte leakage, lead to the remote control fault occurs.

Do not place the remote control in high temperature or humid place.

Do not use any foreign matter falling within the remote control, especially when replace the battery.

Please reasonable processing the product of old batteries. Batteries contain dangerous environment of harmful substances, please do not arbitrarily discarded.



1. Abandoned the Robot, must be taken out the battery.
2. When remove the Battery-cell, must turn off the switch.
3. Battery can not be stored in more than 45 degrees of high temperature environment or in the water.
4. Do not allow the exert force on the battery or falling from height.
5. Battery recycling must be conducted. It is forbidden to throw away, throw away person of the fire and explosion in case.
6. If the battery leakage, be careful not to let the fluid sticks to the skin or clothing, shall be immediately after wipe with dry cloth To the recycle bin or specify pits, do not arbitrarily discarded.
7. Rechargeable batteries are forbidden to use.

## 11. Failure Checking

### 11.1. The machine starts there is continuous back or turn left, turn right.

The solution: shut off the power switch of the machine. Check on the machine to check the sensor for dust or dirt make its produce error signals, please use dry cloth clean cotton detection sensor.

### 11.2. The machine in trouble

**Solution:** machine in cleaning the room, may be in trouble, this case, it will try to use various methods to get rid of trouble, once can't get rid of, please hand help machine out of the woods, and obstacles. Trouble may is as follows:

Wire winding machine is scattered on the ground;

Machines are drooping curtain cloth or the temples of carpet edge winding;

The front too many obstacles.

### 11.3. The machine can't perceive the stairs

**Solution:** the machine can sense height difference is greater than 8 cm of the vast number of stairs, but for part of the ground of the have head or smooth reflective strong ground, will reduce the performance of detecting head, at this point, the proposal at a lower level with a layer of no reflection characteristics of cloth or carpet, and pay attention. If not this case, can check whether too much dust on the machine to check the sensor, and wipe it clean.

### 11.4. The machine cleaning the dust absorption capacity reduction

**The solution:** shut off the power switch of the machine. Remove dust box, and according to the following steps:

Check whether have accumulated on the dust box filter cotton dust can not remove too much, see if need to change.

Check to make sure that no dirt in brush suction of blockage, remove the sweeping brush and clean up. Ensure no hair, filament winding on both ends of the side brush, after clean up the side brush back into the host.

Check the drive wheels place for winding dirt or object doesn't work.

### 11.5. The machine is working, the noise is very large

**The solution:** shut off the power switch of the machine. Remove dust box and clean up garbage, will be at the bottom of the machine up.

Observe the host whether suction mouth were choked up with rubbish.

**Check and clean up the brush. (including side brush) on both ends.**

**Put 2 batteries (battery model: AAA1.5 V) into the remote control, pay attention to the battery is negative direction, as shown in figure (20)**

## 11-6.Failure Code Display and How to solve

Failure Code	Failed parts	Failure Cause	How to solve
Er01	Cliff Sensors	At the edge of the cliff for the Robot, and can't cast off by itself.	Move the Robot to the flat Place.
		Cliff sensors is dirt.	Power OFF ! Clean the sensors on the bottom of the Robot.
Er02	Middle Brush	Entangled by others	Power OFF ! Clean the rubbish such as hair, thread wrapped on the brush.
		Middle Brush were installed in the wrong position	Power OFF ! Reinstall.
Er03	Low Battery	The Leakage because of long time no use of this Robot.	Manually use the Charging base or the power adapter to charge the Robot.
		Far away from the Charging base, and can't find it .	Manually use the Charging base or the power adapter to charge the Robot.
Er04	Wheel electric current beyond standard	The wheel is stucked by rubbish.	Power OFF ! Clean the rubbish.
Er05	Wheel float off	Robot has encountered big obstacles or steep slope, pit.	Move the Robot to the flat Place.

If according the above steps to clean up and then the fault still exists, please contact our company after-sales service department.

## 12. Other Questions

1. The normal full of electric power, the machine can work how long?

Answer: according to the condition of different ground, normal wooden floor, ceramic tile and leveling the ground about 90 minutes, undercoat carpet about 60 minutes (associated with the cleaning mode of setting).

2. The machine can work in the case of unattended?

A: yes, but before use, please the prophet will be my people know machine at work, prevent somebody to fall.

3. What built into the machine device, is used to help machines to cope with obstacles?

A: the machine built-in photosensitive element, can feel higher than 8 cm stairs, prevent machines down or run into obstacles will work back around.

4. The machine can clean the bottom of the home?

A: the machine is flat type design, in the normal cleaning the ground, can travel to the leg, the foot of the bed is higher than 10 centimeters lower part of the household cleaning, such as bed, cabinet, sofa, tea table, etc.

5. Rechargeable batteries can use how long?

A: the machine under normal use the built-in rechargeable battery can be recycled, at least 800 times.

6. Why not according to set good cleaning machine model work?

A: machine remaining battery is low, will automatically be transferred to "return to charge" mode, this mode

Need to have a recharge (optional).

7. How blunt once electricity can clean area (automatic mode)?

A: in general, a charge to clean about 100 ~ 120 m squared room, according to the room The complexity and garbage.

8. The machine run into obstacles?

A: under normal circumstances, after the machine run into obstacles will automatically return or find other walk path.

9. Why machine while working out the garbage?

Answer: (1). Please check whether the machine dust case waste too much, (if the amount of garbage dust accumulated on the ground is too much, the machine after a brief job even waste a lot of dust box, also won't alarm prompt) should be timely cleaning dust box.

(2). Please check whether the brush for a long time didn't clean, wrapped the above the accumulation of excess hair and dirt.

10. Why can't machine according to the appointment of time automatically start cleaning work?

A: to make an appointment clean set function is not enabled.

11. Why the remote control doesn't work?

Answer: (1). The effective control of the remote control range is 5 meters. Long distance remote control will not very sensitive.

(2). Please check whether the battery in the remote control is not enough, please replace the battery in time and make sure the battery installed.

(3). Make sure the machine power switch is open, if it is found that the power battery is low, please recharge machine first.

(4). With a clean cloth to wipe the remote infrared emitter and red on the machine Perimeter receiver.

(5). The host machine with recharge too close, or there is other near infrared signal at this time Equipment to make the remote control signal interference

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co - located for operating in conjunction with any other antenna or transmitter.

**Manufacture: Shenzhen EONEGO Intelligent Technology Co., LTD. DongGuan Branch**

**Address: Block S, DongXing Industrial Zone, KangLe RD, HengLi Town, DongGuan City GuangDong Province, China.**

**Service hotline: (+86)0769-88086016**