


REMOTE CONTROL

Instruction Manual

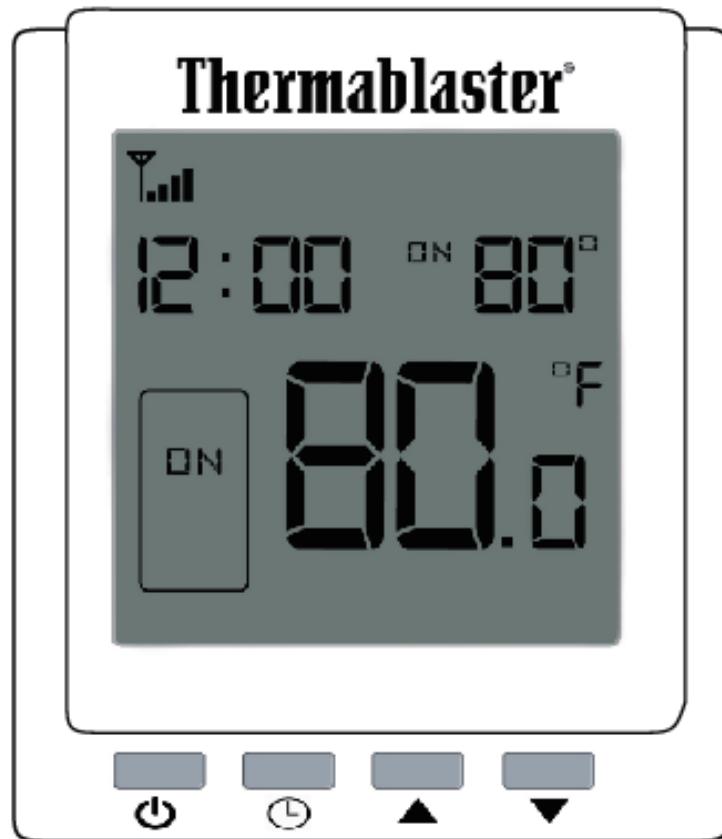


Model: CCA-1526T

Remote Control Operation

1. To synchronize the remote control and the gas log heater, keep the remote control on OFF setting (the screen will show OFF). Simultaneously depress Down(v) and Clock until the remote control shows "Cd" on the screen.
2. On the unit's front control panel, press down the Power Button to turn the unit ON, wait 10 seconds, then press down the Power Button again to power OFF. The screen will show OFF. Depress and hold the Burner ON and OFF buttons simultaneously until the screen shows "Cd"
3. Press Clock on the remote control. If the remote control and gas log control shows "Ed" simultaneously, they are synchronized.
4. Simultaneously depress Up(ʌ) and Down(v) on the remote control to exit the synchronization.
5. Now the remote control and gas log control are successfully synchronized.

Set to °C or °F:

- °C refers to Centigrade. °F refers to Fahrenheit
- Set the remote control to OFF (the screen will show OFF).
- Press Up(ʌ) and Down(v) simultaneously. When the temperature icon flashes, press Up(ʌ) or Down(v) to choose the temperature unit. The setting will be saved and exit automatically after a short time, or you can exit immediately by pressing Clock.
- Default setting: °F

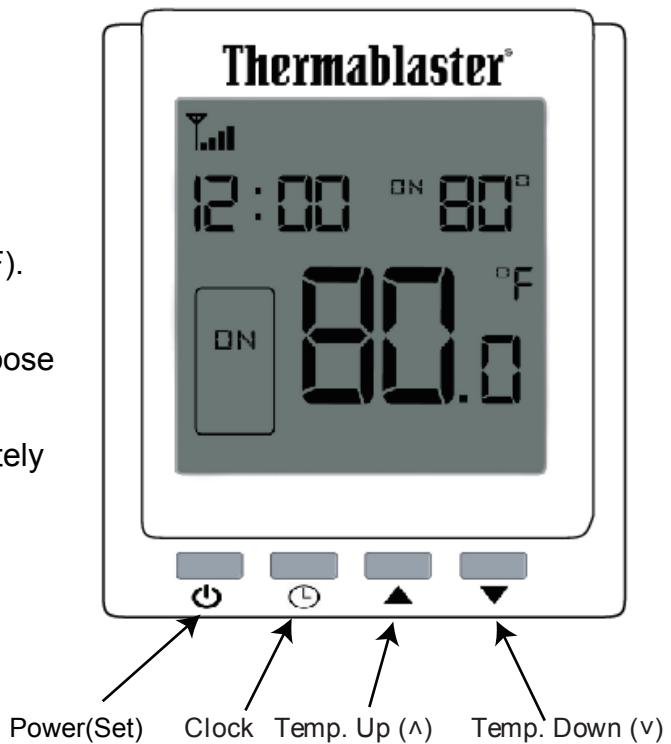

Remote Function

- **Power (Set):** Function allows you to only shut off the whole system when depressed
- **Clock:** Will set the time on the remote control
 1. Depress clock button until time is blinking.
 2. Use Up (ʌ) and Down (v) arrows to set time on the remote control
Note: When desired time is set, no further action is necessary
- **Up (ʌ) and Down (v):** These buttons will allow you to set the heat to your desired temperature. You can also turn on and off the main burner by adjusting temperature.
- **Remote control distance:** 10m (393.7in).

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement (within 20cm distance in actual use between the device and user) :

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. environment . End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.