Bluetooth speaker with Built-in Subwoofer

3D Surround Wireless All-in-one Soundbar

Warnings and Precautions

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

WARNING: To reduce the risk of fire or electric shock, do

AVERTISSEMENT: Pour réduire le risque d'incendie ou de

CAUTION: Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compl could void the user's authority to operate the equipment of the party responsible for complex could void the user's authority to operate the equipment of the party of the pa

WARNING: Do not place the unit on top of any soft, porous

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PRÉCAUTION: Danger d'explosion si les piles sont remplacée de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.

WARNING: The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or

WARNING: Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

WARNING: Shock bazard - Do Not Open

AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

AVERTISSEMENT: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.

CAUTION: Use of any controls or adjustments or performance of proedures other than those herein specified may result in hazardous radiation exposure.



WARNING: TO REDUCE THE RISK OF





Important Safety Instructions

- Keep these Instructions.
- Heed all Warnings.
- 4. Follow all instructions. Do not use this apparatus near water.
- 6 Clean only with a dry cloth
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- heat registers, stoves, or other apparatus (including amplofiers)that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience recepta and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the



Use only with a cart, stand, tripod, bracket, or table specified by the manufacture, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 13. Unplug this apparatus during lightning storms or when unused for long periods of time
- 14. Refer all servicing to qualified service personnel Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally,

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

FCC Warnings

Additional Warnings

qu'un vase, ne doit être placé sur l'obiet.

Caution marking is located at the rear or bottom of the apparatus. Attention marquage est situé sur le paneau arrière ou inférieur de l'unité.

The marking information is located at

the rear or bottom of apparatus

Le marquage est situé sur le paneau arrière ou inférieur de l'unité.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as

vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux

éclaboussures et aucun obiet ne contenant de liquide, tel

Battery shall not be exposed to excessive heat such as

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

 
- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference has one of smooth of following measurements.
- Digital volume control
 AC power input: requires an AC/DC power adapter 800mm length Built-in subwoofer Equivalent Output Power 110W six speaker power (included)
- Array including 80W subwoofers (Physical output power needed for a pair of speakers to reach same SPL . 3.5mm audio input Full-function remote

RCA cable Mounting template

Setup

Features

Plug the included AC/DC power adapter into the DC POWER INPUT on the sound bar and a standard AC power outlet.




Battery Handling Methods

1. Figure open the battery cover and remove the AAA batteries. 3. Finally, the battery cover.



 Wall-mount Hardware and



LED Indicator Light: Indicator Light Status Standby L/R Audio Earphone Optical/Coaxial Bluetooth USB

We recommend having this bar speaker professionally mounted.

discretion to extend the face of the bar speaker farther from the wall. These are typically used when mounting the bar speaker under a television, and the face of the bar speaker needs to be flush with the face of the television.

Input Jack and Button























- 2 L/R stereo input
- (3) LINE/Earphone input (4) DC 19V Power input
- (5) Optical digital input
- (6) Coaxial digital input
- (7) 1G-32G USB input

Display	Function	Display	Function	
POWER ()	Starting up or power off	SOURCE	L/R、Earphone、Opitcal、BT、 USB cycling switching	
VOL+ ◄ *)	Volume turning up	MUTE 🕊	Mute	
VOL- ■	Volume turning down			

Remote Control

Marker	Function	Marker	Function	
Standby്വ	Starting up or Power off	ВТ	Shifting into BT Mode	
MUTE	Mute or recover	D.IN OPTICAL	shifting into Optical	
VOL+ ◄»	Volume turning up	USB	shifting into USB	
VOL- ■	Volume turning down	H	USB Pause or Play	
×	USB Previous	Repeat 🔿	USB Repeat One or All songs	
H	USB Next	3D	3D Surround Open or closed	
LINE	Shifting into 3.5MM Line in	MODE	L/R、Line in、Optical、BT、 USB input shifting	
AUX	Left or Right Channel	EQ	13models equipment quanlity	
Treble+/-	up or down of the treble	Bass+/-	Up or down of bass	

Optical、Coaxial Input

- Prepare one Optical cable first Connect the output of device and optical input of the soundbar with the cable.
- 2. Press the standy button or start the soundbar by the remote control with the white light on or indictor
- 3. Repeat the sourcing button or press the opitcal on the remote control to shift it into
- opitcal mode, Orange indicator on or
- choose the raw SPDIF connection under the status of working
- 5, Your device can play music via the soundbar now.

Aux in

Prepare one RCA cable(Available from our accessories) 1. Connect the output of device and AUX input of the soundbar

- 2. Press the standby button or start the soundbar by the remote control with the white light on or indicator **AUH**
- 3. Repeat the sourcing button or press the L/R button to keep the white light on-going or show AUH
- 4. Ensure the audio sourcing in the status of aux working
- 5. Your device can play music via the soundbar now.

USB Optinal

Prepare one pcs U disk

- 1. Put the U dist into the USB interface
 2. Press the button Standby or start the soundbar
- by the remote control with the white light on or indicator AUH

 3. Repeat the sourcing button or press the USB button on the remote control to the USB mode, with the purple light on or indictor USA
- 4.Ensure Mp3 songs available in the U disk
- 6.USB play by remote control only. Pause/Play: , Pre/next: Repeat: Press once for One song Twice for All sor



LINE Input

- Prepare a 3.5MM speaker cable (Not in the accessories) 1.Connect the output of music device and the 3.5mm input of the soundbar
- 2.Press the standby button or start the soundbar by the remote control with the white light on or indictor PUH

 3, Repeat the sourcing button or press the LINE on the remote control L INE to shift it into Line mode, Green indicator on or display.
- 4.Ensure the audio sourcing in the status of aux working.
 5.Your device can play music via the soundbar now.

Bluetooth

Match bluetooth first time

- 1. Press the standby button or start the soundbar by the remote control with the
- white light on or indictor **PUH**2. Repeat the sourcing button or press the BT on the remote control to shift it into Line mode, blue indicator on or display **b**3. Open the bluetoot of your devic, find HD-SoundBar, match it.
- 4. Ensure it is matched successfully.
- S. Play music via the soundbar
 6. After the first successful match, it has memory of the device and automaticlly match next time 状态就可以自动连接。
- 7. If failed to match, cancel the match and retry with above steps.

Specifcations

Power ·····	 	19∨ ⊝-⊕-⊕
1.5" full range -	 	4ohm 5W
2" full range · · ·	 	8ohm10W
2.5"full range	 	8ohm15W
3" subwoofer -	 	4ohm25W
6.5"subwoofer	 	4ohm60W

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.