

1. After confirming product components, download the app.

Search Word : G CUBE, GCUBE, G-CUBE



For iOS, "App Store"



For Android Phones  
(Samsung, LG, Huawei, Xiaomi, etc.)

2. Run the app after activating Bluetooth.

Enter G-CUBE connection management, click "Find G-CUBE" and connect G-CUBE.

Connection  
completed :



Battery Indication : E1:47:39:B7:84:8C 60%

※ When G-Cube does not show up when connecting, use after charging G-CUBE.

3. Distance Sensor Alarm, Find My Phone, Take a Picture, USB Memory Security, Find G-CUBE operates when they are set to "ON."



#### Managing the Connection of G-CUBE

Use this application to manage the connection of G-CUBE



#### Out of Range Alarm

Your smartphone vibrates and sounds alarms when the item tagged with G-CUBE is out of range



#### Locating My Phone

Activating the ringtone through G-CUBE



#### Taking Self-Portraits

G-CUBE allows for taking self-portraits and photos



#### USB flash drive security

Secure USB flash drive



#### Locating G-CUBE

 
G-CUBE sounds an alarm when you activate GAGA Memory Locator



#### About G-CUBE Application

You can get the information on G-CUBE Application

#### G-CUBE Manual



1) For the Distance Sensor Alarm, you can select vibration/alarm sound. It stops when clicking on the notification bar.

The Distance Sensor Alarm works within 10 meters, but it can vary according to surrounding environments.

※ It is recommended to set the Distance Sensor Alarm to "ON" only when it needs to be used (Please set it to "OFF" at other times since it is strongly influenced by surrounding environments).

2) For Find My Phone, the alarm sounds when clicking G-CUBE for 3 seconds. The alarm

3) For Android clicking, you can use a Picture after installing the "Line Camera" app. For iPhone, when clicking "Take a picture," it switches to the camera. After running, you can take a picture by clicking the G-CUBE button (for more details, refer to "Resource" on the homepage).

4) For USB Memory Security, a password is automatically stored as "0000" (number 0) when clicking "ON." You can change the password by clicking "USB Memory Security."

\* If you connect to a notebook, a PC, etc. after turning "OFF" USB Memory Security, it does not ask for the password. For iPhone, it takes about 25 seconds when setting and cancelling the security. (iPhone program's characteristic) When entering a wrong password 4 times, you can only try it again after 5 minutes. (Please be careful since it will be completely locked if entering a wrong password 5 times.)

5) For Find G-CUBE, when you click the "Call" button, the alarm sounds on G-CUBE and when clicking it one more time, the alarm stops.

#### Cautions

- 1) When connecting G-CUBE with another IT product, connect by holding the C Type Slider. (It prevents the C Type Sider from being pushed back.)
- 2) Regarding using hours, you can use it for about 3 days after charging for an hour and a half. (6 days while on stand-by)
- 3) It is not waterproof so please protect it from getting wet.

www.linkgaga.com T +82\_70\_4288\_7702  
16, Dunchon-daero 466beon-gil, Jungwon-gu,  
Seongnam-si, Gyeonggi-do, Republic of Korea

## FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC Compliance Information :** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

