

Name: Madge(RX)
Size: 145*36mm
Material: PA,Silicone
Battery capacity: 180mAh
Noise: <40 dB

Waterproof

Name: Madge(TX)
Frequency:433.92MHz
Battery:DC 3V(CSR232)

- 1.Vibrating mode (8)
 - ◎Normal mode1-3
 - ◎Shake mode
 - ◎Joyous mode
 - ◎Passionate mode
 - ◎High-tide mode
 - ◎Moving mode

2.Product can be independently operate.

- ◎Click the button to turn on the toy, and the light on 8 vibration modes is changed by click the button press the button for 1.5 second to turn it off

3.Remote control

- ◎Turn on both the toy and remote control, and both lights on;
- ◎8 modes for your choice by click the button “ ”;
- ◎click the button on remote control and the light on, that's the stand by mode, press the button for 1.5 second to turn it off at any mode.

Wouking---light on

Low battery---Light flickers

Toy off---Light off

USB charged---Light Flickers

Charged fully---Light on

2.Use instructions

- ◎Please relax before use, and use with some lubrication for even better stimulation.
- ◎To ensure that you and your partner won't feel any discomfort, we advise to begin with a mode of quite gentle. You can find your favorite mode after some try.
- ◎Please switch it off after use, Pay attention to clean.

1. charging instructions

- ◎Please find the charging hole, and put DC connection slowly insert the recharging hole.
- ◎You can charge the toys with USB wire on computer or mobile plug
- ◎Please take out the DC connection after charging.

WARNING!

Proper maintenance and care may extend the product's service life. Before using the product, please read the following safety instruction carefully.

1. Please comply with the following before using the product:

- ◎ Clean the product completely: scrub it with an antibacterial soap and then wash with clean hot water, at last, wipe it gently with a towel or soft cloth.

2. During using the product

- ◎ No using massage oil or hand cream as lubricant.
- ◎ No using silicon-based lubricant, because it'll damage the organosilicone surface

SAFETY INFORMATION!

- ◎ This package contains small parts that may be hazardous to children.
Always store the product out of reach from children. The parts themselves or the many small parts they contain may cause choking if ingested.
- ◎ None of the components can be replaced or repaired by the user. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- ◎ Observe all signs and instructions that require an electrical device or RF device to be switched off in designated areas such as hospitals or aircrafts.

Reminder: Do not use any cleaning agent containing alcohol, gasoline or acetone to wipe the product. Avoid direct solar radiation and long-time exposure to the high-temperature environment. The product shall be stored in a clean and dry place without contact with other plastic products.

Maintenance of the built-in battery:

- ◎ This product uses rechargeable batteries, a new battery could play its full effectiveness after two or three charging and discharging processes.
- ◎ A battery can be charged or discharged for over 100 times and will go matured finally. After being charged fully, the battery shall be disconnected with the charger, or overcharge may reduce the battery life.
- ◎ When the product is idle, the electric quantity of fully charged battery will decrease gradually.
- ◎ If the product is placed in a too hot or cold place, it will reduce the battery capacity and shorten the battery life. If the battery is too hot or cold, the battery life will be also short even though it is charged fully.

Battery warning!

- ◎ Attention-when the battery is operated by mistake, it will fire or cause chemical burn. Explosion may happen when the battery is damaged.
- ◎ Recommended use the charger supplied for this product to charge the battery.
- ◎ The battery shall be disposed in accordance with the local laws and regulations.

If possible, please recycle it. Users shall not take out or replace the battery by themselves: otherwise, the risky operation may damage this product.

Charger Maintenance:

◎It is recommended not to use other adapters to charge the vibrator except for the supplied AC adapter. otherwise the vibrator may be damaged. therefore, it is very dangerous. meanwhile, the warranty will be invalid.

Attention: please read the user manual for the charging status light, some vibrators cannot be used while charging.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.