



# USER'S MANUAL

[WWW.PPGUN.COM](http://WWW.PPGUN.COM)


---

\*\*\*\*\*E-MANUAL\*\*\*\*\*




## ONE, Package List

### Upper Layer

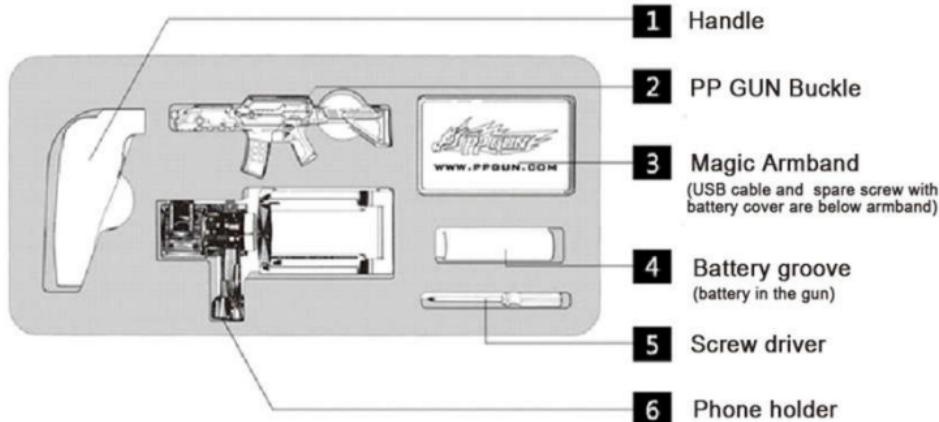


### Lower layer

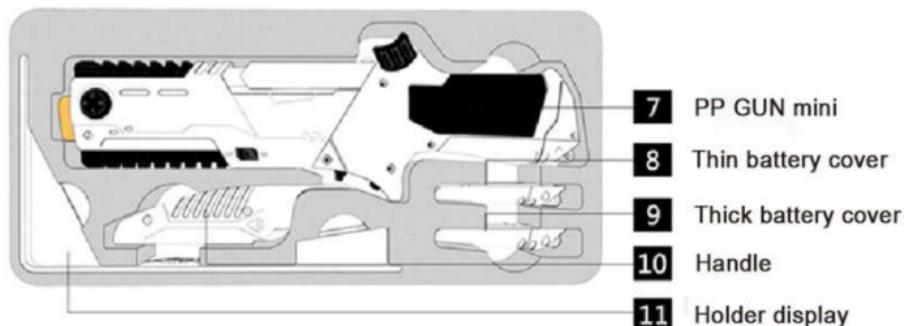


## TWO、Details

### Left side

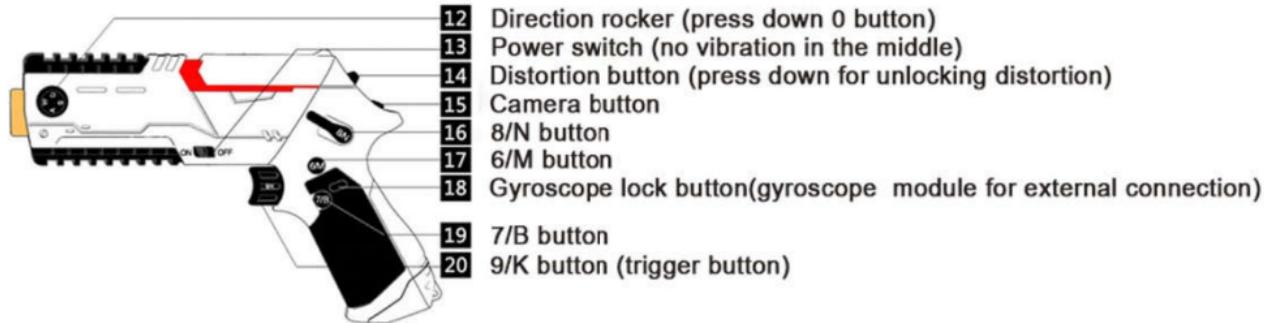


### Right Side

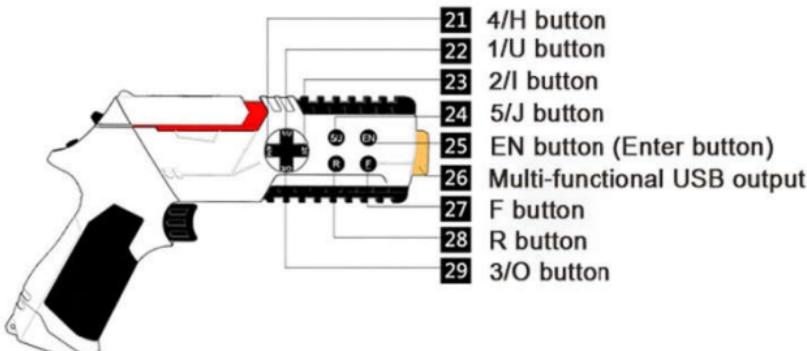


# THREE, installation Instruction

## (1) Body Rotation

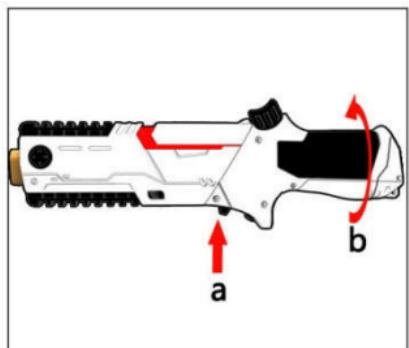

## (2) Turn it on

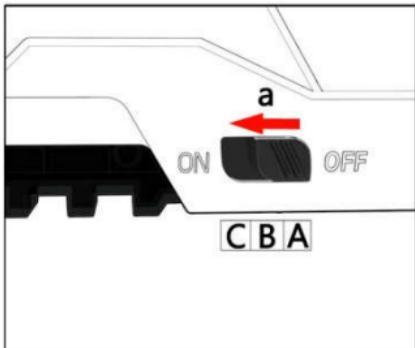

(a) Take out gamepad 7, press distortion button a and hold.


(b) Hold the front section and grip with your left and right hand separately And turn 180° anti-clockwise ( hold stay the gun front section)

(a) Turn the switch from "off" to "on"


(b) Three gears a/b/c, a for "turn off" , b for "turn on" and no vibration

C for "turn on" with vibration

## (3) Install the handgun handle

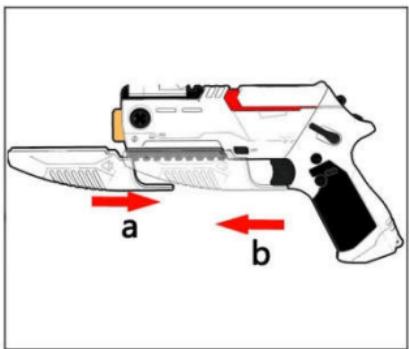

## (4) Install the gamepad handle

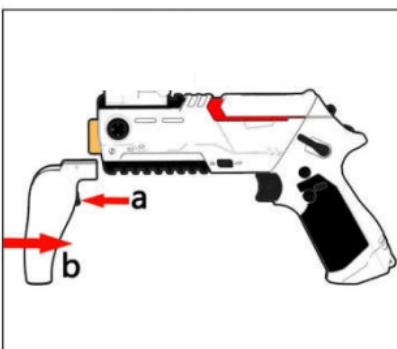

(a) Take out handle 10 and push it to the end of guide rail and fix it with gun slot.


(b) Push the handle with right hand when taking out.

(a) Take out the gamepad handle, press down handle to lock button


(press down this button when taking out.)

(b) Push the handle to the align marking scale on the guide rail and loosen the locked button.

## (5) Display holder installation

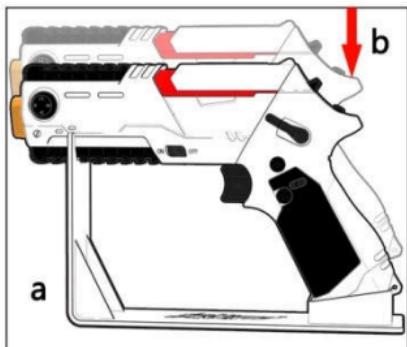

## (6) Extension rod

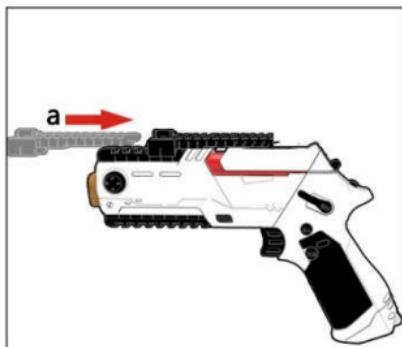


(a) Take out the holder11, place the base on the desk horizontally.

(b) Place the gun-shaped gamepad on the holder from top to button.

Make the buckle stuck in the slot on the base and charge from the button.



## (7) Take out / change battery

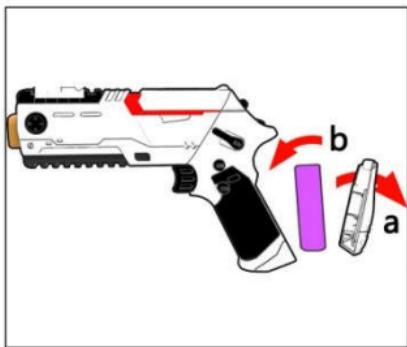

(a) With screw driver 5, screw off fixed screws on the battery cover

(b) Put / take out the battery(negative pole for spring), cover the battery and turn the screw.

## FOUR, FPS type handgun mode

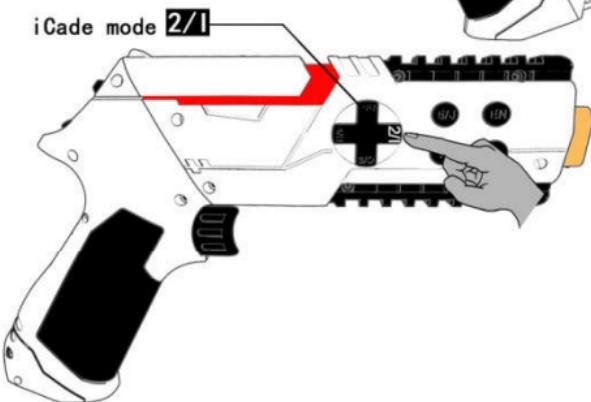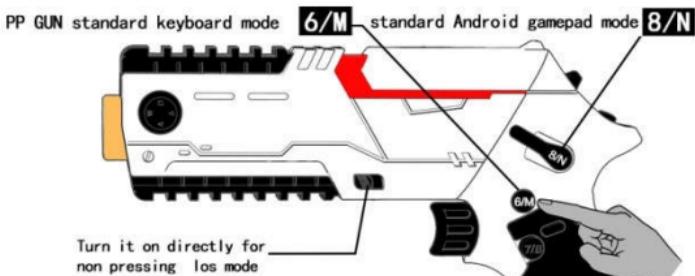


For example: Turn it on:8 / N + power switch

Control for long press "8 / N" + pull the switch key from "off" to "on" until LED turn to green light. Similarly, other boot modes are the same.

Mode	Ways of booting	LED color
Ios Mode	directly boot	Red
Standard Android gamepad mode	8 / N + Switch button	Green
PP GUN standard keyboard mode	6/M + Switch button	Blue
iCade mode	2/1 + Switch button	Orange

## FIVE、RPG/FTG Gamepad Mode Selection

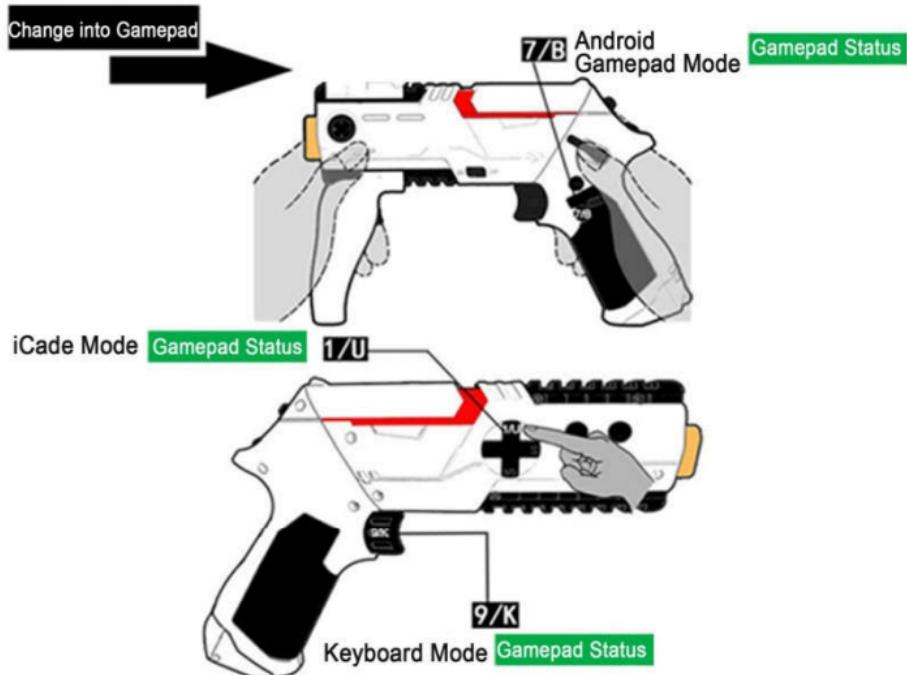

E.g. "7/B + Power Button" Start-up Mode

The operation is long press "7/B" + Switch Power Button to "ON" state, until LED light turn green. Other Start up Modes are in the same way.

Mode	Start-up Mode	LED Light Color
iOS Mode <span style="background-color: green; border: 1px solid black; padding: 2px;">Gamepad Status</span>	Power on directly	Red
Android Gamepad Mode <span style="background-color: green; border: 1px solid black; padding: 2px;">Gamepad Status</span>	7/B+Power Button	Light Green
Keyboard Mode <span style="background-color: green; border: 1px solid black; padding: 2px;">Gamepad Status</span>	9/K+Power Button	Pink
iCade Mode <span style="background-color: green; border: 1px solid black; padding: 2px;">Gamepad Status</span>	1/U+Power Button	Purple

## SIX. GUN Mode Select Table

	Mode 1	Mode 2	Mode 3	Mode 4
Mode Name	PP GUN iOS	iCade	Keyboard	Android Gamepad
System Support	iOS	iOS	Android iOS Windows	Android
When can you use this mode?	When Playing Games that supports PP GUN iOS Mode under iOS System	When Playing Games that supports iCade Mode under iOS System	When Playing Games that supports Keyboard Mode or simulating touch screen operation	When Playing Games that supports Gamepad Mode or gyroscope control
How to select this mode?	ON  OFF	 2/I + ON  OFF	 6/M + ON  OFF	 8/N + ON  OFF
LED Light Color	Red	Orange	Blue	Green
9/K Output Value of Text Output	9;	kp	K	No Output


Note: Mode Selection  + 

First press 6/M button and hold on in the shutdown status, then switch power on/off button to "ON", three seconds after switching to "ON" button, release 6/M button (Keyboard Mode Selection is OK). The selection way of other Modes/Gamepad Mode is in the same way.


## SEVEN. Difference Between GUN Mode and Gamepad Mode

- Rocker direction keys value are different under different mode

### Rocker State of GUN Mode

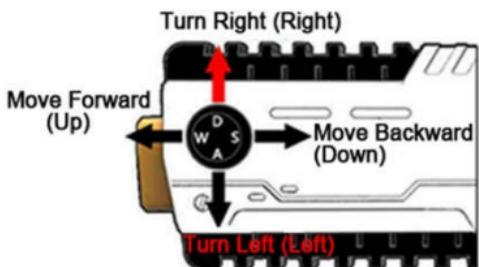

### Rocker State of Gamepad Mode

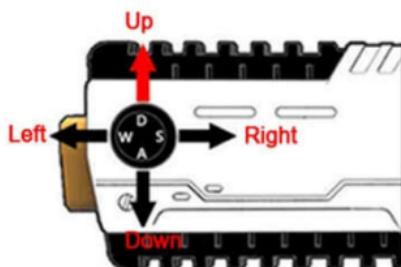

## 9. Connection Guide

### For Apple iOS Connection:

- By selecting the iOS/iCade Mode, PP GUN MINI can directly connect Bluetooth with Apple iOS system, and directly play iOS/iCade Mode games that cooperate with PP GUN MINI. The corresponding connection APP and Game List can be Downloaded in the official website;

- 1.Download iOS Games that cooperate with PP GUN MINI;
- 2.PP GUN MINI selects iOS/iCade Mode and Power on;
- 3.Bluetooth Connection between your phone and PP GUN MINI via the downloaded connection APP, and begin the game;
- 4.Download APP to see related connecton tutorial.



iOS Scan  
Download APP

Please use QQ/Browser to scan and download  
Wechat Scan will jump to browser and then download

- Before using PP GUN Keyboard Mode and connecting with iOS devices, the devices need iOS jailbreak, and please search the operation steps online yourself;


- 1.Jailbreak on iOS devices;
- 2.Open Cydia, add the PP GUN plug-in, Source address---<http://apt.so/9842033>;
- 3.Please login PPGUN official website---WWW.PPGUN.COM for more video and other information.

## Android System Connection:

- By selecting the "Standard Android Gamepad" Mode, PP GUN MINI can directly connect Bluetooth with Android system devices, and directly play games that support Android Gamepad Control;
  - 1.Download Games that support Standard Android Gamepad;
  - 2.PP GUN MINI selects iOS/iCade Mode and Power on;
  - 3.Bluetooth Connection between your phone and PP GUN MINI and begin the game (Some of the games need to select the gamepad control options);
- Before using PP GUN Keyboard Mode and connecting with Android devices, the devices need ROOT first, and please search the ROOT operation steps online yourself;
  - 1.ROOT operation on Android devices;
  - 2.Install "game keyboard" on your Android devices;
  - 3.Please login PPGUN official website---WWW.PPGUN.COM for more video and other information.

## 10. Charging Indictor

Low Power	Purple Light Flash
Charging	Purple Light breathing
Fully Charged	Purple Light on

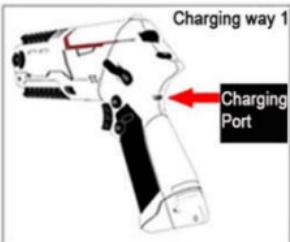

## 11. Matters need attention

- PP GUN MINI multifunctional USB Output can only charge low power (less than 1W) devices.
- Please use Regular brand power adapter for PP GUN MINI charging. Please stop using, if battery is over-heat or Battery ballooning.
- Do not disassemble, drop, rub, hit the battery and do not expose it in the water, fire or high temperature environment;
- Do not use wrong battery to replace original battery, avoid the danger of explosion.



**WWW.PPGUN.COM**

Manufacture: Shenzhen Simeng Technology Co., Ltd.

Address: Room B3015, Floor 3, #22, Guimiao Road,  
Nanshan District, Shenzhen City, China.

Website: [www.ppgun.com](http://www.ppgun.com)

Support: [support@ppgun.com](mailto:support@ppgun.com)

## Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications made to this device not expressly approved by Shenzhen SiMeng Technology Co.,Ltd. may void the FCC authorization to operate this device.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.