



Ink canister replacement

- 1 Detach the pick-up unit (2) by pressing two clamps (1).

* The drawing shows how to replace a 5-liter canister (3).

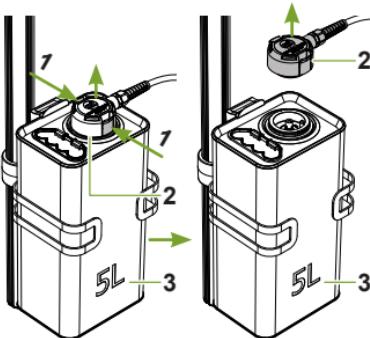

- 2 If the empty canister (3) is in the case (4), take it out. To do that:
 - release the latch (4a),
 - take the canister (3) out of the case (4)

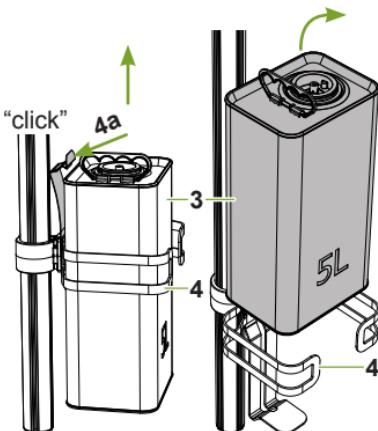

- 3 Prepare a new canister.




- 4 Put the canister (3) into the case (4) (if the printer is equipped with one) or put it onto a horizontal, stable base, e.g. the floor.




Ink canister replacement


5 If the 5-liter canister is put in case (4), press the container to latch (4a) so that the latch fixes on the top edge of the canister. Otherwise, ignore this step.

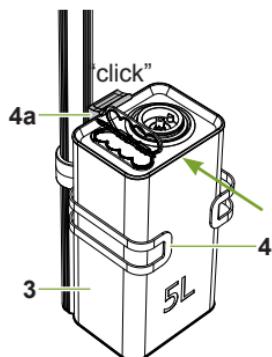

6 Remove the cap (6) from the new canister (3) by pulling the lug (5).

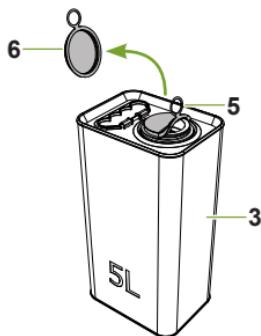


7 Attach the pick-up unit (2) to the new ink canister (3).

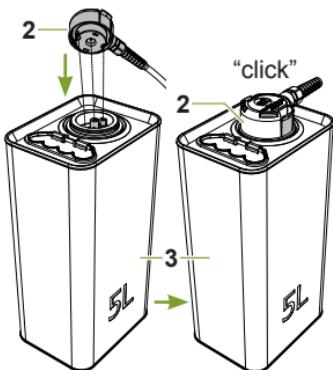


Troubleshooting

1

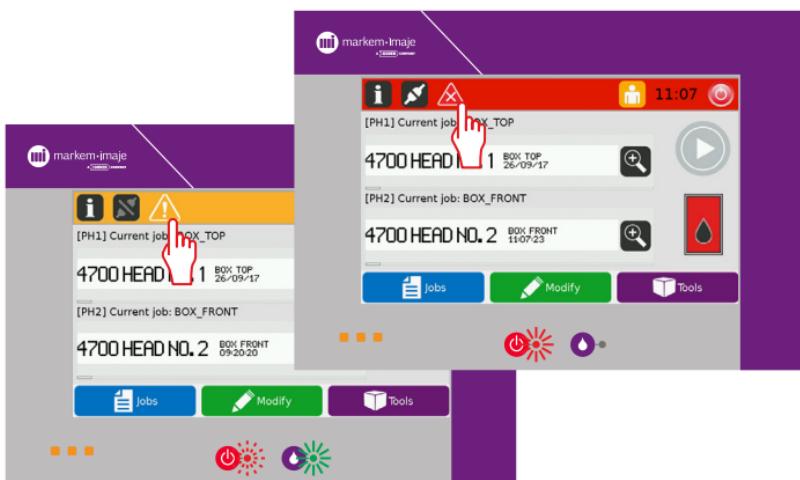

2

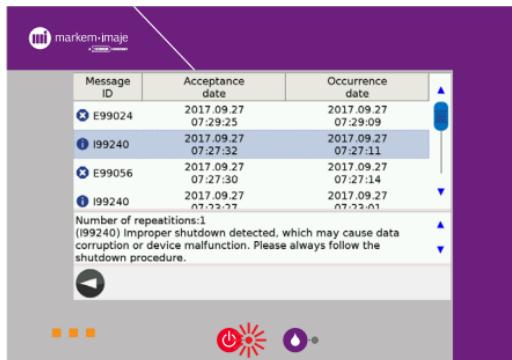

Example alarm message

Meaning

Ink level low.

Prepare a new ink canister.

No ink in ink system. Replace ink canister.

Replace ink canister.



For more information on troubleshooting, see the **4700** Printer User Manual.



Instruction manual



S/N: Serial number: _____

Ink _____



For Marking & Coding Equipment.

Photographs and drawings are not binding in detail. **Original manual.** This document was originally written in English. The English text of this document shall alone be authentic and shall prevail in the event of a dispute. Markem-Imaje reserves the right to modify the specifications of its products without prior notice. Any reproduction, even partial, of this document is prohibited.

© 2018 Markem-Imaje All Rights Reserved. English Version





markem-imaje

a  company

Redefine the possiblesm

User Documentation

Markem-Imaje Industries
9, rue Gaspard Monge
26500 BOURG-LES-VALENCE
France
tel +33 (0)4 75 75 55 00
www.markem-imaje.com

A53897-AA 04/2018 