

defunc | TRUE BASIC

TRUE WIRELESS EARBUDS FROM SWEDEN



TERRIFIC SOUND
SON PUissant
SONIDO POTENTE
STARKES KLANGBILD



SECURE FIT
MAINTIEN SECURISE
FIJACIÓN SEGURA
SICHERER HALT



GREAT PLAYTIME
AUTONOMIE
TIEMPO DE USO
SPIELZEIT

Defunc TRUE BASIC

WHAT'S INCLUDED

- Defunc TRUE BASIC earbuds
- Charging case
- USB-C charging cable

TECHNICAL SPECIFICATIONS

Bluetooth chip: AB5376A3

Bluetooth version: 5.0

Bluetooth range: 10 m

Codec: SBC

Playtime (with 80% volume): 2.5-3 h

Phone call time: ≈ 2 h

Standby time: ≈ 38 h

Charging time for earbuds: ≈ 1.5 h

Charging time for charging case: ≈ 2 h

Earbud recharges in charging case: 3-4 times

Charging means: USB-C

Earbud battery: 30 mAh

Charging case: 400 mAh

Frequency range: 2.4 GHz

Speaker dimension: φ13 mm ± 32 Ω ± 15 %

Speaker sensitivity: 105 ± 3 dB at 1 kHz/1mW/1CM

Power supply bin voltage: 5 V

Transmission frequency: 20 Hz-20 kHz

Rated power for earbuds: 0.6 mW

Rated power for charging case: 1.5 W

Frequency range: 2402-2480 MHz

Maximum output power: 6.97 dBm

Net weight: ≈ 45 g

BEFORE YOU START

Make sure the earbuds are fully charged. Do this by charging the earbuds in the charging case. Also plug the USB-C charging cable into the USB-C port on the charging case. Plug the other end of the cable into a power source.

POWER ON

There are two ways to turn the earbuds on:

1. Open the charging case and take out the earbuds for auto-power on after about 0.5 seconds.
2. Press each earbud for 3 seconds until you hear the on-sound.

POWER OFF

There are two ways to turn the earbuds off and one way they auto-power off:

1. Put the earbuds back in the charging case and close the cap.
2. Press either earbud for 5 seconds until you hear the off-sound or see the LED lights flash 2 times.
3. Auto-power off will be activated after 5-6 minutes without a connected device.

PAIRING WITH DEVICE

1. Take out the earbuds from the charging case.
The earbuds will automatically pair with each other.
2. Turn on the Bluetooth function on your device.
Select **Defunc TRUE BASIC** in the Bluetooth list to pair the earbuds with the device.

TOUCH CONTROL FUNCTIONS

Play/pause: Double-tap either earbud.

Next track: Press the right earbud for 2 seconds.

Previous track: Press the left earbud for 2 seconds.

Volume increase: Tap the right earbud once.

Volume decrease: Tap the left earbud once.

Answer/end phone call: Double-tap either earbud.

Reject call: Press either earbud for 2 seconds.

Voice assistant: Tap either earbud three times to activate/deactivate.

GENERAL TIPS

- Because of interference with other Bluetooth devices, the earbuds can get disconnected from each other. If you experience this problem, put the earbuds in the charging case and close the cap. After a few seconds, open the cap and start using the earbuds.
- Hold the earbud stem when putting or adjusting the earbuds in your ears. This way you avoid touching the touch area which controls different functions.
- The volume affects the capacity of the battery. If you play your music with lower volume, the battery life will last longer.
- Pause between each touch control command, e.g. wait 1 second between each volume control tap to further increase/decrease volume.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.