



# SPRITE

Smart Watering Controller

Quick start guide

 
## Contents



Controller



Instructions




24V Power Adapter



2 Screws


## Preparation

 - 1 Test the functionality of your irrigation system with your current controller before installing Sprite.
- 2 Unplug the power of your current controller.
- 3 Take a photo of the wiring in your old controller. When you are wiring Sprite, this photo can be the reference.
- 4 Remove your current controller.




## Installation

 - 1 Check the strength of the WiFi signal at the location where your Sprite will be installed. We recommend a signal of at least 2 bars on your phone.
- 2 Remove the front cover from the base.
- 3 Install the Sprite base to the wall using the two screws included. Use the air bubble to position horizontally.




## Installation

- 4 Reconnect the wires to the terminals on the base.

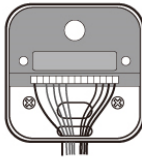


Tip: Use the picture of the wires on your old controller to help you remember.

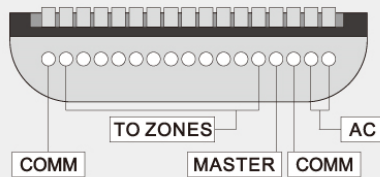

## Installation

 - 5 Put the front cover back on the base.
- 6 Plug in the power. After 30 seconds, the light will be blinking. If not, push the RST button.
- 7 The network of your Sprite will be in its HOST mode (you will see a WiFi network named "Netro\_IRC\_XXX").
- 8 Download the free Netro app and start to configure.



## Support

<http://www.netrohome.com/support>

## Limited Warranty

Netro Inc., Portland, Oregon USA, warrants to the owner of the enclosed product that the product contained in the box will be free from defects in materials and workmanship for a period of two(2) years from the date of delivery following the original retail purchase. If the Product fails to conform to this Limited Warranty during the Warranty Period, Netro Inc. will repair or replace any defective product or component.

## Return Policy

If you are the original purchaser of the product and you are not satisfied with this product for any reason, you may return it in its original condition within thirty(30) days of the original purchase and receive a full refund.

## Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Unigrav Tech may void the FCC authorization to operate this device.

The distance between user and products should be no less than 20cm

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.