

1:Name: Wireless Switch
Model: R241A
Size: 65*37*22mm
Battery capacity: DC 24~12V
Noise: <40 dB

Name: Remote Control
Model: 4B-B
Frequency:433.92MHz
Battery :DC 12V 27A
Vibration Resistance:126
Modulation: ASK



2.Product can be independently operate.

◎The output switch of the product is controlled by the remote controller.

3.Remote control

◎Turn on both the toy and remote control, and both lights on;

◎4 modes for your choice by click the button“ ”;

◎click the button on remote control and the light on, that the stand by mode, press the button for 1.5 second to turn it off at any mode.

2.Use instructions

◎Please use Wireless Switch before , and use right voltage.

◎Before using the remote control, please make sure that the receiver has already started working.

◎Please switch it off after use, Pay attention to off power.

SAFETY INFORMATION!

© This package contains small parts that may be hazardous to children. Always store the product out of reach from children. The parts themselves or the many small parts they contain may cause choking if ingested.

© None of the components can be replaced or repaired by the product. If any parts of your product require replacement for any reason. Including normal wear and tear or breakage, contact your dealer.

© Observe all signs and instructions that requires an electrical device or RF emitting product to be switched off in designated areas such as hospitals or aircrafts.

Reminder: Do not use any cleaning agent containing alcohol, gasoline or acetone to wipe the product. Avoid direct solar radiation and long-time exposure to the high-temperature environment. The product shall be stored in a clean and dry place without contact with other plastic products.

Maintenance of the built-in battery:

© When the product is idle, the electric quantity of fully charged battery will decrease gradually.

© If the product is placed in a too hot or cold place, it will reduce the battery capacity and shorten the battery life. If the battery is too hot or cold, the battery life will be also short even though it is charged fully.

Battery warning!

© Attention-when the battery is operated by mistake, it will fire or cause chemical burn.

Explosion may happen when the battery is damaged.

© The battery shall be disposed in accordance with the local laws and regulations.

If possible, please recycle it. Users shall not take out or replace the battery by themselves: otherwise, the risky operation may damage this product.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.