


Instruction Manual




Electronic Base

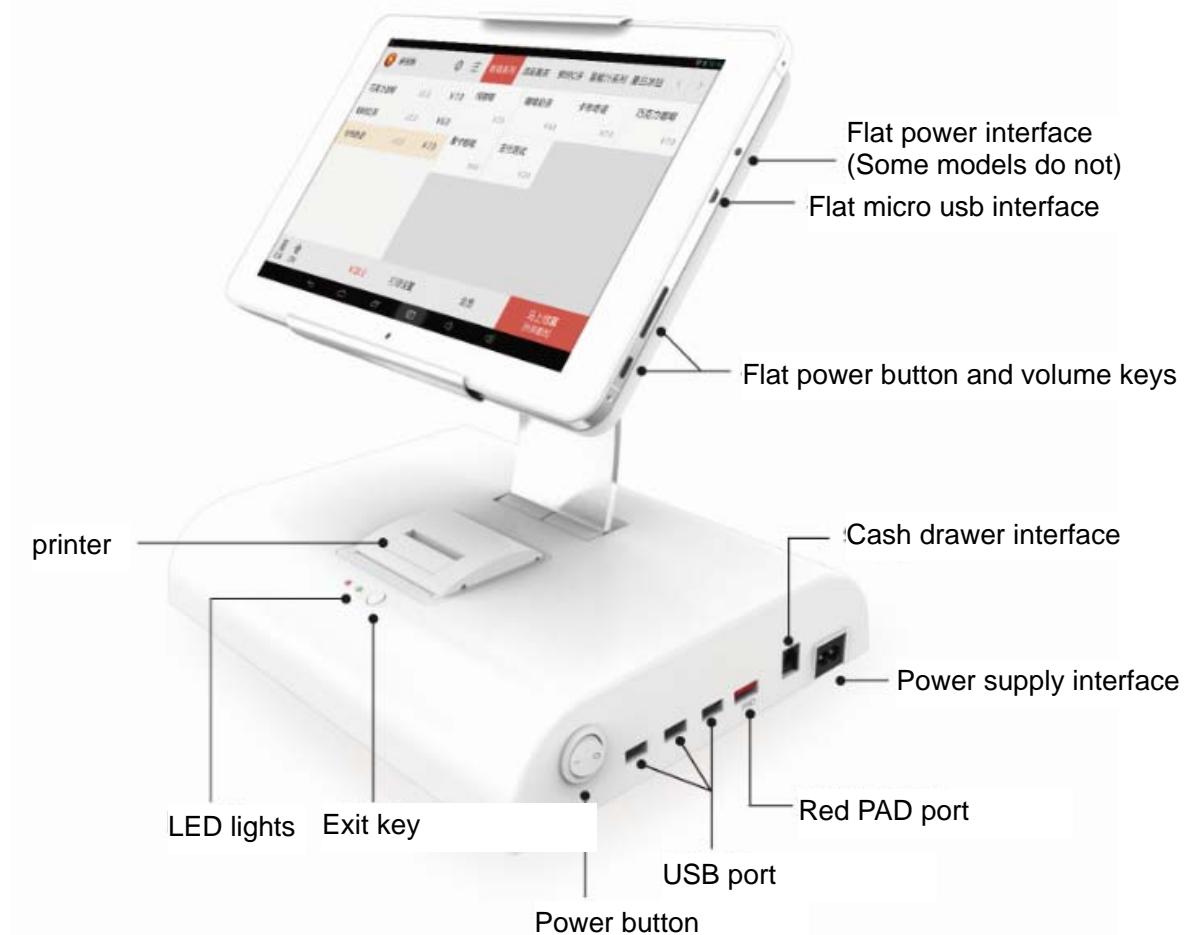

(Figure 1)


OTG Line

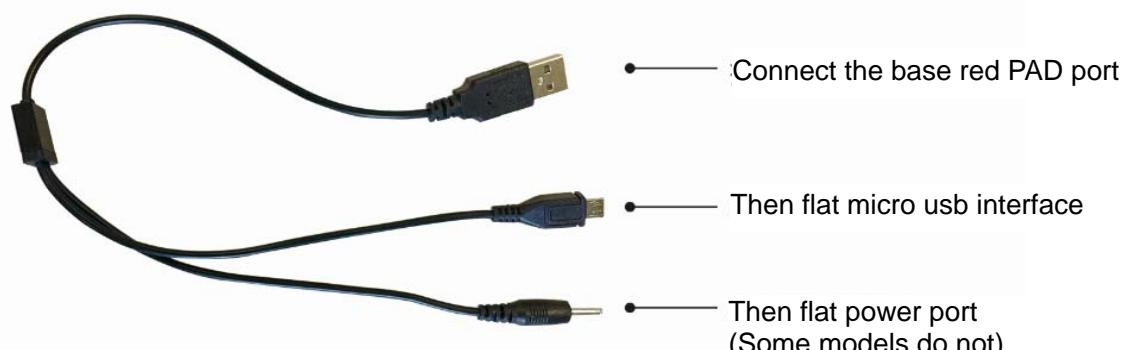

(Figure 2)

Steps

- 1、Open the cash register box, seize the neck can be put forward to the whole machine.
- 2、Remove the electronic base, flat panel, OTG line and base power line (the position of the power line and OTG line on both sides of the packing bubble as shown in figure 3).
- 3、As shown in Figure 4, lift the base of the clip above the base, the flat-panel camera down from the right into the push.

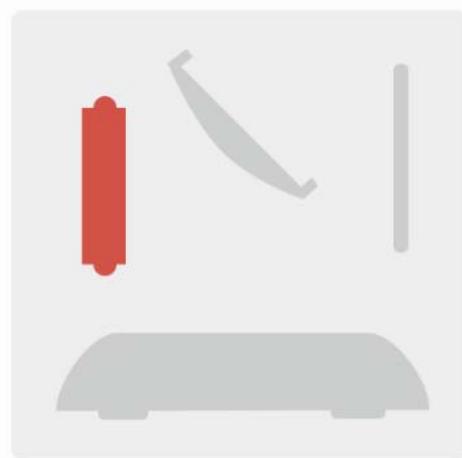

(Figure 3)



(Figure 4)

- 4、As shown in Figure 5, with the OTG cable connection base (red PAD port) and flat (flat power plug port will have a shot feedback).
- 5、The power cord into the base, and turn on the power.
- 6、As shown in Figure 6, forced to open the printer paper slot, the small paper into the paper, cover the lid.



(Figure 5)




(Figure 6)

- 7、The tablet placed in the boot state (long press the power button), open the base switch, the printer in front of the LED lights, if the green light, on behalf of the normal work; red light flashes that no small paper.
- 8、Open to the money fast software, you can use the successful login.
- 9、The connection principle:
 - 1) Bt connection: In the settings - BT open, reclaim the Bluetooth device has boot, click the Bluetooth device name, enter the match password (0000), the match is successful. In the APP can use Bluetooth devices.

Step 1: Go to SETTING



Step 2: Click Bluetooth

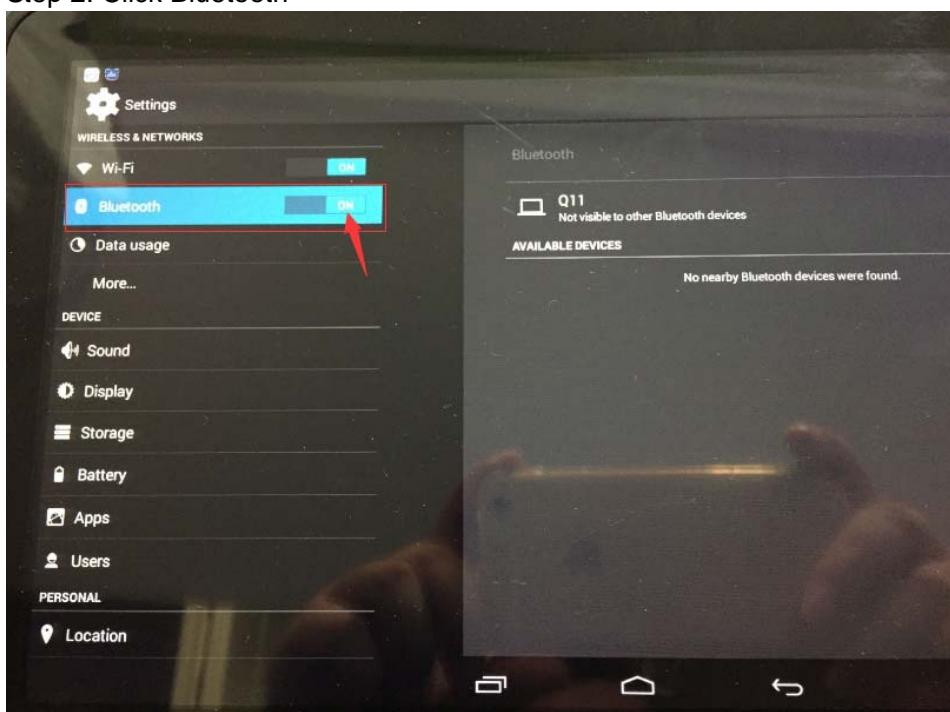


Step 3: Turn on the Bluetooth switch, then click on your Bluetooth device


Step 4: It will show as below when connect successfully.

2) WIFI connection: In the set --- WIFI open, search the wireless network name, click on the desired WIFI name, enter the login password can be connected to a network communication (APP login) or Internet service.

Step 1: Go to SETTING

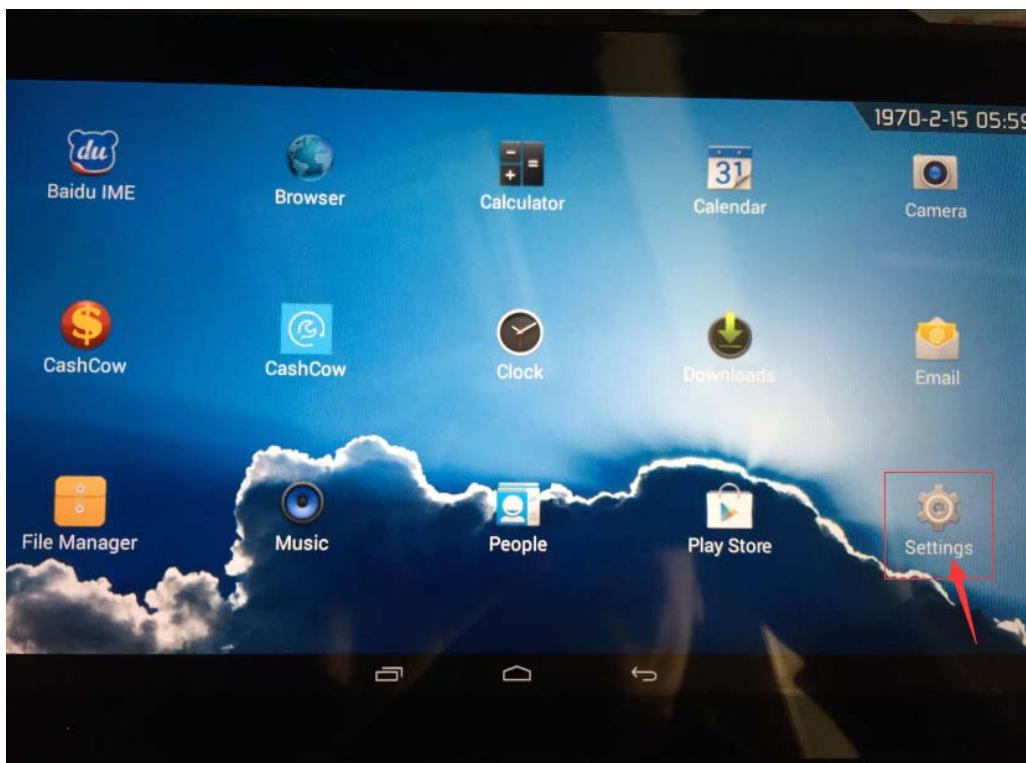


Step 2: Click "WIFI"

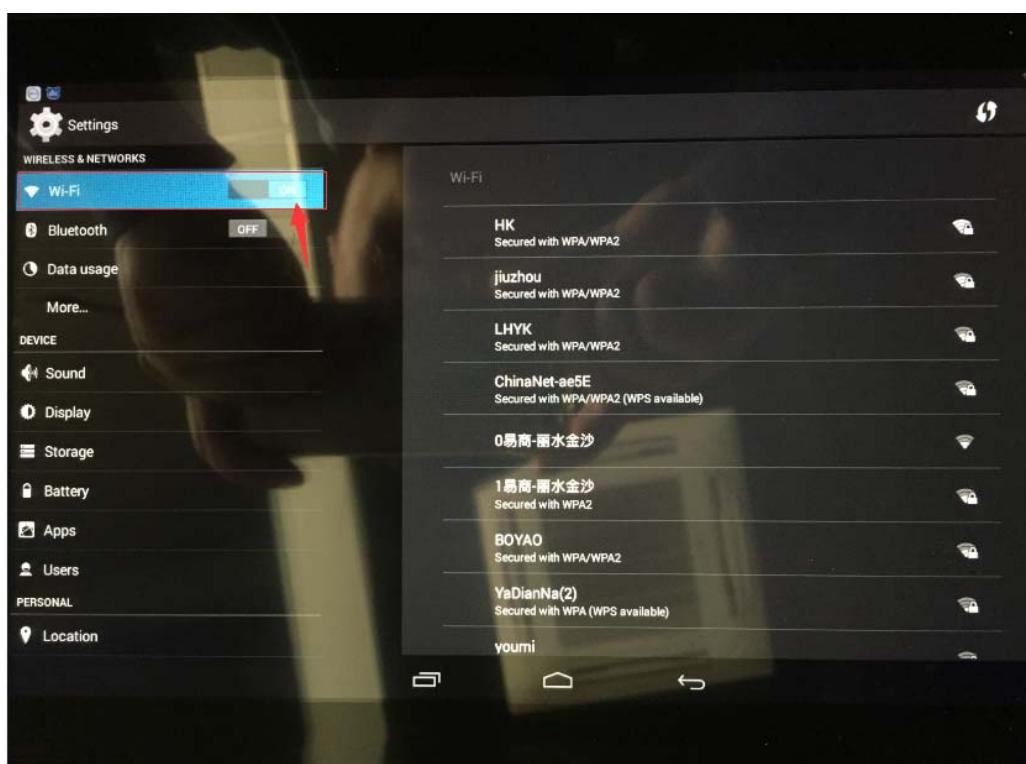

Step 3: Turn on the wifi switch, then click on the user name that you are likely to connect



Step 4: Enter the Password, then click Connect

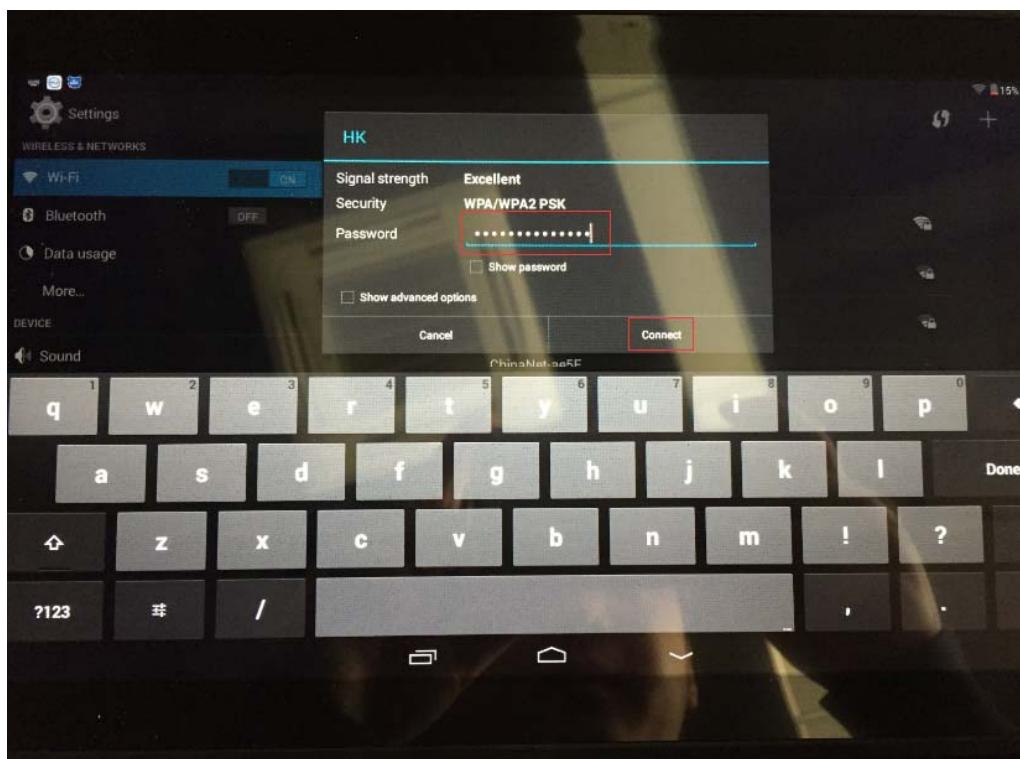

Milk Tea Set / Cooking Package

1. When you need to work together more than one printer, you can through the electronic base on the left side of the three USB ports to connect an external printer.
2. The external label printer: software can be directly identified within the access can be used.
3. External small ticket printer: the software default is a small ticket printer, such as the need to change the kitchen printer, you need to open the software - login - print settings - find the corresponding printer, change the printer in the way.
4. The external network printer: the software does not make the choice, the user needs to enter their own software - login - print settings - find the corresponding printer, change the printer in which the purpose.
5. External member card reader: reader access, the user must enter their own software - login - set - the printer - card reader, click to use.
6. Tip: All external equipment recommended from our official Taobao shop to buy, to ensure the normal use.

Precautions :

1. Do not place the unit in direct sunlight or near heat dissipation objects.
2. Please put the machine in the level of stability, avoid vibration.
3. Please check the use of the power supply voltage, the working range of AC90V-250V 50Hz.
4. If not use the machine for a long time, unplug the power plug.
5. Do not touch the power cord with wet hands. Can not suffer from water droplets or water splashing, when a liquid flow into the cash register, the power must be immediately to avoid short circuit.
6. Cleaning the machine should be unplug the power cord, do not use organic solvents or volatile detergent scrub, wipe with a dry cloth.
7. Are not allowed to disassemble, so as to avoid high-voltage shock and damage the machine, if faulty, please contact us, otherwise the warranty period can not be free warranty.
8. The base of the OTG output of 9V, not to their mobile phones and tablet charging, resulting in accidents are not responsible.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.