


Bottom of the EUT

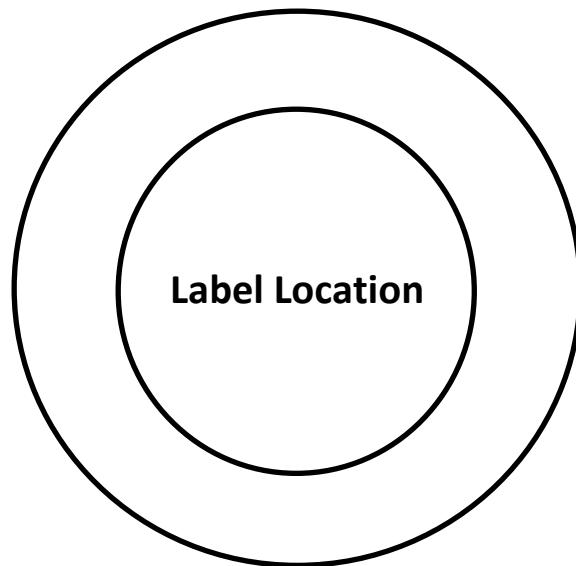

Label is located in the battery compartment and is visible to the users when they install the battery.