



PRODUCT USER MANUAL

Precautions before Use

1. This product is suitable for use in non-tropic areas below 2,000 meters, and the mark in the nameplate indicates the product is suitable for use in non-tropic areas.
2. Prevent the Tablet PC from falling to the ground or being strongly impacted otherwise.
3. Do not use it in the long term in any environment where the air is too cold, too hot (<35°C), too humid or with too much dust. Do not expose the Tablet PC to sunlight.
4. Avoid using it in the strong magnetic and strong static environment as much as possible.
5. Once any water or other liquid splashes onto the Tablet PC, close it immediately and do not use it until it dries out.
6. Do not clean the Tablet PC with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
8. Please back up your important material at any time to avoid loss.
9. Please do not disassemble the Tablet PC by yourself; otherwise you will lose the right to warranty.
10. This product supports the overwhelming majority of mainstream brands of 3G DONGLE network cards. The cases for 3G Dongle may be different. It is suggested that you test it to make sure it is OK before buying it.
11. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.



SHENZHEN ALDOCUBE TECHNOLOGY AND SCIENCE CO.,LTD
en.51cube.com



Caution:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: [1] This device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

"iWork10 Ultimate" Technical data

Processor (CPU):	Intel Atom x5-Z8350 1.44GHz
Operating system:	Windows 10
RAM:	4GB
Storage capacity :	64GB
Graphics unit (GPU):	Gen8-LP10/12EU up to 600MHz
Display size:	10.1"
Aspect ratio:	16 : 10
Screen resolution:	1920 x 1200 pixel
Camera:	2.0 Megapixel / 2.0 Megapixel
Interfaces:	Charging Port: 5V 2A, Micro USB USB Port: Micro 5PIN USB/Micro USB3.0 Earphone Port: 3.5MM
Supported memory cards:	Up to 128GB
Dimensions (B x H x T):	262*165.4*9.3 mm
Weight:	615 g
Battery:	3.7V 7500mAh
Battery charged via:	Micro-USB 2.0 socket
WiFi frequencies:	802.11n/b/g
Operating Temperature	-5° ~ 40° C

Refer to the detailed operating instructions for technical specifications on the power adapter.

The battery in this product cannot be easily replaced by users themselves.

Saving energy

- Deactivate the WiFi function when it is not in use.
- Only leave the power adapter connected to the socket until the Tablet battery is fully charged. In addition, always disconnect the power adapter from the Tablet when you are not charging the tablet.
- Reduce the display brightness in the unit settings.
- Switch to standby mode when the Tablet is not in use. To do so, press [but do not hold down] the on/off switch. To reactivate the Tablet, briefly press the on/off switch again and unlock the screen.

Package contents

- Tablet PC
- USB 3.0 host adapter cable (Micro-USB / USB-A (socket))
- USB 2.0 cable (Micro-USB / USB-A)
- USB power adapter (100 V - 240 V)
- User Manual

Remove all components from the packaging and remove the packaging material, including the protective film. Check to ensure that the delivery is complete.

If you find that there are missing or damaged components, contact customer service immediately.

Quick guide

Charging the iWork10 ultimate

Please charge your iWork10 ultimate fully before using it for the first time.

- a Connect the USB 2.0 plug on the supplied USB 2.0 cable to the power adapter and the Micro-USB plug of the cable to the Tablet.
- b Then plug the power adapter into a socket.

The charging LED blinks red while charging. When the battery is fully charged, the charging LED shines red continuously.

Preparing the Tablet for operation

- a Press the on/off switch for about 2-3 seconds to switch the Tablet on.
- b Then follow the instructions in the startup wizard to set up your Tablet.

During the startup, the wizard prompts you to register for your Microsoft account. If you do not yet have a Microsoft account, please set one up here.

c After completion of the startup, your Tablet is configured. This may take several minutes to complete. Do not turn the Tablet off during this time!

Unlocking the display

As soon as the device has been set up (and every time it is subsequently switched on and booted up), the lock screen appears. Drag the lock screen upwards with your fingertip to unlock the screen.

If your Tablet is password-protected, you must then enter the password.

Start menu



To display the start menu, tap the Windows icon in the bottom-left of the display or press the Windows button on the keyboard. Tap or press the icon a second time to hide the Start menu. In addition to the straightforward navigation bar [A] found in the classic Start menu of older Windows versions, this Start menu has a useful App field [B] to the right of the navigation bar. Here you can add and organize apps and favorites in the form of live tiles.

There is an alphabetically ordered list of all the apps installed underneath the navigation bar [A]. To access this, drag the navigation bar upwards or tap "All apps" in the bottom-left of the navigation bar.

The Info Center

The Info Center is a bar with quick links to some important Tablet functions, which you can either display or hide. To access the Info Center, swipe your finger from the right edge of the screen towards the center or tap the memo symbol in the bottom right-hand corner.

Enabling WiFi

- a Select "All settings" in the "Info Center".
- b Tap "Network & Internet" in the settings menu.
- c Tap "Wi-Fi" on the left in the next screen.
- d Move the slider for WiFi from "Off" to "On".
- e Tap the network that you wish to connect to.
- f Enter the network key (password) if necessary.
- g Now tap "Connect". The SurfTab connects to the selected network.

Reset

If your iWork10 ultimate "freezes" and no longer responds, you can restart it. Press and hold down the on/off switch for at least 10 seconds until the device switches off. Wait for about 20 seconds and then turn the device on normally.

Switching off the iWork10 ultimate

- a Open the Start menu by tapping the Windows icon in the bottom left of the display or by pressing the Windows key on the keyboard.
- b Tap "Power" in the bottom area of the Start menu and then tap "Shut down". The Tablet shuts down.

Controls & Ports

