


Eddie Bauer Portable Wireless Speaker User Manual

Please read this instruction manual carefully and keep it for future reference.

Product Overview:

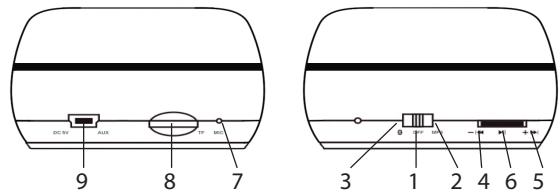

1. Specifications:

- USB charging voltage: DC 5V.
- Rechargeable Lithium battery included.
- Operating distance: < 10M.
- Frequency: 150Hz – 18KHz.
- Sensitivity: 95db ± 2db.
- Output: 4Ω, 3W.
- 3.5mm USB and Mini USB charging cables included.

2. Control Buttons:

1. OFF: To power off the speaker.
2. Bluetooth Mode
3. External Sound Mode
4. \leftarrow : Previous track / Volume down.
5. \rightarrow : Next track / Volume up.
6. $\blacktriangleright\text{II}$: Play / Pause / Call button (To Pick up / Hang up / Dial the last outgoing phone call).
7. MIC: Serves as microphone during hands-free call.
8. Micro SD Card slot: Insert Micro SD card to play the music on the card.
9. Mini USB port: To connect with Mini USB cable to charge.

3. Functions:

Power On / Off:

Switch button to "Bluetooth" position to activate the wireless function, switch button to "OFF" position to power off the speaker. Switch button to MP3 position to activate TF (Micro SD) card functions.

Volume Up / Down:

Hold the button to adjust the volume to the desired level.

Bluetooth Pairing:

Before using the wireless speaker, you must pair it with a Bluetooth enabled device.

1. When the speaker is powered on, it will enter Bluetooth mode, the Blue LED light will flash quickly.
2. From the Bluetooth menu of your device, search for new devices and select "Eddie Bauer" to pair with your device.
3. Once they are paired successfully, you will hear a confirmation sound.
4. If the speaker is turned off, the device and the speaker will need to be reconnected.

Calls:

When there is an incoming call, press the call button $\blacktriangleright\text{II}$ to pick up / hang up the phone call. Press the Call button to redial the last outgoing phone number.

Play Music by Micro SD Card:

When ON/OFF Button at "MP3" position, insert a micro SD card into the micro SD card slot the speaker will automatically switch to play the music from the micro SD card. Press "Play / Pause" button $\blacktriangleright\text{II}$ for 3 seconds to switch mode.

Charging:

Plug Mini USB cable into Mini USB port and connect USB cable to computer / AC adapter to charge the speaker.

4. Troubleshooting:

Fault	Solutions
Unable to pair up with other devices.	<ol style="list-style-type: none">1. Check whether the speaker is still in the process of search or switch it off and on again.2. There may be too many Bluetooth devices in the proximity that cause difficulty in connection. Please turn them off.
The sounds is rather low or distorted	<ol style="list-style-type: none">1. Check the Bluetooth device's volume and then adjust it to an appropriate level.2. Recharge the battery.
The music stops from time to time.	<ol style="list-style-type: none">1. Check whether the speaker's effective transmission range is exceeded or if there is an obstacle standing between the speaker and other Bluetooth devices.
The Bluetooth indicator remains off.	<ol style="list-style-type: none">1. The battery power may too low. Recharge the battery.2. Turn device off and on again.

5. Safety Instructions / Precautions:

1. Do not expose this product to the rain or damp conditions, or extreme temperature conditions.
2. Prevent this product from falling that could result in serious damage.
3. Do not dismantle, repair or modify this product by yourself.
4. In order to avoid any risk, do not dispose of this product inappropriately or toss it into the fire as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal object into this device, as there is a risk of causing a short circuit in the unit.

FCC Statement:

This equipment has been tested and found to comply with the limits for Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.

 This symbol both in the product and its user manual indicates that at the end of the device's electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling.
For more information, contact your local authorities.



MADE IN CHINA

Responsible Party Information as follows:

Company Name ^②	SCOTT RESOURCES ^②
Address ^②	1070 MARINA VILLAGE PARKWAY, STE 203, ALAMEDA, California 94501, United States ^②
Telephone	+510 523 6000 ^②