

DRYEASY™ Plus Wireless Bedwetting Alarm Instructions

A. Test the transmitter and receiver:

(The transmitter and receiver have been set to the same channel when ex-factory. They are ready to use without having to pair.)

1. If there are insulation tags on the transmitter and receiver, remove them before use.
2. Test the alarm by touching the sensor tip (metal prong) with a wet finger. Press the "Reset" button to stop the alarm from sounding.
3. If the alarm doesn't sound, please check the channel of the transmitter and receiver to see if they are the same (Please see section E. Channel selection).




B. To adjust volume level, select operation mode and sound:

1. Open the battery compartment door and press "+" or "-" key for volume adjustment (4 levels).
2. Slide the switch inside the battery compartment for change of operation mode from "sound only" to "sound and vibration" and "vibration only".
3. To select a desired sound, choose a sound group (A or B) by sliding the sound group selection switch and then choose a sound (1, 2 or 3) from the sound selection switch (6 sounds available for selection: A1, A2, A3, B1, B2 & B3).
4. To play the sounds at random, slide the sound group selection switch to R.

C. To attach the transmitter and the sensor:

1. Attach the transmitter to the underpants by following the steps set out below:
 - Lift up the lever
 - Place the waist of the underpants into the mouth of the clip
 - Lock the clip by pressing down the lever
2. Attach the sensor to the outside of close-fitting underpants in the following manner:

(Tip: Pull down the underpants slightly for easy fixing of sensor)

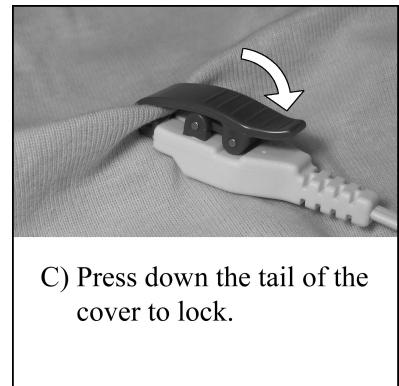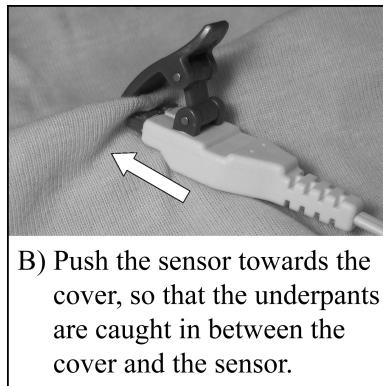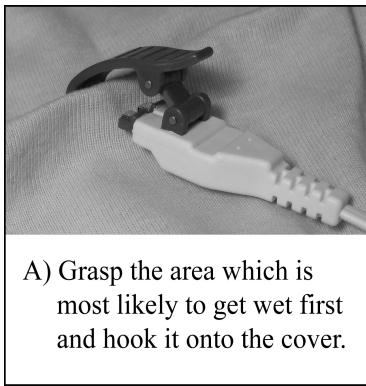

Important: The sensor should be attached with the cover facing up (as shown below)



(Note: To detach the sensor from the underpants, simply lift up the tail of the cover)

D. To stop the receiver from sounding when bedwetting occurs:

1. Press the "Reset" button on the receiver.
2. Remove the wet material from the sensor. If the sensor keeps attaching the wet underpants, the receiver will alarm again after 2 minutes.

E. Channel selection:

1. The transmitter and receiver have been set to the same channel when ex-factory. They are ready to use without having to pair. If there is interference from other wireless device, you can change the channel. There are 16 channels for you to choose.
2. To change the channel, remove the back of the transmitter using paperclip or slotted screw driver, twist to open the lock (see figure below). Change the setting on the channel switch in any of the 16 combinations. Replace the back of the transmitter.
3. Open the battery compartment of the receiver, change the channel to match the transmitter.
4. Make sure the ON/OFF switch on the receiver is "ON" position.



F. Low battery indicator

When the batteries are exhausted, the LED will flash 3 times every 10 seconds.

G. Changing the batteries for the Transmitter

The transmitter consumes very little power so the batteries are very long-lasting. In case you need to replace the batteries, just open the back of the transmitter with paperclip or slotted screw driver (see figure above).

H. Power by adaptor

The receiver can be powered by 2 AA batteries or any smart phone adaptor (with output voltage: 5Vdc ; current: 0.5A or above). To use an adaptor (not included), connect the receiver and the adaptor with the USB cord provided.

I. Cleaning

1. Transmitter and Receiver: Use a dry cloth to wipe the surface. Do Not immerse in water.
2. Sensor: Use a damp cloth to wipe the sensor tip and let it dry naturally.

(Note: The sensor should be cleaned regularly so as to maintain its sensitivity.)

J. Useful tips

1. You are recommended to have a trial run of all steps for use of the alarm during day time with your child before the first time use.
2. Rapid response to the alarm alert can enhance the success rate in overcoming bedwetting. Parents play an important role, in particular at the initial stage, in awakening a sleeping child for urination and are therefore recommended to sleep in the same room with the child for the first 2 weeks of using the alarm.
3. Keep using the alarm for 2 more weeks after dryness so as to lower the chance of relapse.

K. One-year warranty

We offer you a one-year warranty for manufacturer's defects. For details, please visit our website or contact us by email.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.