

Manual

Model: DE380

Product Name: DryEasy Pro Wireless Bedwetting Alarm

Caution

1. This product is NOT intended to be used for children under 5 years of age and should be used under adult supervision.
2. Please read the instruction manual carefully before use.
3. In case of doubt, please consult your doctor.


Before using the alarm

1. Please charge the transmitter and receiver with the USB cable provided.
2. The light will turn to green when charging and turn off when fully charged.



A. To test the alarm

1. Open the switch cover at the back of the receiver.
2. Turn on the power.
3. Touch the two metal prongs on the transmitter with a wet finger or wet cloth. If the alarm goes off, it is working.
4. To stop the alarm, press and hold the “Reset” key for 3 seconds (a beep and vibration will be heard when the alarm is reset).

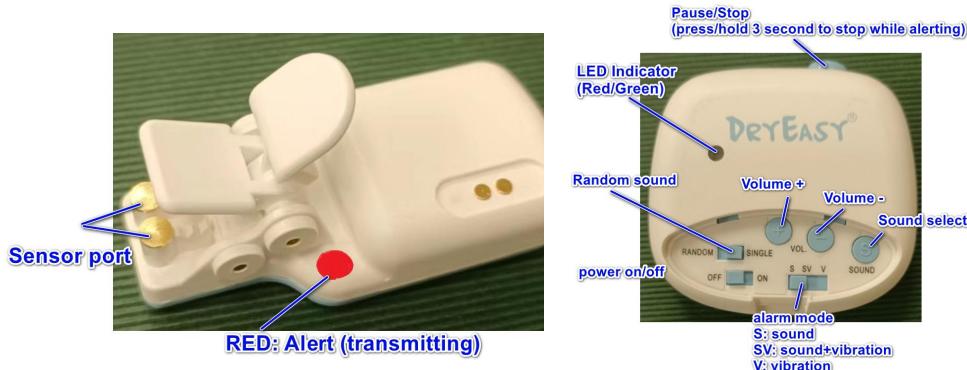

B. To adjust the volume and select operation mode / sound:

1. Activate the alarm by wetting the metal probe on the transmitter.
2. Change the setting to your desired one on the receiver.
3. Press and hold the “Reset” key for 3 seconds to stop sounding.
4. Close the switch cover and make sure the cover fits well onto the receiver.

C. To attach the transmitter to the underpants

1. Open the clip on the transmitter.
2. Clip the transmitter to the outside of the close-fitting underpants where it is most likely to get wet first.

D. To stop the alarm from sounding when bedwetting occurs

1. Press and hold the “Reset” key for 3 seconds (a beep and vibration will be heard when the alarm is reset).
2. Remove the wet material from the transmitter.

Note: If the user doesn't press the reset key, the alarm will go off consecutively with a pattern for 2 minutes and stop for one minutes until the reset key is pressed for 3 seconds.

E. To attach the receiver to the arm

1. The receiver can be placed on the bedside table or attach to the arm using the arm band and the bag provided.
2. Put the receiver into the bag and thread the strap through the back of the bag.
3. Thread the strap through the buckle to form a loop.
4. Slip onto the arm and tighten the strap until it is comfortable.

F. To charge the battery**For receiver**

1. If there is no beep or vibration when turning on the power or the red light flashes slowly, it indicates the battery has run out and needs to be charged.
2. The light will turn to green when charging and turn off when fully charged. The charging time is about 1~2 hours.
3. The battery can last for weeks, but it depends on the frequency of the alarms. It is suggested to charge the battery every day to ensure the alarm is in good condition for each use.

For transmitter

1. If the red light on the receiver is on steadily, it indicates the battery on the transmitter has run out and needs to be charged.
2. The light will turn to green when charging and turn off when fully charged. The charging time is about 1~2 hours.
3. Since the power consumption on the transmitter is very low, the battery can last for many months after fully charged.

G. Cleaning

For receiver

Use a dry cloth to wipe surface. The receiver is not waterproof. Please do not immerse the receiver in water.

For transmitter

Use a damp cloth to wipe the sensor tip and dry it with cloth. (Note: the sensor tip should be cleaned regularly so as to maintain sensitivity.)

H. One-year warranty

We offer a one-year warranty for manufacturer's defects. It does not cover misuse or abuse. For details, please visit our website or contact us by email.

Specification:

MODEL: DE380	Receiver	Transmitter
Rating Voltage	Li-ion 3.7V 250mAH	Li-ion 3.7V 55mAH
Rating Power	0.7W	0.1W
Charging Interface	Magnetic charging (cable attached)	Magnetic charging (cable attached)
Charging Time	2 Hrs	2 Hrs
RF Frequency	433.92 MHz	433.92 MHz
Charger (not included)	5V 0.5A	5V 0.5A
Color	White and light blue	White and light blue
Size	52 x 49 x 17 mm	54 x 25 x 26 mm
Weight	28 g	12 g
Low Altitude Use	For use at altitude 2000m or lower or the equivalent	

FCC Warnings

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The device has been evaluated to meet general RF exposure requirement. The device can be used with minimum distance 0mm between the radiator and your body.