

Please read the Instruction Manual carefully before using this product

A/ZONE

Front speaker on/off

B/ZONE

Rear speaker on/off

BAND

Radio receiving: Short press to switch the radio band.

Long press to automatically search and store.

Under playing Short press is TV system transformation. status: Long press is audio/picture/video conversion.

12 MOD

Switch between Radio/USB/SD/Disc/AUX IN.

13 VOLUME

- Rotate the volume knob to adjust the volume.
- Short press to select the following functions and rotate the knob to adjust the parameters:

VOLUME	040
BASS	-7+7
TREB	-7+7
BAL	7L7R
SW	020
USA	USAEUROPE

- Long press the volume button for EQ
- Short press this button again to select the following functions and rotate the knob to adjust the parameters:

 
EQ	OFF-CLASS-POP-ROC-JASS
LOUD	ON-OFF
STEREO	STEREO-MONO
LOC	ON-OFF

Note: In radio mode, STEREO and LOC will display.

INSTALLATION


1.If the angle of the unit is greater than 60 degrees, this unit may not reach optimum


performance. (A)



- 1.Instrument board 2.Metal mantle After putting the mantle into the instrument board, bend the steel of the mantle and fix it onto instrument board. 3.Fastening bolt

 3. Front installation (C)

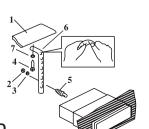



В

- 4. Rear Installation (D)
 - 1.Instrument board
 - 2.Nut
 - 3.Spring washer
 - 4.Bolt
 - 5.Fastening bolt
- 6.Fixed steel

In order to improve the anti-interference, please fix onto the under-frame of the car. Bend the steel if necessary.

.3.

CONTENTS

SAFETY INFORMATION	
PANEL FUNCTION	2
BLUETOOTH	4
NTERFACE	Ę
REMOTE CONTROLS	
MENU SETTING	7
NSTALLATION	8
JNLOAD THE UNIT	ć
ROUBLESHOOTING	ç
FECHNICAL DATA	1 (

SAFETY INFORMATION

1.WARNING:

To reduce the risk of short circuit and cause the fire, do not expose this product in the rain or moisture.

2.CAUTION:

This product is a professional laser product. Do not reform this product, otherwise it may cause dangerous radiation exposure. Do not open the convers and repair by yourself. Please contact with the qualified personnel.

Wave length of laser CD790±20mm 3.LASER PRODUCT DVD 655±15mm Laser power: no dangerous radiation, and with the safety protection.

4.DO NOT USE THE IRREGULAR DISC OR THE 8CM DISC. This product support following format: DVD/CD/HDCD/R/CD-RW/MP3/ WMA

.1.

4. Aligned the position of the construction member and the connector while put the panel on. (E) (F)

 




UNLOAD THE UNIT

- 1.Please remove the front panel before unload the unit. (G)
- 2. Take out the plastic frame after removing the front panel.
- 3.Insert the keys into the slots on both side until a locking sound is heard. (H) 4.Pull out the keys and the unit.







TROUBLESHOOTING

Before resorting to service, check the following troubleshooting guide. Ensure that all connections are correct and secure and that all operating procedures have been followed

PROBLEMS	CAUSES AND SOLUTION
No power	Check the fuse. Replace if necessary.
The display or the buttons do not work	Press the RESET button or take out the front panel and put it
Cannot receive radio	Check antenna connection.
Radio reception is poor	Check that the antenna is fully extended and that it is not broken. Extend or replace if necessary.
Dish unload	The dish already in the mechanism or the screw which use to fix the mechanism haven't take off.
Staccato	The dish is dirty or damage
Cannot read USB and SD card	The file format is not available / USB and SD card have been damaged.

Note:If you are unable to resolve the problem after checking this guide, please call the supplier or an authorised service centre. NEVER attempt to repair or service this unit yourself.

TECHNICAL DATA

The unit			
Power source	12V (10. 8-15. 1V) DC Negative pole earth		
Speaker	4-8Ω		
High power	Max output	25Wx4	
machines	Output rating	20Wx4	

FIVI	European frequency machines	America frequency machines
Frequency scope	87. 5MHz-108MHz	87. 5MHz-107. 9MHz
Sensitivity	≤ 26dB	≤ 26dB
AM European frequency machines		America frequency machines
E	E00KH 4000KH	F20KH- 4740KH-

AM	European frequency machines	America frequency machines
Frequency scope	522KHz-1620KHz	530KHz-1710KHz
Sensitivity	≤ 43dB	≤ 43dB

MP3	
Sensitivity	≥35dB
Frequency	(100HZ-10KHZ) ±6dB
Harmonic voltage distortion (1KHz)	≤ 5 %
Channel separation	≥ 35dB
Stereophonic reproduction channel balanci	ng ≤ 3dB

THE DISC		
SNR	65dB	
Resolution	65dB (1KHz)	
THD	0. 1%	
Channel	4	
Frequency response	5Hz-20000Hz	
TV model	PAL/NTSC	

Specification subject to change without notice

.10.

PANEL FUNCTION

1 也/POWER/PWR Switch on/off.

(9 /CLK / DISP)

- Short press to display time function.
- Long press to set the clock. Rotate the volume knob to select the time.

- Radio receiving: Short press to automatically tune to lower frequency radio.
- Long press to manually tune to lower frequency radio. Short press to play the previous song. • Under playing status: Long press to manually fast rewind.

- Radio receiving: Short press to automatically tune to higher frequency radio.
- Long press to manually tune to higher frequency radio. Short press to play the next song. Under playing status: Long press to manually fast forward.

1/▶Ⅱ

- Radio receiving: Short press for radio pre-stored in channel 1. Long press to store current radio channel.
- Under playing Short press for pause/ play function. status:

6 2/INT

- Radio receiving: Short press for radio pre-stored in channel 2.
- Long press to store current radio channel. Short press for browse play function. Each track is played Under playing status: for 10 seconds.

.2.

7 3/RPT

- Radio receiving: Short press for radio pre-stored in channel 3. Long press to store current radio channel.
- Under playing Short press for repeat play function. status:

8 4/RDM

- Radio receiving: Short press for radio pre-stored in channel 4.
- Long press to store current radio channel. Under playing Short press for random play function. status:

MENU SETTING

Press **SETUP** button, and select the item by the direction button, press **ENTER** to confirm. The sequence is as following:

 


1.STSTEM SETUP







3.AUDIO SETUP



 
4.VIDEO SETUP



 5.SPEAKER SETUP



 6.DIGITAL SETUP




14 Eject



15 Detachable panel button.


BLUETOOTH

 - 1. Open the machine and use the Bluetooth on your mobile phone to search for ,connect and enter "0000"
- 2.When Bluetooth is successfully paired will be displayed. Short press 1 to PLAY/PAUSE mobile phone music.
- Short press BAND to answer the phone and TRUHINS will be displayed.
- Short press MOD to hang up the phone.
- Short press **BAND** to switch between Bluetooth and mobile phone 3. Short press 2, enter the mode of calling record.
- Short press 3, check next calling record.



.7. .4.

INTERFACE

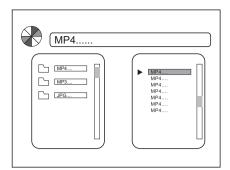

 Insert USB or SD card , if with more format file (MP4/MP3/WMA/JPG) , the panel will play all files automatically in order.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

REMOTE CONTROLS

- 1.power
- 2.mode
- 3.play/pause
- 4.mute
- 5.band
- 6.up/down/right/left/enter button
- 7.stop/backspace
- 8.automatic browse memory/repeat play
- 9.stereo,mono switch/program play
- 10.far and near switch/random play
- 11.pbc/answer the phone
- 12.lcd display/hang up the phone
- 13.digital button
- 14.subtitle button
- 15.title button
- 16.setup menu button
- 17.slow forwarding/slow rewind button
- 18.visual angle button
- 19.enlarge button/connect Bluetooth

- 15 16 17 7 18 8 19 20 21 9 10 22 12 13 24 0 25 3077
 - 20.volume up/down
 - 21.fast forwarding/fast rewind/ select stations and songs
 - 22.acoustic characteristic setting selection
 - 23.dialogue button/ switch between bluetooth and mobile phone
 - 24.play time setting/# button
 - 25.fast forword to 10 songs/ *button

Remark: Please take out the insulation paper between the battery and remote control